



4. Door setting


* Back/exit/delete
Confirm/enter/repeat voice

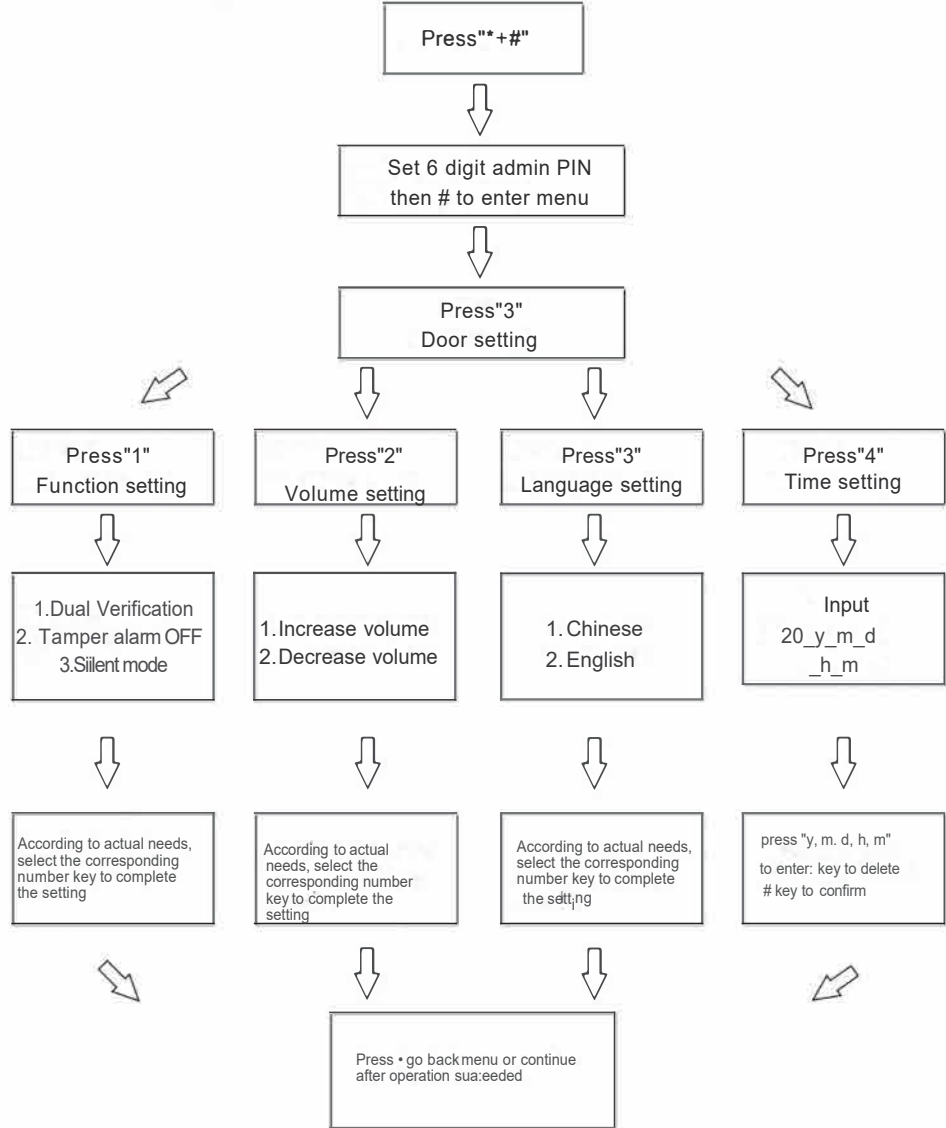


5. Add administrator

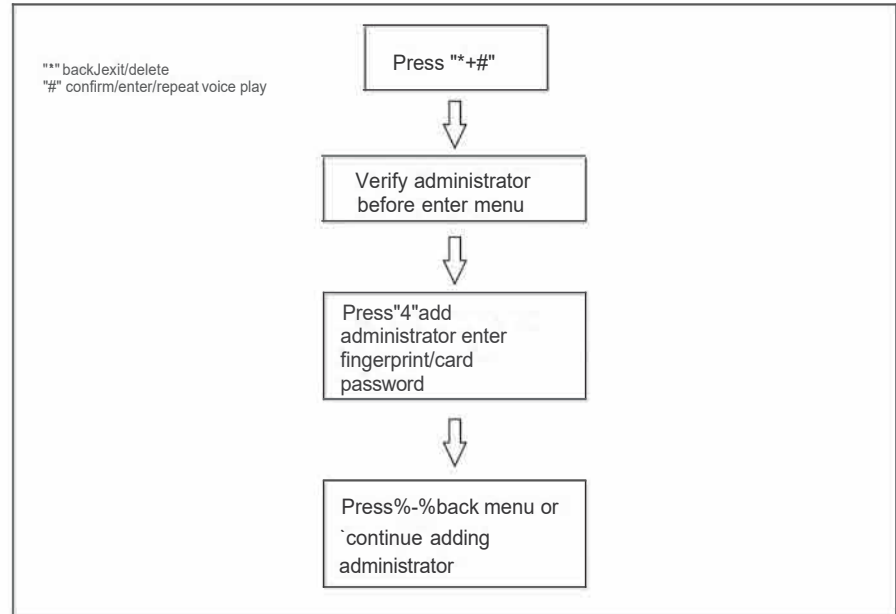


6. Network configuration:

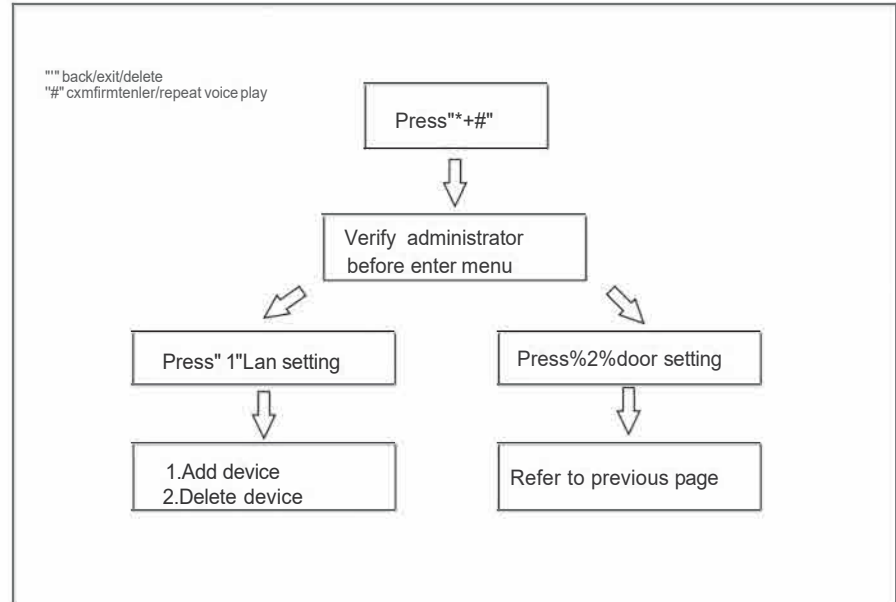

7. Debug Menu

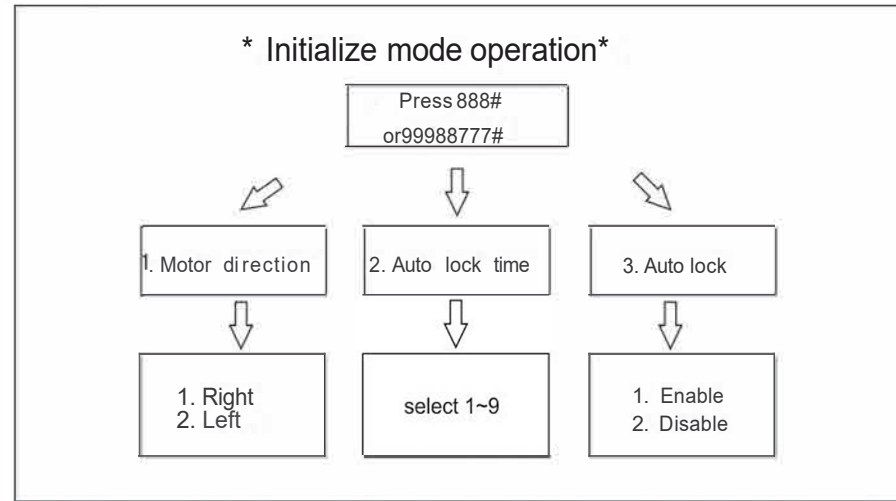


8. Initialize setting

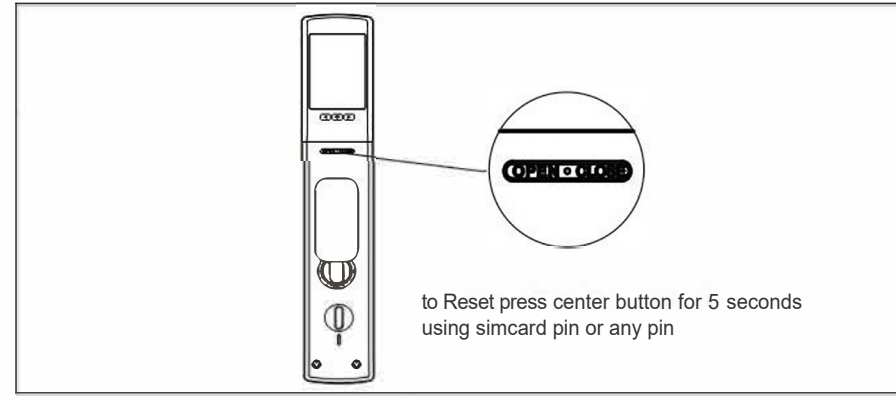


DL04 User Manual

1. Product Brief

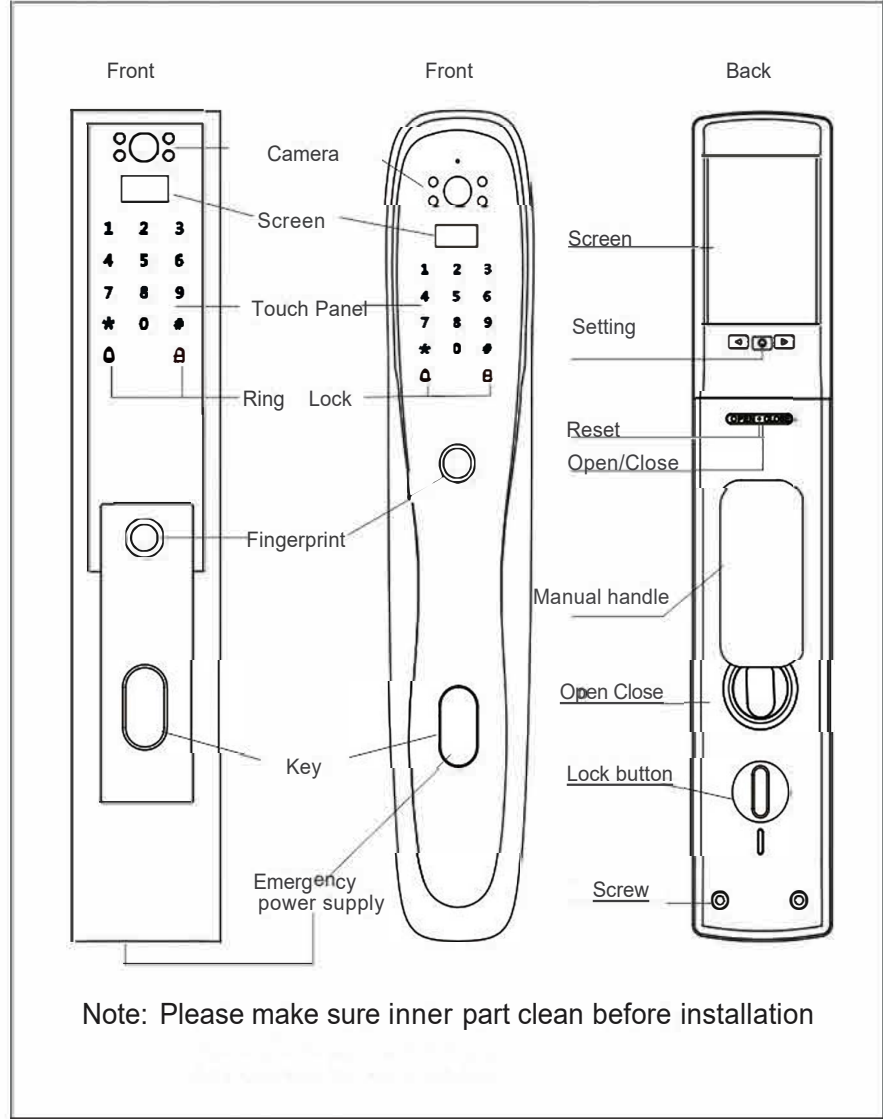

Note: Please make sure inner part clean before installation


Smart Lock Construction

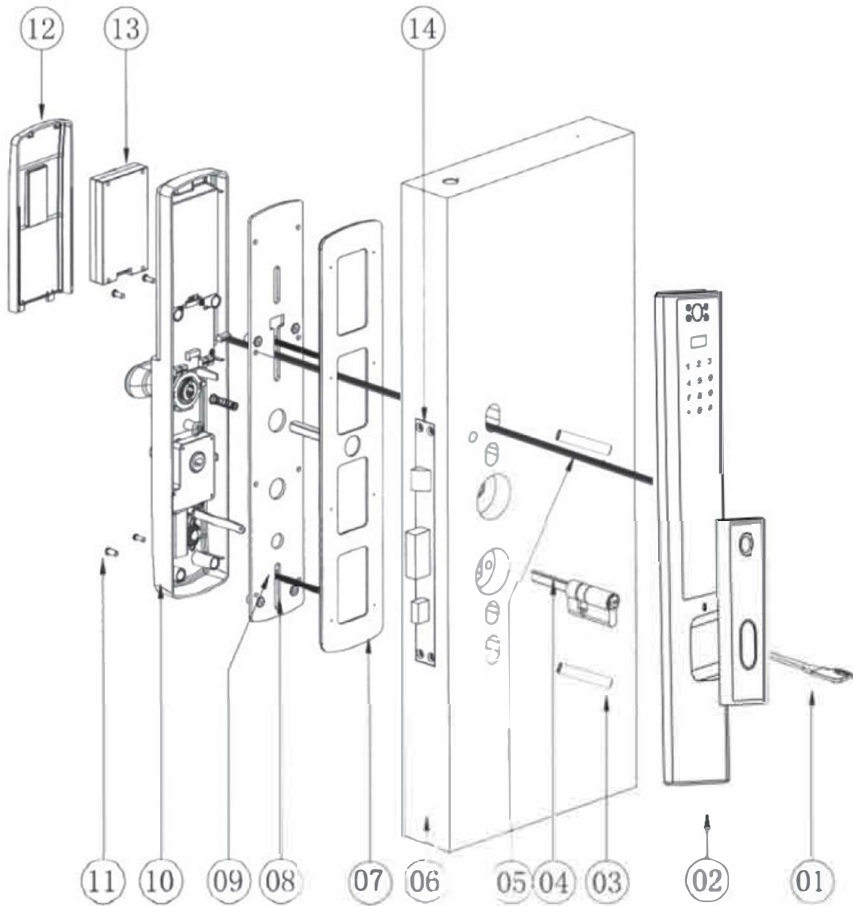

NO.	Name	Quantity
01	Key	2
02	Front part	1
03	Fixed column	2
04	Lock cylinder	1
05	Connection Wire	1
06	Door	
07	Silicone pad	1

NO.	Name	Quantity
08	Back part	1
09	M5 fixing screw	2
10	Back panel	1
11	M4 fixing screw	4
12	Battery case	1
13	Battery	1
14	Mortise	1

Smart Lock Installtion Diagram

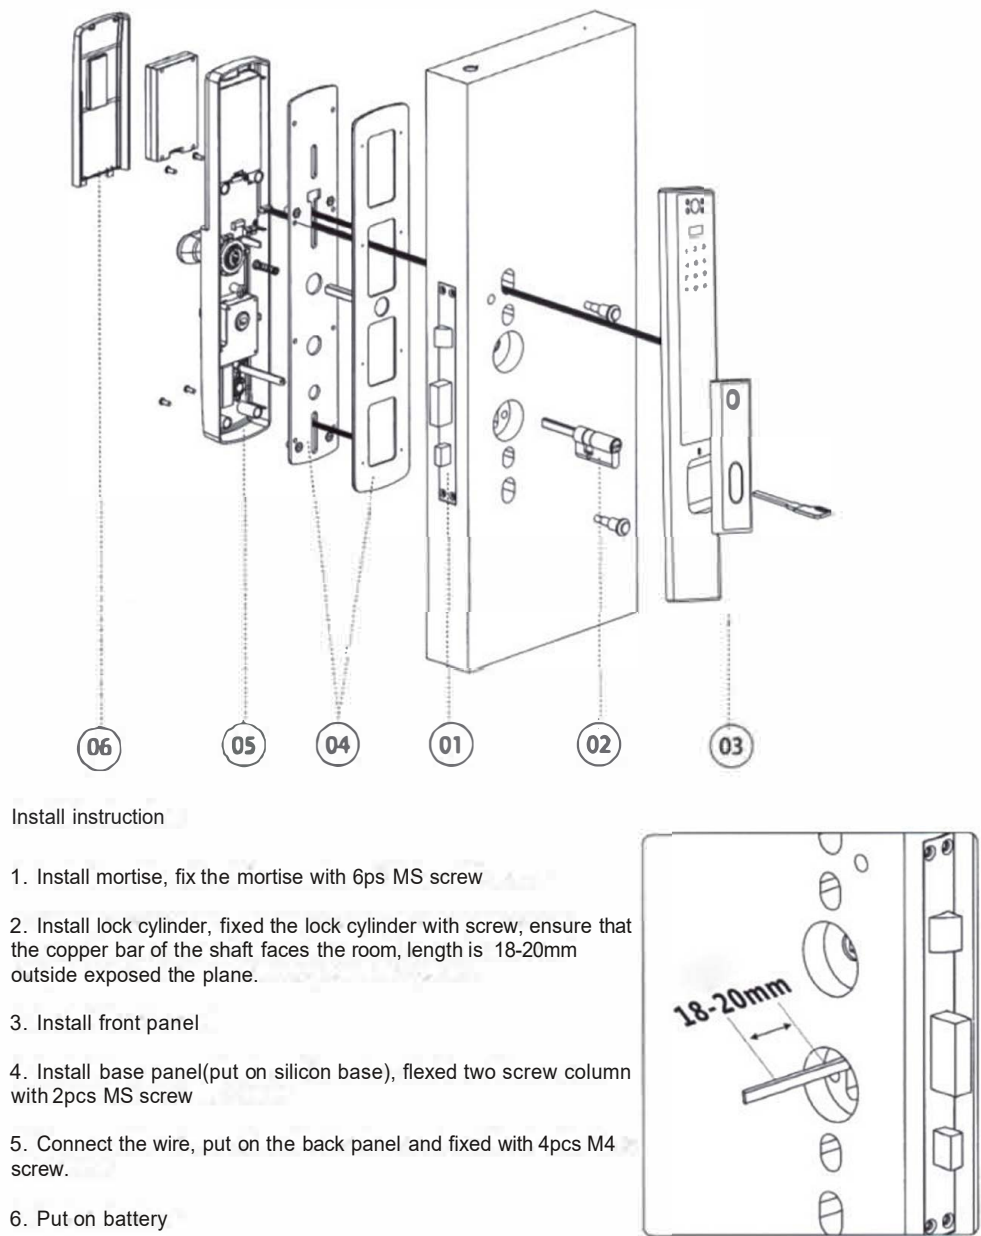

Install instruction

1. Install mortise, fix the mortise with 6ps MS screw
2. Install lock cylinder, fixed the lock cylinder with screw, ensure that the copper bar of the shaft faces the room, length is 18-20mm outside exposed the plane.
3. Install front panel
4. Install base panel(put on silicon base), flexed two screw column with 2pcs MS screw
5. Connect the wire, put on the back panel and fixed with 4pcs M4 screw.
6. Put on battery

Product Function :


- Unlock methods: fingerprint, password, IC card, Key, Apps
1. Fingerprint: Advanced semiconductor sensors, 360 degree recognition angle, wide fingerprint collection area, high resolution, effectively preventing fake fingerprints;
 2. Password: Advance touch screen button technology, which can add 12 irrelevant passwords before and after the correct password
 3. Double authentication mode: Set a combination of fingerprint, password and card to verify and unlock. After setting, only the door can be opened when two users are authenticated at the same time
 4. User management: The administrator has the highest authority (ordinary users can only open and close the door), and can edit and set the lock.
 5. Alarm function: this machine has anti-warping alarm, low pressure alarm, trial and error alarm.

- a. It is recommended to initialize the lock after new installation
- b. When collecting fingerprints, the finger strength is moderate, do not apply pressure vigorously to prevent the fingerprint collection head from scratching;
- c. The battery should not be used for too long. Generally, it is recommended to charge it at least once in 3 months, otherwise the battery leakage will damage the smart lock;
- d. When it prompts for the first time "the battery is insufficient, please replace the battery", you should charge it in time to avoid inconvenience caused by the exhaustion of the battery;
- e. After entering the wrong fingerprint/card/password in any way for 5 consecutive times, it will alarm, the device will sound an alarm sound, and the door lock cannot be used within 90 seconds;

1. Initialization operation:

Using the card pin, press the small hole in the middle of the unlock/ close button on the rear panel and hold for 5 seconds. The voice prompts "initialization successful".

2. Enter the door lock function management:

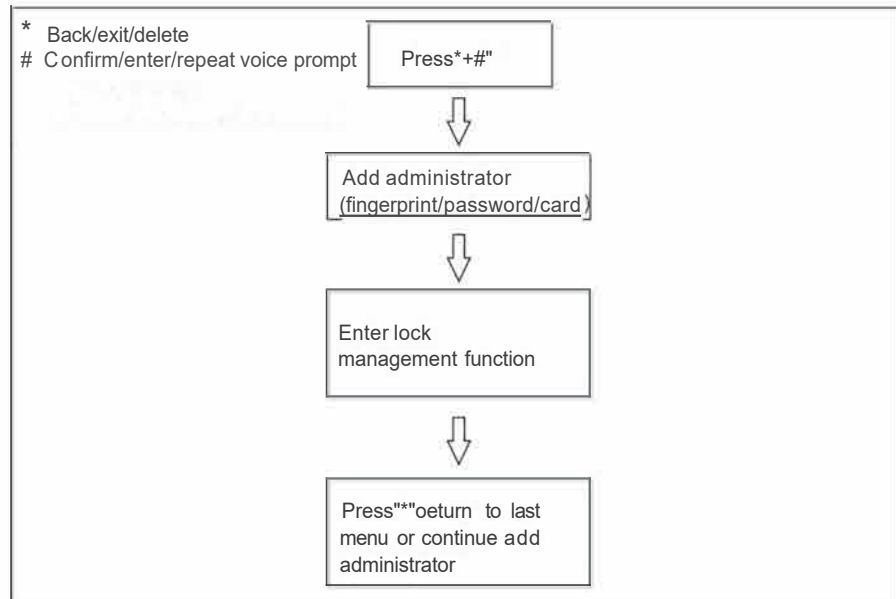

3. Add user/ Delete user

