

miroir

L300 Full HD Pro Projector

Quick Start Guide



miroir

QUICK SET-UP GUIDE

GUIDE D'INSTALLATION RAPIDE

GUÍA DE CONFIGURACIÓN RÁPIDA

KURZANLEITUNG ZUR EINRICHTUNG


GUIDA RAPIDA ALL'INSTALLAZIONE

빠른 설정 가이드

クイックセットアップガイド

快速設定指南

快速設定指南

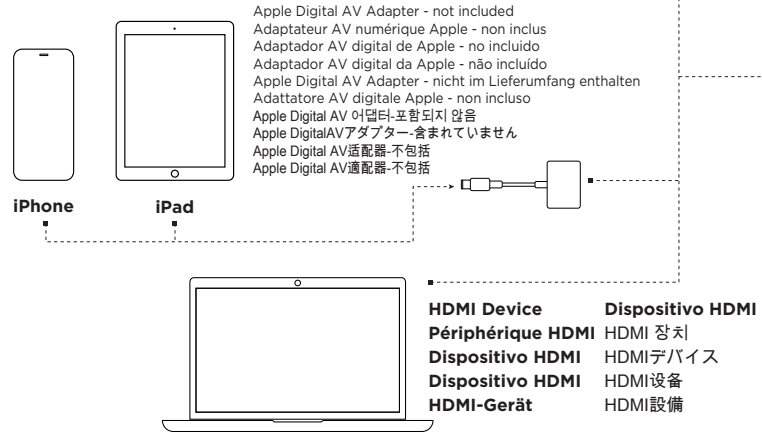

USB-C Device

Périphérique USB-C

Dispositivo USB-C

Dispositivo USB-C

USB-C-Gerät


Dispositivo USB-C

USB-C 장치

USB-Cデバイス

USB-C设备

USB-C設備

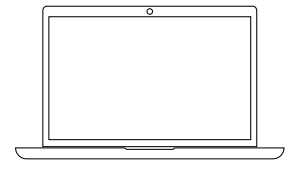


USB-C to HDMI Adapter - not included
Adaptateur USB-C vers HDMI - non inclus
Adaptador USB-C a HDMI - no incluido
Adaptador USB-C para HDMI - não incluído
USB-C-auf-HDMI-Adapter - nicht im Lieferumfang enthalten
Adattatore da USB-C a HDMI - non incluso
USB-C to HDMI 어댑터-포함되지 않음
USB-C-HDMIアダプター-含まれていません
USB-C 转 HDMI 适配器 - 不包括在内
USB-C 轉 HDMI 適配器 - 不包括在内

Need help, text (only) the Miroir support team directly: +1 (855) 676-0972 World Wide Toll Free Text
Besoin d'aide, envoyez un SMS (uniquement) directement à l'équipe d'assistance Miroir:
+1 (855) 676-0972 World Wide Toll Free Text
Necesita ayuda, envíe un mensaje de texto (solo) al equipo de soporte de Miroir directamente:
+1 (855) 676-0972 Texto sin cargo en todo el mundo
Precisa de ajuda, envie uma mensagem de texto (apenas) diretamente para a equipe de suporte do Miroir: +1 (855) 676-0972 Texto para ligação gratuita mundial
Benötigen Sie Hilfe, senden Sie (nur) direkt eine SMS an das Miroir-Support-Team:
+1 (855) 676-0972 Weltweiter gebührenfreier Text
Hai bisogno di aiuto, invia un SMS (solo) direttamente al team di supporto di Miroir:
+1 (855) 676-0972 Testo gratuito a pagamento
도움이 필요하면 Miroir 지원팀에 직접 문자를 보내십시오. +1 (855) 676-0972 전세계 수신자 부담 문자
ヘルプが必要な場合は、Miroirサポートチームに直接テキスト (のみ) を送信してください:
+1 (855) 676-0972 World Wide Toll Free Text
需要帮助，请直接发短信给Miroir支持小组 (仅发短信) : +1 (855) 676-0972全球免费电话发短信
需要幫助，請直接發短信給Miroir支持小組 (僅發短信) : +1 (855) 676-0972全球免費電話發短信

TEXT MIROIR SUPPORT 1-855-676-0972
OR DOWNLOAD YOUR MANUAL AT:
MIROIRUSA.COM/L300-MANUAL




Your Miroir Full HD Pro Projector

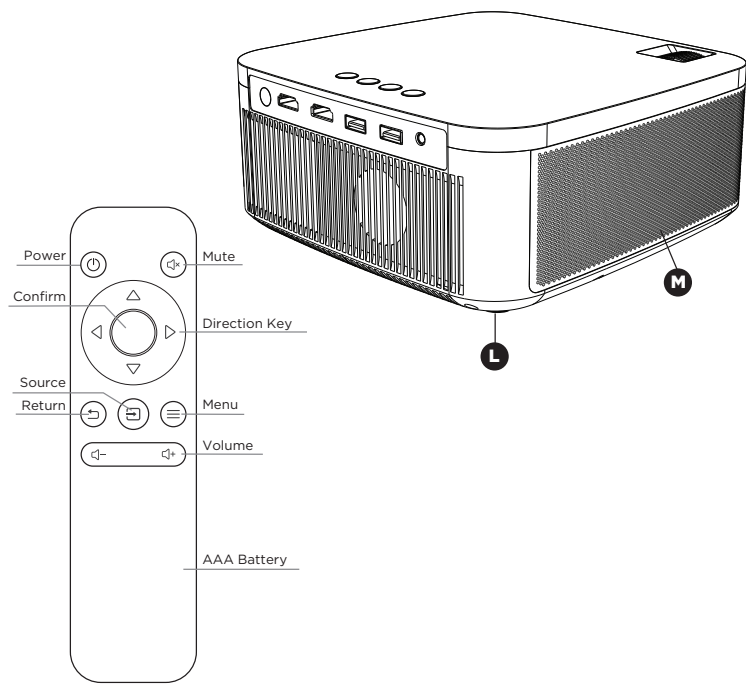


- A Battery Indicator Lights** - Lights flash in turn as the device charges. The battery is fully charged when all the lights illuminate and no longer flash.
- B Lens Cover** - Slide open to turn power on/off
- C Audio Out (3.5mm)** - (Optional) Connect an external speaker or headphones.
- D HDMI Video Input** - Connect an HDMI cable to a device that supports HDMI video output.
- E USB Power Output** - Connect a USB power cable to provide power to a HDMI streaming stick or to charge a smartphone battery. Cannot be used for video input.
- F USB-C Video/Charge Input** - Connect any compatible USB-C charge/video cable to a device that supports USB-C video output, or power adapter that supports charging. (USB-C cable not included)
- G Reset Button** - Press to reset projector.
- H Power Port** - Connect included AC Adapter/Charger for power. Fully charge battery before the first use (approx. 4-5 hours).
- I Mode Button** - Long press mode button to change from ECO to Normal Mode. Normal mode is maximum brightness but shorter battery life.
- J Controls** - Increase/decrease the volume output of the projector.
- K Focus Controls** - Turn wheel to adjust focus.
- L Rubber Foot Pads** - Provides stability and proper airflow to cooling vents.
- M Cooling Vent** - IMPORTANT: Do not cover or block airflow to the vent.




Connect To Your Apple Device Lightning

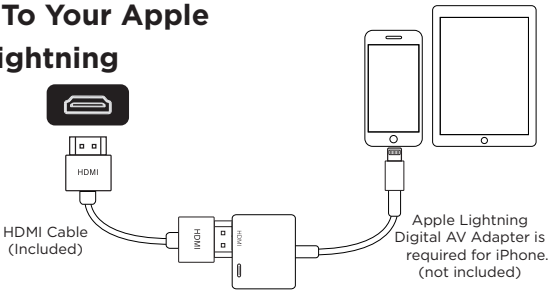


Connect To Your Device

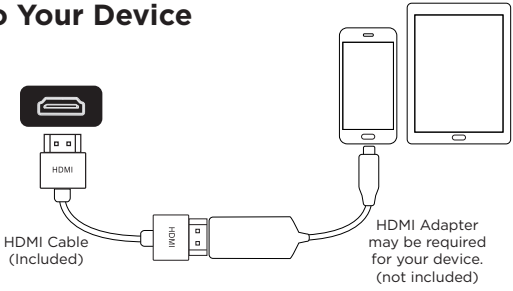


Connect To Your MacBook USB-C

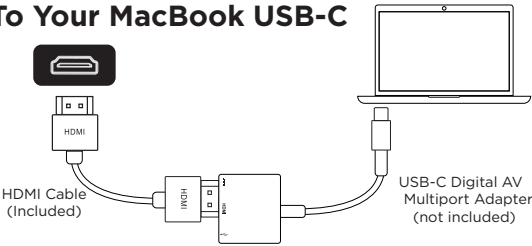

Connect To Your Laptop HDMI

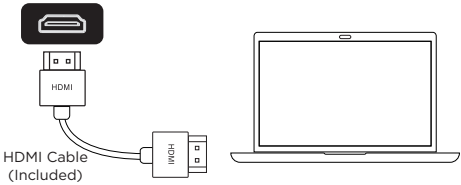

 
IMPORTANT! Not all USB - C cables will support video.



Multi-media Play
Supported Format

Video: mp4,avi,mov,wmv,mkv,rm,rmvb,mpg,mpeg
1080P@30fps, 720P@60fps
Image: JPG 15360 x 8640 Up to 1024x768 for progressive format
PNG, 9600 x 6400 (Up to 1200x800 for interlace format)

Connect To Your Streaming Stick HDMI

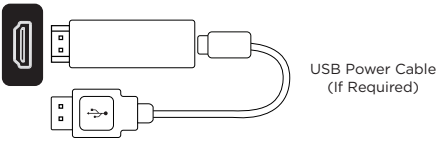


Connect to the Network

Before upgrading or connecting to an Apple device via Wi-Fi network, you need to connect the projector to the network first.

- Steps 1: Turn on the projector and enter the wireless page, you will see the device name and password in the upper left corner.
- Steps 2: Set the Wi-Fi of your mobile device to connect to the projector.
- Steps 3: Open the web browser of your device and log on the URL 192.168.49.1 Set the projector to connect to the network. there will be a router icon in the upper right corner if connected to the network successfully.

OTA upgrading

Check the new URL 192.168.xxx.xxx in the projected screen, log on in your mobile device, then you can see the 'upgrade' button and do the OTA upgrading.

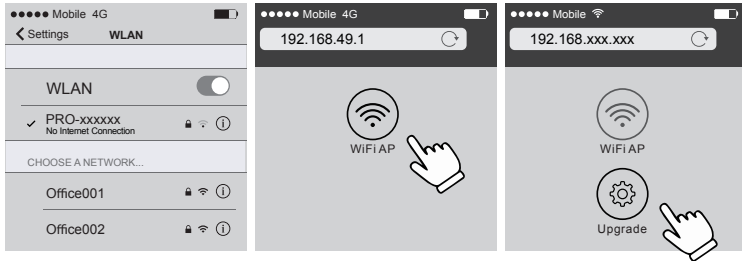

Wireless Connection to Android Devices

To connect your Android device to the projector by Smart view/Miracast

- Steps 1: Turn on the projector and enter the wireless page, you will see the device name and password in the upper left corner.
- Steps 2: Open the quick menu of Android device, and active Smart view/Miracast.
- Steps 3: The Projector named PRO-xxxxxx, find and connect it.

Note: You may need to check with your android device manufacturer to verify that your Android device supports video out..(In Samsung device, this function named Smart view)

Wireless Connection to Apple Devices

To connect your Apple device to the projector by Screen mirroring/Airplay.

- Steps 1: Turn on the projector and enter the wireless page, you will see the device name and password in the upper left corner.
- Steps 2: Set the Wi-Fi of your Apple device to connect to the projector.
- Steps 3: Open the quick menu of Apple device to active the screen mirroring, to look for the projector and connect it.

Note: If the projector and Apple device are connected to the same network, screen mirroring can also work. Some Streaming apps don't allow video output, such as Netflix...



Troubleshooting

The image is blurry

- Adjust the projected image's focus by rolling the focus wheel forwards or backwards.
- Check that the surface you are projecting on is smooth and non-reflective.
- Check that the projector's lens is clean and free of debris.

The image is not square

- Check that the projector's lens is parallel to your projection surface and that your projection surface is flat.

No sound

- Check the volume control on your source device to ensure the volume is turned up.
- Check the volume control on the projector to ensure the volume is turned up.
- If you are using an adapter, verify that the adapter supports audio.
- Check that the HDMI cable is fully plugged into the HDMI port.

No Signal Message

- Check that you are using the required cable and/or adapter.
- If you are using a digital AV adapter, check that the adapter is an authentic Apple adapter and is compatible with your model phone or tablet.
- If you are connecting via USB-C, check that you are using a USB-C cable that is labeled "USB-C Video". Some USB-C cables do not support video.
- If you are connected to a laptop or computer, check your computer display settings to ensure a multiple display option is selected (such as "mirror these displays").
- Check that your source device supports HDMI video out or USB-C video out.

Projector will not power on, or stay powered on

- Check the battery life of the projector by briefly pressing the power button on the projector. If one or fewer lights illuminate, charge the battery with the USB-C cable or power adapter.

© 2022 Miroir USA, LLC. All rights reserved. Miroir and the Miroir logo are owned by Miroir USA, LLC. All other trademarks are the property of their respective owners. Miroir USA, LLC assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

© 2022 Miroir USA, LLC. Tous droits réservés. Miroir et le logo Miroir sont la propriété de Miroir USA, LLC. Toutes les autres marques commerciales sont la propriété de leurs propriétaires respectifs. Miroir USA, LLC décline toute responsabilité pour toute erreur pouvant apparaître dans cette notice d'utilisation. Les informations contenues dans les présentes peuvent être modifiées sans préavis.

© 2022 Miroir USA, LLC. Reservados todos los derechos. Miroir y el logotipo de Miroir son propiedad de Miroir USA, LLC. Todas las demás marcas comerciales son propiedad de sus respectivos propietarios. Miroir USA, LLC no asume ninguna responsabilidad por los errores que puedan aparecer en este manual. La información incluida aquí puede ser modificada sin previo aviso.

© 2022 Miroir USA, LLC. Todos os direitos reservados. Miroir e o logótipo Miroir são propriedade da Miroir USA, LLC. Todas as outras marcas comerciais são propriedade dos respetivos proprietários. Miroir USA, LLC não assume qualquer responsabilidade por quaisquer erros que possam surgir neste manual. A informação contida no presente documento está sujeita a alterações sem aviso.

© 2022 Miroir USA, LLC. Alle Rechte vorbehalten. Miroir und das Miroir-Logo sind Eigentum von Miroir USA, LLC. Alle anderen Warenzeichen sind das Eigentum ihrer jeweiligen Inhaber. Miroir USA, LLC haftet nicht für etwaige Fehler, die in dieser Bedienungsanleitung auftreten können. Die Informationen hierin können ohne Vorankündigung geändert werden.

© 2022 Miroir USA, LLC. Alle Rechte vorbehalten. Miroir und das Miroir-Logo sind Eigentum von Miroir USA, LLC. Alle anderen Warenzeichen sind das Eigentum ihrer jeweiligen Inhaber. Miroir USA, LLC haftet nicht für etwaige Fehler, die in dieser Bedienungsanleitung auftreten können. Die Informationen hierin können ohne Vorankündigung geändert werden.

© 2022 Miroir USA, LLC. Tutti i diritti riservati. Miroir e il logo Miroir sono proprietà di Miroir USA, LLC. Tutti gli altri marchi registrati appartengono ai rispettivi proprietari. Miroir USA, LLC declina ogni responsabilità per eventuali errori in questo manuale. Le informazioni contenute in questo manuale possono subire modifiche senza preavviso.

© 2022 Miroir USA, LLC. 모든 권리를 보유합니다. Miroir 및 Miroir 로고는 Miroir USA, LLC의 소유자산입니다. 다른 모든 상표는 해당 소유자의 자산입니다. Miroir USA, LLC는 이 안내서에 나타날 수 있는 오류를 책임지지 않습니다. 여기에 포함된 정보는 사전통보 없이 변경될 수 있습니다.

© 2022 Miroir USA, LLC. All rights reserved. MiroirおよびMiroirのロゴは、Miroir USA, LLCの所有物です。その他全ての商標は、各所有者の財産です。本マニュアルに誤りがある場合でも、Miroir USA, LLCはそれに対する責任を負いません。本書に記載されている情報は、通知なく変更される場合があります。

© 2022年美国Miroir公司版权所有。版权所有。Miroir品牌和Miroir 商标是属于美国Miroir公司。其他所有商标均归各商标所有者所有。Miroir对本手册中可能出现的任何错误不承担任何责任。本手册中的信息可能会随时发生变动，恕不另行通知。

© 2022年美國Miroir公司版權所有。版權所有。 Miroir品牌和Miroir 商標是屬於美國Miroir公司。其他所有商標均歸各商標擁有者所有。 Miroir對本手冊中可能出現的任何錯誤不承擔任何責任。本手冊中的信息可能會隨時發生變動，恕不另行通知。



miroir

www.miroirusa.com

MICRO300.02.15.2022

