

VINTAGE VIBES

★ ★ ★ MUSICALLY YOURS ★ ★ ★

Model No.: iG-1112



iGear

USING OPERATION

1. RADIO

2. ON/OFF KNOB

- a. Turn the knob to turn on the radio
- b. Control the sound level through the knob.

3. Press the AM/FM/SW button as you need.

4. Tune in the desired station by tuning the knob[or press PLAY/PAUSE () button to scan program then press PREV and NEXT button to choose desired program].

5. Volume is adjusted with NEXT () and PREV () button



6. ANTENNA:

For FM,SW reception a ferrite antenna has been built-in.This antenna is also direction orientated and it is recommended to rotate the set for reception.

7. MEDIA PLAYER

8. Press the USB or Music button

9. Insert USB/TF to play automatically.

10. Press NEXT/F.F (►►) and PREV/REW(◀◀) button to choose desired song.



11. Long press NEXT/F.F (⏭) and PREV/REW (⏮) button to FF and REW the song.

12. Volume is adjusted with VOL+ (⏮) and VOL- (⏭) button (or VOLUME knob) to desired sound level.

13. Bluetooth use

* change from MP3 mode to Bluetooth mode by pressing the mode button. Once in Bluetooth mode the voice prompt will say "Welcome to iGear music"

*Turn on the Bluetooth of your digital device(Mobile phone/Tablet/Computer, etc.) and search for the name iGear Vintage Vibes and connect it.



POWER OPERATION

BATTERY OPERATION: Open the battery compartment, according to the demand for unit and insert "UM-1" batteries (not included). It is important that the indicated battery polarity is observed.

AC OPERATION: Plug the AC POWER cord into a wall outlet. (please check carefully that the voltage indicated on your set corresponds to the voltage of your household current).

RECHARGEABLE BATTERY (FOR OPTIONAL)

Insert the AC plug to the AC socket it begins to charge, suggest the charging time is more than 8 hours, the unit can be used. When the unit stops working, sound disappears, it means the electricity give out.

ATTENTION: When the set is used only with AC, or not used for 4 weeks or longer. Remove of batteries is recommended as old batteries may leak and cause damage to the set. When the unit is not in use pull the plug out of the wall.



Function Selection



FM
Radio



AM
& SW



MP3
Player



8 Watts
Speaker



USB
Plug & Play



Rechargeable
Battery



5.0



TF/SD
Card



Portable



Torch
Light

Accessories



