 
 




- de** Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-aanwijzing
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning






 
 


QFA3150/MO + AQF3100

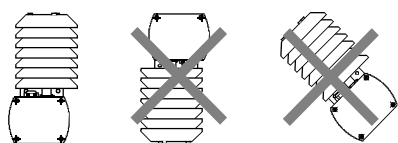

1858Z11

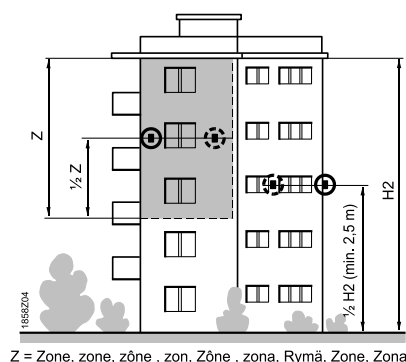


Z = Zone, zone, zône, zon, Zône, zona, Rymä, Zone, Zona

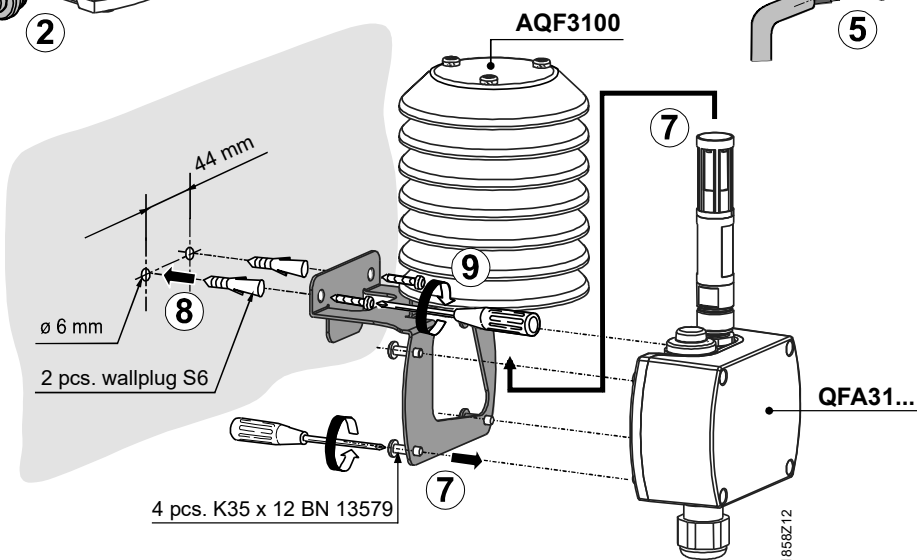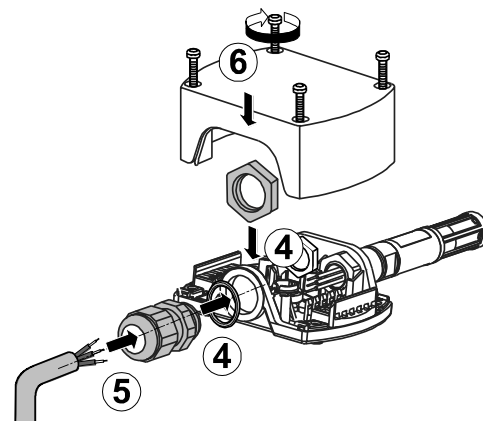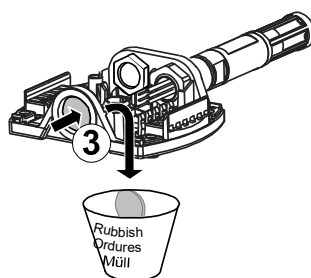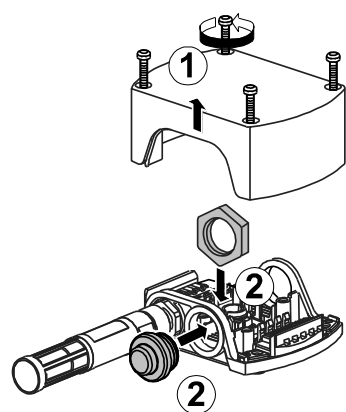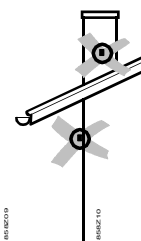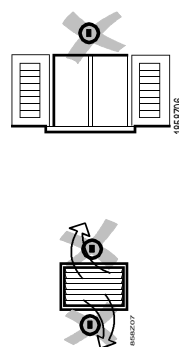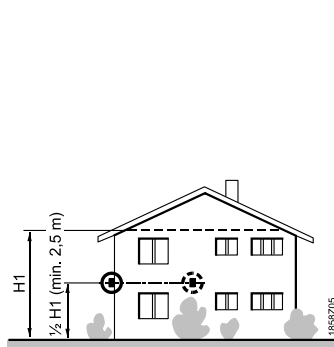

de Anschlussklemmen
en Connecting terminals
fr Bornes de raccordement


sv Anslutningsklämmor
nl Aansluitklemmen
it Morsettiere

fi Liittimet
es Bornas
da Tilslutningsklemmer

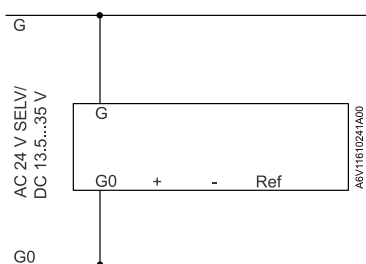

G AC 24 V $\pm 20\%$ /
DC 13.5...35 V
G0 GND
+ RS485 Modbus A
- RS485 Modbus B
Ref GND_ISO

A6V11610241202



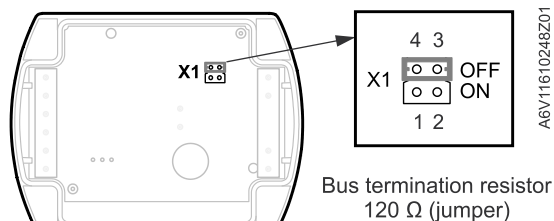


A6V11610248Z01

de Maßbilder
en Dimensions
fr Encombrements

sv Måttuppgifter
nl Maatschets
it Ingombri

fi Mittapiirros
es Dimensiones
da Målskitse

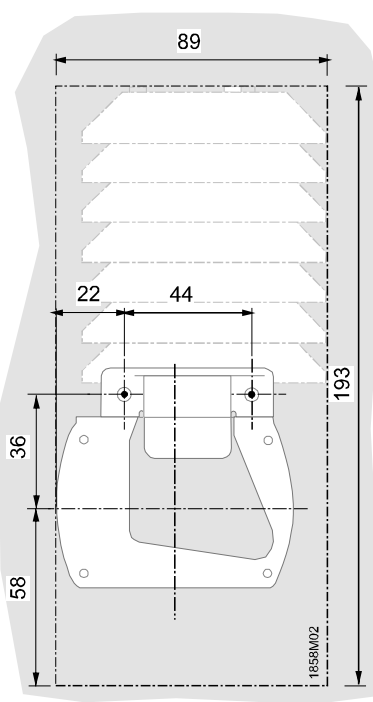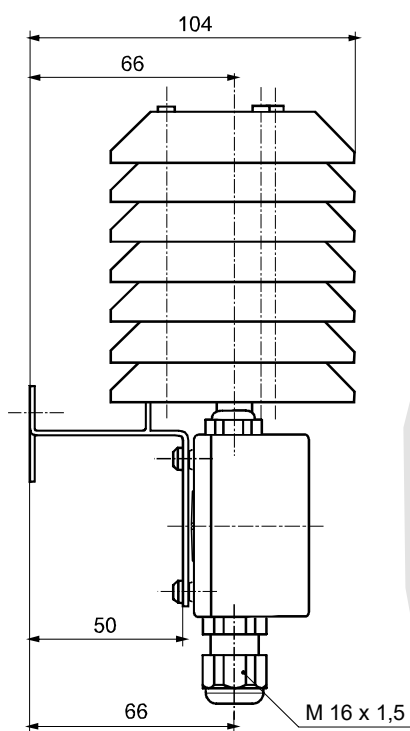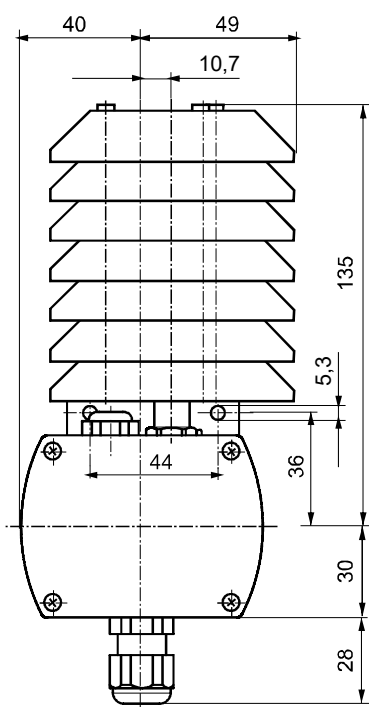

Bohrplan
Drilling plan

Maße in mm
Dimensions in mm
Dimensions en mm
Mått i mm
Maten in mm
Dimensioni in mm
Mitat mm
Dimensiones en mm
Mål i mm

Open Source Software (OSS)

All open source software components used within the product (including their copyright holders and the license conditions) can be found from the website <http://www.siemens.com/download?A6V11698658>.