



EKSELANS BY ITS

USER MANUAL

CM 8SH-TC

082255

DVB S/S₂ TO COFDM/QAM TRANSMODULATOR

V01



TABLE OF CONTENTS

INTRODUCTION:.....	3
Description:	3
Key features:	3
Package contents:	3
CONNECTIONS AND INTERFACES:.....	4
INSTALLATION AND WIRING:.....	5
General installation and wiring:.....	5
Installation of a multi-module head-end:	6
"CM Management" PROGRAMMING SOFTWARE:.....	6
Main screen:	6
CM 8SH CI-TC module configuration:	8
Input card:	9
Program pool:	10
DVB-C output card:	11
Advanced Configuration:	11
Remote head-end management:.....	12
FAQS.....	13
Configuration Example.....	14



INTRODUCTION:

Description:

It is a 4 input – 8 tuner DVB S/S2 + USB 2.0 + HDMI IN, with dual CI transmodulator, transmodulated to 4 FLEXIBLE COFDM/QAM, 13/18V, 22KHz and DiSEqC output channels. 95 dBuV output level. MER (Modulation Error Rate) >32dB. Intelligent remultiplexing of services. PC Programming connected to the power supply. Integrated remote control from FA 524 power supply

Key features:


- OCTO module with 4 SAT inputs and 8 tuners
- 1 HDMI input
- 1 USB 2.0 input
- Independent control of each 13/18V - 22KHz - DiSEqC (A/B/C/D) input.
- Flexible remultiplexing of services on any output channel.
- NIT tables editing, SID remapping and transmission or deletion of EMM messages and CAT tables.
- Programmable QAM/COFDM output.
- Output up to 4 COFDM/4 flexible QAM channels.
- High output level.
- Excellent output signal quality with high MER (Modulation Error Rate).
- LCN / LCN HD insertion.
- Programming via PC Software ("CM Management") for Windows.
- Configuration cloning and report generation.
- On-site (FA 524 / CM PR) or remote (FA 524) management

Package contents:

- 1x CM 8SH CI-TC module (082255)
- 1x Power supply cable (082123)
- 1x 63.25mm jumper (082148)
- 1x Mounting tab (251008)



CONNECTIONS AND INTERFACES:

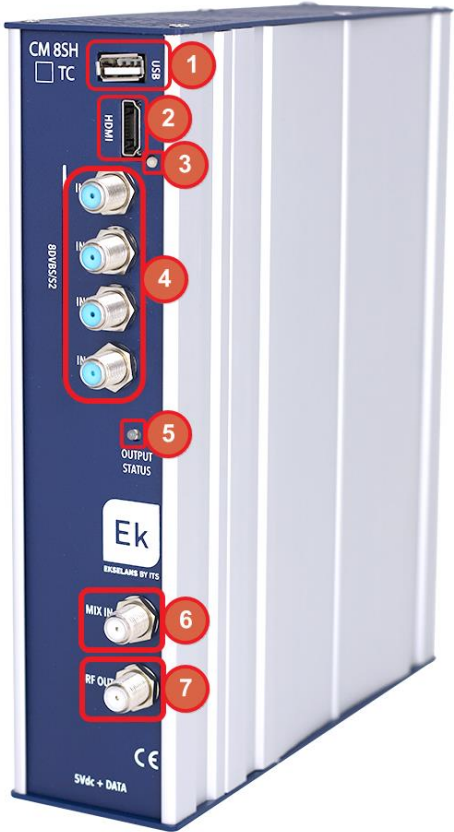	1. USB input 2. HDMI input 3. Status LED. Status information of the input tuners. 4. Input connectors to each tuner. 5. Status LED. Reports the status of the COFDM/QAM modulated output. The output will be working properly when the LED blinks green. 6. RF mix input connector. 7. RF output connector. This output will supply the MUX's generated by the module itself, <u>plus those entering through connector number 6.</u>
	1.- Ventilation grille. 2.- Power supply connector if using a single module with FA 55 power supply. 3.- Module power supply port and input data bus. (IN) 4.- Port for power supply to the next module and output data bus. (OUT)

INSTALLATION AND WIRING:

General installation and wiring:

1.- For installations of several modules (head-end) or a single module, mount the transmodulator module to a wall chassis ([CHM TR](#)) or to a rackmount chassis ([CHR TR](#)).

To do this, mount the supplied metal piece (COD: 251008) on the upper rear part of the module as shown in the image.



Important note: If installing a head-end with several modules, always place the power supply to the **left** of the modules to be installed.

2.- Connect the power supply ([FA 524](#)) to the module or connect it to the previous module using the supplied power cable.



The [FA 55](#) power supply can also be used to power a single module.



3.- Connect the input signals to the transmodulator inputs.



Important note: Pay particular attention to the input type and port. Follow the instructions on the front panel.

4.- Install the "CM Management" software on the PC. It can be downloaded from the website <https://ek.plus> Software / CM Head-ends Section. [Link](#)

5.- To program the module, perform out any of the following connections:

5a.- PC – FA 524 programming via USB. Connect the FA 524 power supply to a PC using a USB (A) - USB (B) cable

5b.- PC – FA 524 programming via Ethernet. Connect the power supply and the PC via Ethernet cable, connect these on the same LAN (the power supply provided with the address **192.168.0.222**). If it is necessary to be connected when not connected to the LAN itself, the [CM KEY](#) access key must be enabled beforehand.

5c.- PC - [CM PR](#) programming via **USB**. Connect the module to the device using the power and data cable. Connect the PC to the CM PR via USB cable.

6.- Run the PC SW programming.



Important note: Connect the [FA 524](#) power supply or the [CM PR](#) programming device and [FA 55](#) power supply to the PC before running the software so that it is correctly detected by the PC driver.

Installation of a multi-module head-end:

In the event of wishing to install the module as a further element of a head-end consisting of other CM series modules it is very important to follow the instructions below.

- Connect the different modules in series using the supplied power cable and then the power supply, which must always be to the left of the head-end.
- Check the consumption of the modules. In general, up to 5 modules can be connected using an FA 524 power supply. However, it is recommended to check the power consumptions of the modules to be installed.
- It is recommended to install the modules with CIs downstream of the power supply.
- It is possible to use the long jumper to deliver the input signal to adjacent modules.
- The attenuation at the output of each module can be adjusted to compensate for cable losses at high frequency.

“CM Management” PROGRAMMING SOFTWARE:

The “CM Management” programming software enables programming and controlling all CM head-end modules. The program is only available for Windows operating systems (version XP, 7 and higher). Once downloaded from the website <https://ek.plus>, Software / CM Head-end section, run the program after connecting the PC to the USB port of the FA 524 or CM PR power supply unit. This will ensure that the driver detects the control panel.

Main screen:

The main screen of the “CM Management” software is displayed as follows:



Always check that the latest [WEB](#) software version is installed.
It can be directly connected via USB or LAN.



For the LAN, select the equipment and for connection press:



- **ID:** enter the MAC of the corresponding power supply.
- **KEY:** enter the CM Key, if any. If not "0".
- **LOCAL IP:** the local IP will be entered if connected via LAN from the same network.
- **DESCRIPTION:** description.

Using the "CM Management" software, all modules connected to the power supply can be controlled and programmed. The function of each of the main side options is explained below:

	Connect to the modules via the power supply using the USB connector.
	Connect to the modules via the power supply using the LAN interface.
	<u>Firmware update</u> button for any of the cards. If any SW is available, the corresponding card will be displayed with a white triangle in the inner left corner. By double-clicking the button will change the color to orange and the icon will change from gray to blue. Clicking the icon will update the FW of all selected cards. <u>It is recommended to update each button one at a time via a RESET of the power supply at the end.</u>
	Reset selected card. This function is not available for all cards.
	This option enables loading a programming configuration previously saved in the PC to the head-end. The configuration file will have a *.dmc extension.
	This option enables the programming configuration of a head-end to be saved on the PC, to be subsequently loaded following the steps of the preceding point. THE DISTRIBUTION OF THE MODULES MUST BE IDENTICAL TO THAT OF THE *.dmc FILE.
	Data-logger. Enables saving the data of the different head-end modules in a single *.html file.
	Enables changing the output of the DVB-T (COFDM) modules to DVB-C (QAM).



The main "CM Management" screen enables easy identification of the different modules connected to the power supply, as can be seen in the following screen:

	Power supply and head-end manager (red). Identification of a module with an input card (green) and an output card (blue). Identification of a module with only one input card (green), two CIs (orange) and one output card (blue). Identification of a module with two input cards (green) and one output card (blue). In this case it would be a power supply and three modules, each one with its different internal cards.
--	---

Click on the corresponding module to enter its specific configuration menu.

Never open the CM MANAGEMENT program twice, this will cause configuration problems.

CM 8SH CI-TC module configuration:

	1. Selected module 2. Selected module configuration 3. Input card. Select between DVB-S DVB-S2. NO MULTISTREAM 4. Output card. Select output frequency in KHz. FLEXIBLE channels and different attenuations. 5. Program pool available on the configured inputs.
--	---

Input card:

In this part of the menu the input card will be configured. Selecting A, B, C, D, E, F, G or H in order to choose the input tuner that is to be configured:

On: Click on "Check" to activate the selected tuner.

Input: Select one of the physical inputs, 1, 2, 3 or 4.

Polarity: HOR. - VER. Select the horizontal or vertical polarity.

Switch: if having a DiSEqC multiswitch then select between A, B, C or D. If there is no DiSEqC multiswitch, this will not affect the selected value.

Common fields for each of the four physical inputs 1-2-3 and 4.

Standard: Select DVB-S or DVB-S2 for the satellite input.

BIS. (MHz): Tuner frequency. The conversion is performed automatically.

Example: 11229 MHz – 9750 = 1479MHz

On : ☒ Input : 2 22Khz : OFF Polarity : VERT. Switch : Sat. A Standard : DVB-S2 BIS(Mhz) : 11229 S.R. : 22000 Gold code : None SS ID : 0	On : ☒ Input : 2 22Khz : OFF Polarity : VERT. Switch : Sat. A Standard : DVB-S2 BIS(Mhz) : 1479 S.R. : 22000 Gold code : None SS ID : 0
---	--

S.R.: Symbol Rate of the selected MUX.

Once the parameters have been correctly configured, the signal will be acquired, acquired and an approximate value of these parameters will be specified in **Power (Level)** and **C/N (Quality)**. The power in dBm and the quality in dB CANNOT BE CONSIDERED AS A PROFESSIONAL MEASUREMENT.

Several fields for the eight different satellite inputs. A-B-C-C-D-E-F-G and H.

Input I: HDMI – USB 2.0

By selecting input **I(1)**, the HDMI - USB 2.0 input can be configured.

The HDMI input is automatic, it will always work with a maximum resolution of 1080p. Check the [Technical Specifications](#) of the equipment.

The USB input can be configured to be enabled at an interval of hours, and at the end of the time, it will automatically return to the HDMI input. The USB input works with videos in TS output format. Click on the drop-down menu (2) to select the video.

Download the [EK CONVERTER](#), software, and where the video can be generated using the TS extension.

Link: <https://ek.plus/en/sw/ek-converter-en>

Program pool:

In this table all channels, services, which correspond to the selected entries will be listed. From here the services that are wished to be assigned to each MUX output can be selected. Each service is assigned to the input tuner from which it has been tuned.

S.I.D.: S.I.D. (Service Information Descriptor) assigned at source to that service.

Service name: name assigned to the service at source. Next, a symbol appears indicating whether the service is TV or Radio, and whether it is encrypted or open.

DECODIFIC.: This module does not have a CI card.

MODULATION: each circle corresponds to a MUX output: 1, 2, 3 or 4. By clicking on that circle, it changes from red to green, and this service is assigned to a MUX output.

DVB-T output card:

This part of the menu consists of three differentiated sections:

- N.I.T. (Network Information Table) parameters
- RF output channel parameters
- Information window on the throughput of each MUX output

N.I.T. parameters:

- Vers.: N.I.T. version.
- O.N.I.D.: Original Network Identification Descriptor.
- N.I.D.: Network Identification Descriptor.
- L.C.N.: Logical Channel Number. LCN type selection (EACEM for Europe, ITC for the UK ...)
- Network Name identifies the name of the local DTT (Digital Terrestrial Television) network

RF output channel parameters:

- Freq. (KHz): Center frequency, in KHz of the desired output channel. **E.g. CH21=474000**
- Id. T.S.: T.S. identifier. In general, it is not necessary to change the identifier.
- Const.: Constellation. Select the desired output constellation: 64QAM, 16QAM, QPSK.
- Band: Output channel bandwidth: 7MHz or 8MHz.
- F.E.C.: (Forward Error Correction). Select the error correction level: 7/8, 5/6, 3/4, 2/3, 1/2
- Guard Int. Select guard interval: 1/32, 1/16, 1/8, 1/4.
- Atten. Level: The power level of the modulator is 95dBuV; it can be adjusted 20dB by using this attenuator.



Information window on each MUX output throughput:

Four bars are displayed corresponding to each MUX output. The green line indicates the percentage of channel occupied.

The number above indicates the total throughput being transmitted.

At the end of each bar there are two numbers: the first number indicates the throughput being modulated on that channel and the second the maximum possible throughput for the selected modulation parameters. **The first number should not exceed 80% of the second unless for services with constant throughput.**

DVB-C output card:

For DVB-C it is all identical to the DVB-T except for the modulation parameters:

- Const.: Select the desired output constellation: 256QAM, 128QAM, 64QAM, 16QAM.
- Band: Output channel bandwidth: 7MHz or 8MHz.
- S.R.: Enter the required value.

Whenever the modulation of a head-end module is changed, the power supply must be reset.

Advanced Configuration:

LCN Function:

The transmodulator enables labeling the information Transport Streams so that the TV programs are displayed in order on the TV set, in its program guide as specified from the head-end. In this way, all TV sets with the LCN function will have the same contents in each program number on the TV set. Although this function is useful for hotels or cable operators, as it avoids manual reordering of the programs on each TV set, tuning of each TV set is required. To perform the program number assignment, simply double-click on the LCN column of the program to be changed and apply the number of the desired position. Example:

S.I.D.	Service name	UNCRYPT	MODULATION	LCN	N.SID
B 4033	CSC TEST				
B 4002	SBS6			6	4002
B 4011	NPO1			1	4011
B 4012	NPO2			2	4012
B 4013	NPO3			3	4013
B 4016	CD/TVV info&nieuws			7	4016
B 4044	RTL4			4	4044
B 4045	RTL5			5	4045

Configuration of SID and NSID parameters:

The transmodulators enable a "remapping" of the SID fields. This functionality will enable to change the content of a program in the TV, leaving it in the same output channel of the head-end module, without the need to retune the TV. To do this, it is necessary to activate the new program to be transmitted in the same NSID where the previous program being broadcasted, by double clicking on the NSID column of the program to be changed. Example:

S.I.D.	Service name	UNCRYPT	MODULATION	LCN	N.SID
B 4033	CSC TEST			6	4002
B 4002	SBS6			1	4011
B 4011	NPO1			2	4012
B 4012	NPO2			3	4013
B 4013	NPO3			7	4016
B 4016	CD/TVW info&nieuws			4	4044
B 4044	RTL4			5	4045
B 4045	RTL5				

Flow: Adjustment of the data transfer rate to the output:

As a general rule, we will set the FTA (Free to Air) modules to 160Mbps.

Example flow calculation: 31668Mbps x 4 = 126672 Mbps - The value above would be 160 Mbps.




Remote head-end management:

The CM head-end can be managed remotely. This function is integrated in the [FA 524](#) power supply and in each of the head-end modules. To do so, a CM KEY ([082015](#) code) must be available.

Each CM KEY is associated with **a single power supply** and will only enable remote management of that power supply. The installer will provide the Power Supply identifier to ITS Partner when requesting the CM KEY.

Each installer company, in either event, will have a unique Software ID and Key which will be supplied together with the [CM KEY](#).

	Software ID: Installer/Installer Company Identifier. Key: Installer/Installer Company Identifier. ID: Power Supply Identifier (MAC). KEY: CM KEY supplied.
	Red: No Internet connection. Orange: Connection to the Internet and server. Green: Connection established against head-end modules.

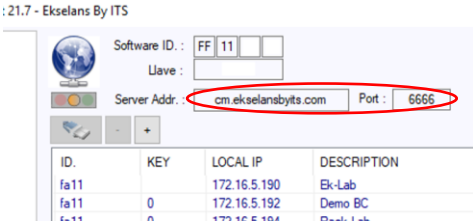 21.7 - Ekselans By ITS Software ID.: FF 11 Uave: Server Addr.: <u>cm.ekselansbyits.com</u> Port: 6666 <table border="1"> <thead> <tr> <th>ID.</th> <th>KEY</th> <th>LOCAL IP</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td>fa11</td> <td></td> <td>172.16.5.190</td> <td>Ek-Lab</td> </tr> <tr> <td>fa11</td> <td>0</td> <td>172.16.5.192</td> <td>Demo BC</td> </tr> <tr> <td>fa11</td> <td>0</td> <td>172.16.5.193</td> <td>Demo 1 sub</td> </tr> </tbody> </table>	ID.	KEY	LOCAL IP	DESCRIPTION	fa11		172.16.5.190	Ek-Lab	fa11	0	172.16.5.192	Demo BC	fa11	0	172.16.5.193	Demo 1 sub	Address and port of the data server which facilitates the remote connection. It is configured by default. DO NOT CHANGE.
ID.	KEY	LOCAL IP	DESCRIPTION														
fa11		172.16.5.190	Ek-Lab														
fa11	0	172.16.5.192	Demo BC														
fa11	0	172.16.5.193	Demo 1 sub														


FAQS

- What loads can be used for the module?
Use isolated loads [CF 2150 A \(163002\)](#) type
- How many services can be installed on a MUX output?
It depends on the size of the channel selected in the "Program Pool". For HD channels less channels can be installed than for SD channels.
- Why does the head-end module not detect anything?
Set the FA 524 to the left. Connect the head-end module to the right. Plug the power to the FA 524, connect a USB cable to the PC and open the CM MANAGEMENT program. Press the USB button and it will connect to the module.
- Why is there no signal at the tuner input?
Check the orientation of the satellite dish and the LNB with the [Metek](#).
- If the MER (Modulation Error Rate) is located next to the power socket, can it be improved?
For installations where there are problems with the MER (Modulation Error Rate), an improved performance of the product can be obtained, in the event that it has been attenuated at the head-end, leaving the attenuator at 0dB in the CM Management, and adding an external attenuator at the head-end output until the same attenuation is obtained.



- How can I see the configuration examples?

Example 1:

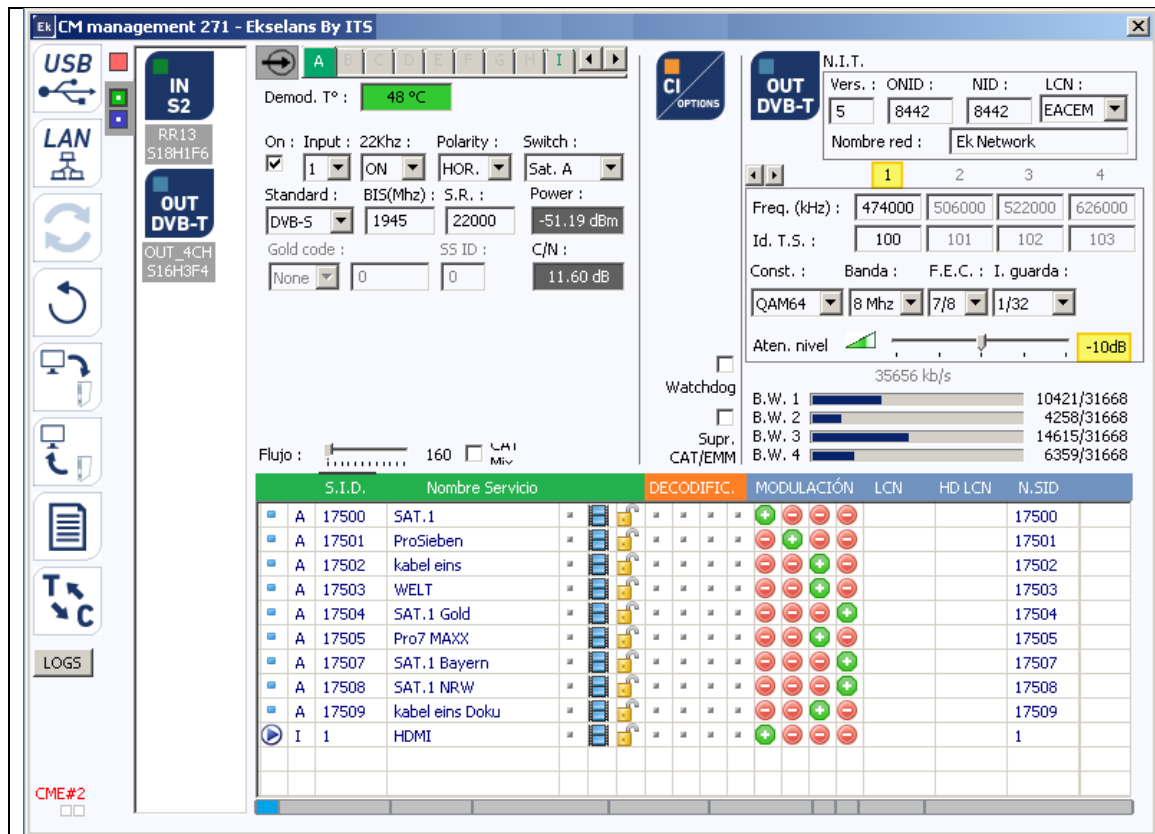

Input 1: ON – Tuner A – 22KHz. Enabled.

ASTRA 19.2°E Satellite – Frequency 12545 HORIZONTAL 22000 12545-10600-1945Mhz.

No DISEQ. Input 1 – Standard: DVB S


9 channels in the COFDM modulated program pool:

- 1 – Channel 21 – 474000 MHz 10dB attenuation at the output.
- 1 – Channel 25 – 506000 MHz No attenuation.
- 4 – Channel 27 – 522000 MHz No attenuation.
- 3 – Channel 40 – 626000 MHz No attenuation.

HDMI Input – Tuner I

- 1 – Channel 21 – 474000 MHz 10dB attenuation in the output.

Example 2:

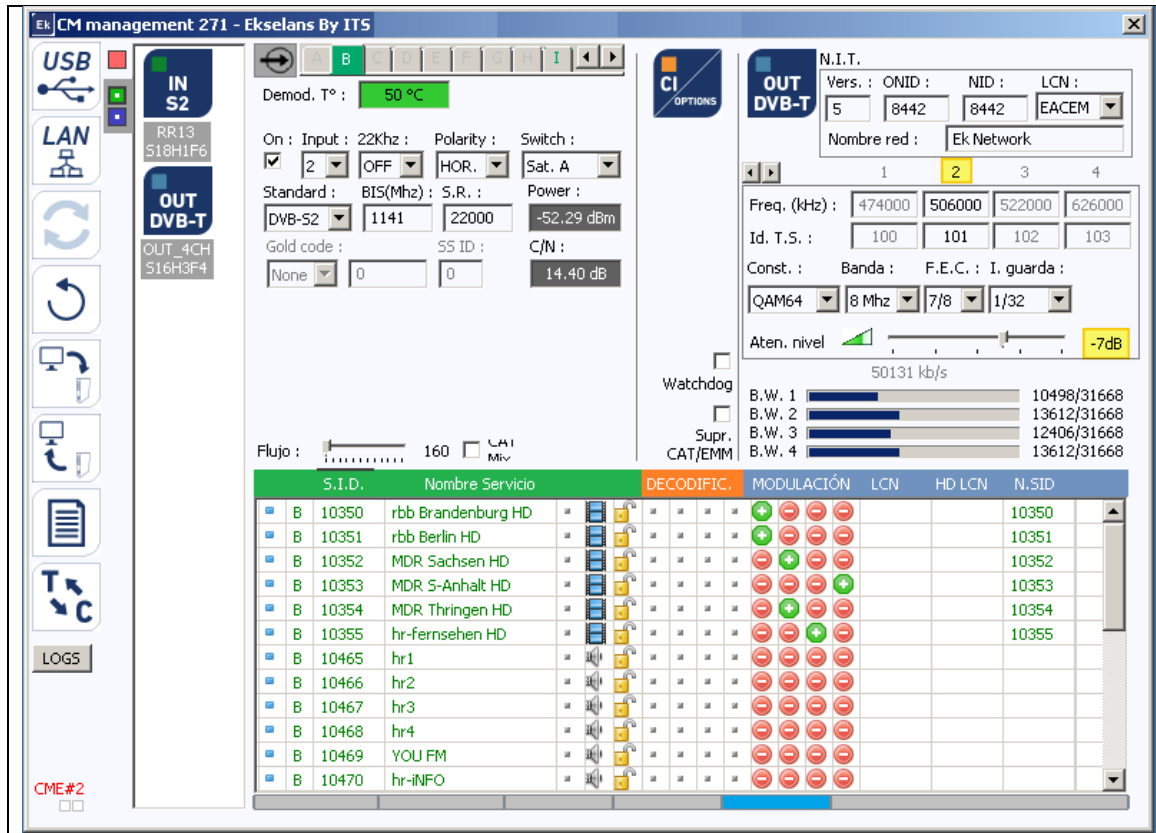

CM 8SH TC

1

2

3

4

Input 2: ON – Tuner B – 22KHz. Disabled.

ASTRA 19.2°E Satellite – Frequency 10891 HORIZONTAL 22000 10891-9750=1141Mhz.

No DISEQ. Input 1 – Standard: DVB S2

6 channels in the COFDM modulated program pool:

- 2 – Channel 21 – 474000 MHz No attenuation.
- 2 – Channel 25 – 506000 MHz 7dB attenuation at the output
- 1 – Channel 27 – 522000 MHz No attenuation.
- 1 – Channel 40 – 626000 MHz No attenuation.