



User Guide / Contents

 
1. Specifications

Bluetooth Version	V5.3
Bluetooth Range	66ft/20m
Audio Output	40W
Battery Capacity	10000mAh 3.7V
Input	5v=2A
Waterproof Rating	IPX7
Weight	4.6 lb
Size	15.4 x 7.2 x 3.94 inch

2. What's In The Box



3. Buttons And Indicator Lights



Power button, Volume down, Bluetooth indicator, Charging indicator, AUX indicator, Volume up, Power on/standby button

User Guide / Contents

4. Using your speaker

1. Turn on/off

1. Press the power button for 3s to power on the speaker.
2. The speaker will not automatically turn off. Please turn it off manually.

2. Pair with Your Device

1. Need to pair devices Bluetooth setting, enable Bluetooth and tap "LiveSound" and pair.
2. The speaker will automatically connect to the last connected device if available. If not, the speaker will enter pairing mode.
3. Have a connection problem? Remove "LiveSound" from your device's Bluetooth devices list, and ensure it's less than 1 meter away. Then try to pair again.

3. Connect via AUX

1. Turn on the speaker.
2. Find out the 3.5mm audio cable which is included in the packing box, connect the two ends of the 3.5mm audio cable to the 3.5mm audio jacks of the speaker and your device respectively.

4. Wireless Dual Stereo Pair

1. Turn on two Speakers.
2. Make sure neither of the speakers are connected with any device (long press the Pause button to remove the speakers from your device's Bluetooth history).
3. Long press "P" and "C" together of one speaker and you hear the prompt tone "DING DING". Then the two speakers are paired successfully.
4. Open your device's Bluetooth Setting, search and tap "LiveSound" to pair.

User Guide / Contents

5. Wireless Hands-Free Speakerphone

Hands-free speakerphone feature works over Bluetooth with Bluetooth-enabled smartphones only.

Short press	Answer / End a call
Long press	Reject a call
Short press	Put current call on hold and answer incoming call
Short press	Switch between two calls
Long press	Reject another incoming call or answering call

6. Recharge the Speaker

To preserve battery lifespan, fully charge at least once every 45 days.

7. Button Control

Long press	Power shut-off
Short press	Turn on/off light
Short press	Light effects
Short press	Disconnect Bluetooth devices and enter Bluetooth pairing mode
Long press	Turn the up
Short press	Turn the down
Long press	Next track
Long press	Previous track

User Guide / Contents

8. CONTROL COLORFUL LIGHTS

1. Short press "L" button to get breathing light effects cycle through seven different colors.
2. Short press "L" button once more to get the single color flowing light which will run up and down along with the rhythm of the music (cycle through seven different colors).
3. Short press "L" button once more to get the multi-color flowing light which will run up and down along with the rhythm of the music (seven colors change dynamically).
4. Short press "L" button once more to turn off the light.

9. LED STATUS

Indicator	LED status	Description
Bluetooth Indicator	Light on	Bluetooth pairing
	Light off	Bluetooth connected
AUX Indicator	Light on	AUX cable connected
	Light off	AUX disconnected
Charging Indicator	Light on	Low battery
	Light off	Charging
Power Indicator	Light on	Power on
	Light off	Power off

User Guide / Contents

10. RESET YOUR SPEAKER

1. The speaker will not automatically turn off. Please turn it off manually when it is not in use.
2. Close the waterproof rubber cover completely before putting the speaker into the water.
3. The battery may go to sleep or die if it doesn't use in a long time, please charge at least once every 45 days.
4. Avoid to leave the speaker in an extreme temperature environment (extreme cold or hot weather outside may damage the battery).
5. Do not use any corrosive cleaner / oil to clean.
6. Do not charge near the water source or in the rain to avoid electric shock.
7. Keep the speaker away from heat sources (such as direct sun light, the stoves, engines or other equipment that generates heat).
8. Avoiding dropping.
9. Do not disassemble.

11. ONE YEAR WARRANTY

Our products are covered by a 12-month limited warranty starting from the date of purchase. This warranty is not transferable and applies only to the original customer purchase.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference.
2. If this device does cause interference, the user must attempt to correct the interference, including interference that may cause undesired operation.