

BATTERY SAFETY INFORMATION

- Use only size "AA" (LR6) alkaline batteries (4 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void user's authority to operate this device. CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers.

U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

-  'Let's care for the environment!' The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.
-  Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



Printed in China
0420-0-E/INT

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

© 2020 Moonbug Entertainment Ltd. Little Baby Bum™ is a trademark of Moonbug Entertainment Ltd. and used under license. All Rights Reserved.



www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

Little Tikes Consumer Service
2180 Barlow Road Hudson, Ohio 44236
U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton
Keynes, MK8 0ES, Bucks, UK
0800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404XG
Alphen a/d Rijn, The Netherlands
Tel: +31 (0) 172 758038
E-mail: klantenservice@mgae.com

Imported by MGA Entertainment Australia Pty Ltd
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676



 
 
Twinkle's Singing Soother

little tikes

SKU: 652493 • AGES: 0+ MONTHS

BEFORE PLAYING:

1. Remove the pull tab from behind the soother.
2. Move the switch to low or high volume.

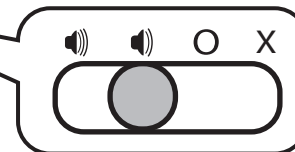
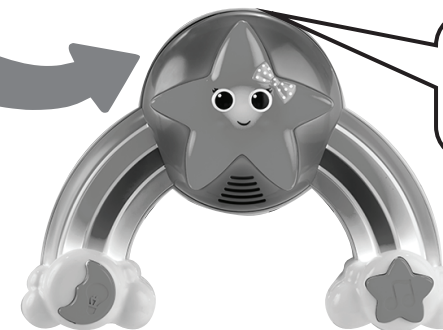


Move the switch on top of the soother from OFF (O) to low (speaker icon) or high volume (speaker icon with X).


REPLACING THE BATTERIES

The batteries included are for in-store demonstration. It is recommended that, prior to playing, an adult install fresh alkaline batteries. Here's how:


1. Before replacing or installing the batteries, unclip the buckle and pull the base stand down (press the middle of the base down slightly and pull to release).
2. Using a Phillips screwdriver (not included) remove the screws and battery compartment cover from the back of the unit.
3. Install four (4) 1.5V AA (LR6) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
4. Replace the compartment cover and tighten the screws.
5. Move the switch to low or high volume. Always turn unit OFF after use.

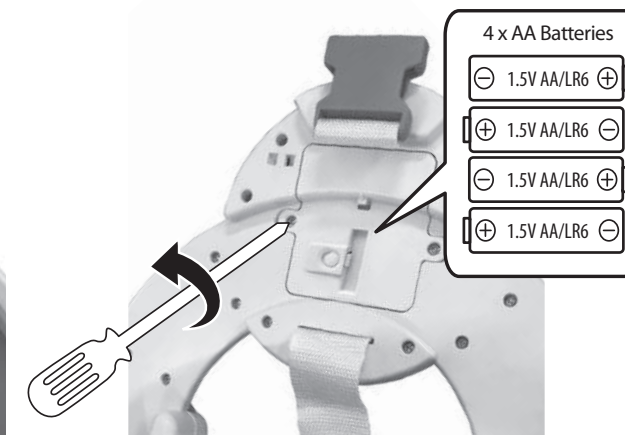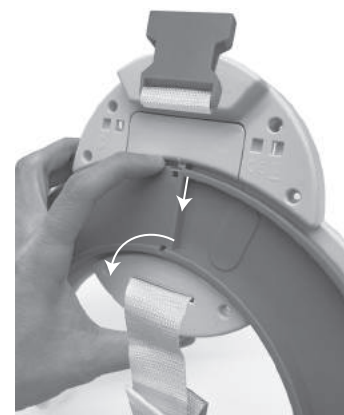


STAND ASSEMBLY

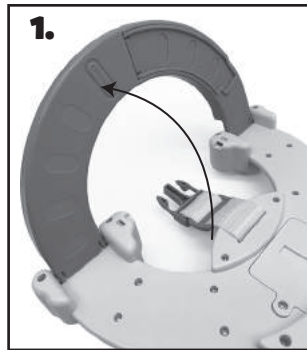

1. Unclip the buckle and release the base stand on the back of the soother.

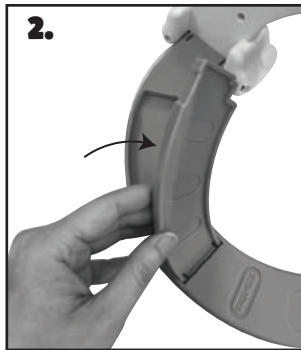


2. Lift up the support on the base stand.

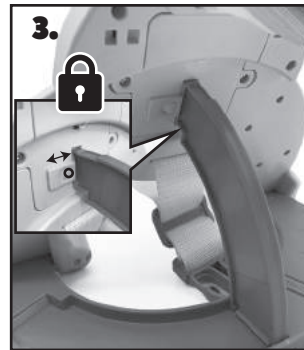


3. Slide the button to the unlocked position and insert the support into the back of the soother until it clicks in place. Slide the button into the locked position (🔒).


ATTACHING TO CRIB

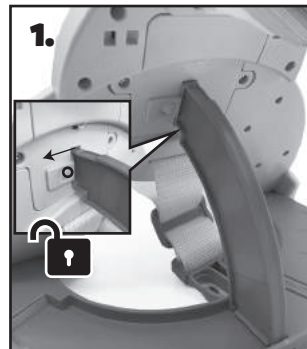


1. Slide the button to the unlocked position (🔓) and release the support.

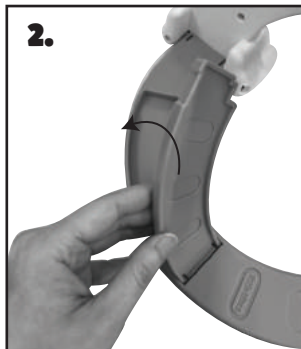

2. Fold down the support.

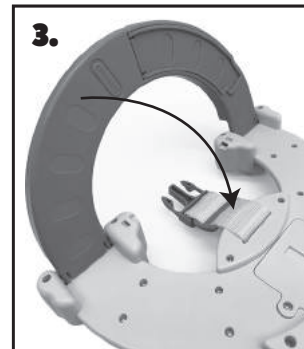


3. Lift up the base stand and fold it up.

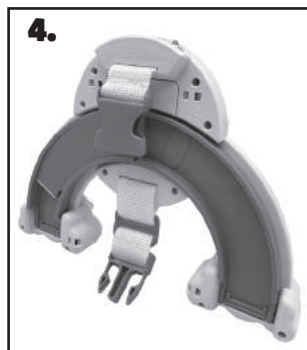

4. Unclip the buckle on the back of the soother and place the soother on the crib railing.




5. Clip the buckle around the crib railing and adjust the strap so that the soother is secured tightly to the crib.

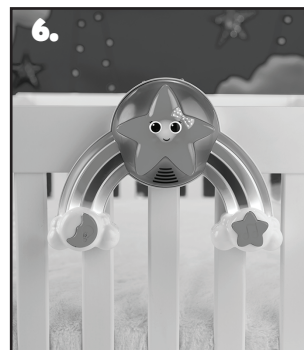


6. Position the soother on your crib railing, out of reach from your baby.

LET'S PLAY!

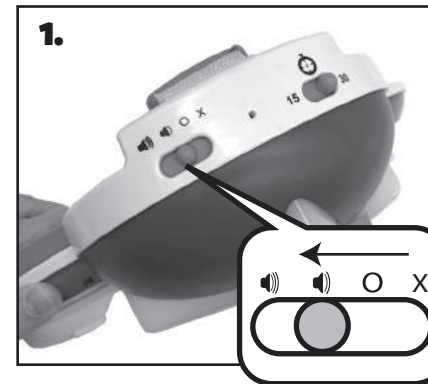

1. Move the switch on top of the soother from OFF (O) to low volume (🔊) or high volume (🔊).

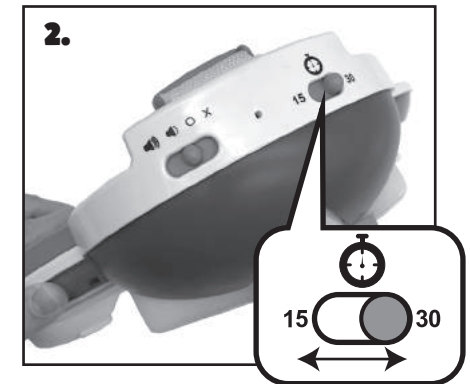

2. Move the switch on top of the soother to set a timer for 15 or 30 minutes of lights and sound.

X = TRY ME
O = OFF
🔊 = LOW VOLUME
🔊 = HIGH VOLUME



Press the moon button to cycle through four different light settings. Stop pressing the button to set the desired light mode.



Press the star button to start the cycle of four different melodies. The songs will rotate for the time that the soother is set to. These songs are: *Are You Sleeping?*, *Moon Song*, *Rock-A-Bye Baby*, and *Twinkle Twinkle Little Star*.

IMPORTANT INFORMATION

- REMEMBER: Play is limited in TRY ME (X) mode. Move the switch to either low or high volume (🔊 or 🔊) prior to playing for the full play experience. Once you move the switch out of TRY ME mode, it will not go back.
- Always make sure the crib soother is in a safe position on your crib, and that it is securely fastened with the included buckle. Position the soother so that it is out of reach of your baby.
- Press a button to turn the unit back on after the timer has gone off. If it does not turn back on, turn the unit off and then back on to low or high volume.
- Wipe clean with a damp cloth.
- Keep moisture away from the battery compartment. If moisture is present, remove the batteries and air dry thoroughly.