

49*105mm

Front



IMPORTANT SAFETY CAUTIONS

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

EXPLANATION SYMBOLS

	Read operators manual.
	Declaration of Conformity. Products marked with this symbol comply with all the applicable Community regulations of the European Economic Area.
	
	The packaging can be reused or recycled. Please dispose properly of any packaging material no longer required.
	If you notice any transport damage during unpacking, please contact your dealer without delay.

WARNINGS

- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the risks involved. Children shall not play with the appliance. Cleaning and use maintenance shall not be done by children without supervision.
- Do not keep or use the appliance in humid areas.

- Keep out of reach of children.
- Do not use the appliance with wet hands or let water drop on the appliance. It may cause electric shock and injury. Do not operate the electrical appliance with wet hands or if the appliance is wet.
- Do not operate the appliance in the presence of explosive and/or flammable fumes and/or liquids.
- Do not attempt to repair or disassemble the appliance. If the USB charging cable is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons, in order to avoid any risks. Improper repairs may expose the user to considerable risk.
- Never operate this appliance if it is not working properly, or if it has been dropped into water.
- Do not use attachments not recommended by the manufacturer.
- Do not bend the USB charging cable.
- Keep the USB charging cable away from the heated surfaces.
- If you notice any transport damage when unpacking the product, please contact your dealer without delay.
- The USB charging cable must not come into contact with water or other liquids as this may cause electric shock.
- **WARNING:** Keep the appliance and the USB charging cable dry.
- For your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Do not wash the appliance or USB cable with water or expose them to water as this may create a risk of electric shock or short circuit.
- Do not store your device with metal objects, such as coins, keys and necklaces. Your device may overheat.
- Do not remove the battery.
- To prevent possible hearing damage, do not listen at high volume for long period of time.
- Do not use your device or applications for a while if the device is overheated.
- Please keep these instructions for future reference.
- Incorrect handling of the batteries can lead to an explosion or to acid burns.
- Avoid contact of the fluid in the battery with skin, eyes and mucous membranes.

GENERAL FEATURES


Please read these instructions carefully before using this product and keep them in a safe place for future reference.

1. Earpods

2. Charging case

3. Power led indicator

4. Type-C charging port

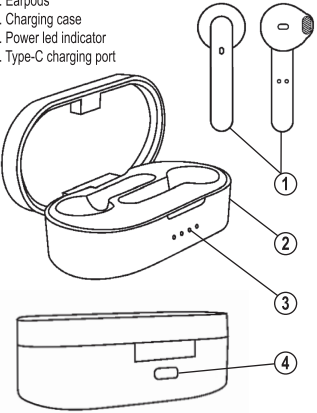

SPECIFICATIONS

- Sensivity: 95 dB+/-3dB
- Frequency Response: 20Hz-20kHz
- Impedance: 32 Ω ohm
- Battery Capacity: 35mAh for earbuds, 300mAh for charging case
- Voltage: 5V for charging, 3.7V for battery
- Max. output power speaker: 20mW, 95dB+/-3dB
- RF Max. output power: 4dBm

Back

- Charging Input: 5V 1A
- Charging output: 5V 100mA
- Working time 7h with charging case
- Charging time 1h
- Cable: 20cm
- Rechargeable
- Bluetooth 5.0

IN THE BOX

- Case, 2 earbuds and Type-C charging cable.
- User manual. Read these instructions before use.

USE

What to do before first use:

- Remove the packaging material and inspect the device for damage.
- Do not operate the device if it is damaged in any way. Return it to your seller immediately.
- Never expose the appliance to temperatures below -10°C or higher than +40°C for long periods of time.

INTENDED USE

- Warning! Only use the device externally.

OPERATION

A. Power on and Connection (first time)

- Take the two earbuds out of charging case. The two earbuds will turn on automatically with LED flashing blue and red. After 3-5 seconds, LED of L earbud turns off and that of R flashes blue and red. The two earbuds are paired successfully and ready for connection to other bluetooth device.
- Turn on the Bluetooth of mobile or other Bluetooth device and search for pairing name "VIBES".

B. Power off:

- Put the two earbuds into charging box. They will be turned off and in charging mode automatically. The LEDs of earbuds turn red.

C. Reuse the earbuds

- Turn on the Bluetooth of mobile. Take the earbuds out of charging case. The two earbuds will automatically pair to the last connected device.

CALL

- Answer, Short touch the function key to answer the call when call in. Reject: Long touch the function key for 2 seconds to reject when call in.
- Hang up, Short touch the function key to hang up the phone during a call. Reject: Long touch the function key to reject when call in.

MUSIC PLAY

- Play/pause: Short touch the function key to play/pause the music.
- Switch songs, Double touch function key of L earbud to play next song; double touch function key of R earbud to previous song.
- Triple touch function key of L earbud to increase the volume; triple touch function key of R earbud to decrease the volume.

CHARGING

- Earbuds charging, Put the two earbuds into the charging case. The leds of earbuds turn red. When the leds turn off, the charging of earbuds is finished.
- Case charging: Connect the USB port of charging box and power supply with USB cable. The leds of charging case flash blue. When completely charged the 4 leds will light up.

TROUBLESHOOTING

- **Q: Two pairing names of VIBES in the Bluetooth device list of mobile?**
- A: Delete these two pairing names, then operate according to "Power on and connection" in the manual.
- **Q: Only one earbud works when taking call or listening music?**
- A: Turn off Bluetooth of mobile. Then operate according to "Power on and connection" in the manual.
- **Q: How to know the battery capacity status of charging case?**
- A: The LED of charging case will flash when earbuds in charging.
- **Q: Earbuds cannot be charged in the charging case?**
- A: The charging case might be out of power. Please charge it with USB cable.
- **Q: Charging case cannot be charged?**
- A: Check if the USB cable connected well. Or the USB cable is damaged. In this case, change a new USB cable.

ENVIRONMENT FRIENDLY DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Please remove the battery before disposing of the device/ unit. Do not dispose of old batteries with your household waste, but at a battery collection station at a recycling site or in a shop. Consult your municipal authority or your dealer for information about disposal.

WARRANTY

For 12 months after date of purchase in respect of defects found - at our discretion - to be due to faulty workmanship or material. The warranty is valid only with a receipt. There is no warranty on appliances found to be defective due to improper usage, disassembling or accidental breakage. The warranty is not valid for damages resulting from defects.

In accordance with our policy of continual product improvement, we reserve the right to make technical and visual changes without notice. The current version of this instruction manual can be found under www.arovo.com/manuals

EU DECLARATION OF CONFORMITY

We;
B&M Retail Ltd., Dakota Drive Liverpool, L24 8RJ, UK

Declare under our own responsibility that the product:

Article number: **BM909111459 / 363821**

Article name: Vibes Marble earpods - 2 assorted designs

Barcode: **8720039718654 – Rose gold**
8720297450860 – Gold

a) The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:
RED 2014/53/EU
ROHS: 2011/65/EU
(EU)2015/863

b) Meets the conditions laid down in the following harmonised standards:
IEC 62321-3-1:2013
IEC 62321-5:2013
IEC 62321-4:2013+ADM1:2013
CSV IEC 62321-6:2013
IEC 62321-7-1:2015
IEC 62321-7-2:2017
IEC 62321-8:2013
EN55032: 2015
EN55035: 2017
EN300328 V2.2.2(2019-07)
EN50663:2017
E82368-1: 2014+A11:2017

Made in China

B&M Retail Ltd, Dakota Drive, Speke, Liverpool, L24 8RJ, UK
Centz Stores 7 Ltd, 5 Old Dublin Road, Dublin, A94 K1H5, Ireland



