





blackout
series


DROP HITCH | Operating Instructions

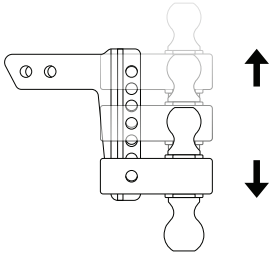


STEP 1: Place the Drop Hitch at the desired drop on the drawbar in order to ensure that your vehicle and trailer are properly positioned.

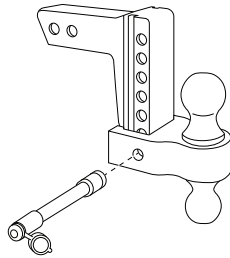

STEP 2: Insert the keylock pin into the Drop Hitch when you have achieved the desired position along the drawbar.

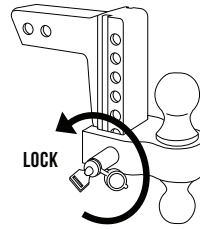

STEP 3: To lock the keylock pin in place, turn key counter clockwise. To unlock, turn key clockwise.

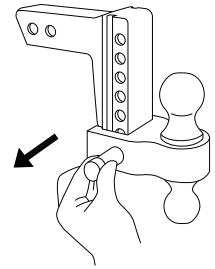

STEP 4: Pull keylock pin to ensure that it has been engaged. Do not operate without making sure keylock assemble is securely locked in place.

IMPORTANT SAFETY INFORMATION

Ensure safety chains are attached between vehicle and trailer. DO NOT attach chains directly to hitch. Do not exceed either the Tow vehicle's rated load or your Trailer Valet Drop Hitch capacity rating. Secure your Trailer Valet Drop Hitch to receiver with keylock or hitch pin.





BLACKOUT SERIES

Ball Mounts & Drop Hitches

blackout
SERIES



SKU

BSDH0010

BSDH0011

BSDH0020

BSDH0040

BALL SIZE

2"

2"

2" AND 2-5/16"

2" AND 2-5/16"

DROP

2"

4"

2"

0-6"

RISE

N/A

N/A

2"

5-1/4"

TYPE

STANDARD

STANDARD

REVERSIBLE

ADJUSTABLE

CAPACITY

5,000 LBS

6,000 LBS

6,000/7,500 LBS

14,000 LBS

MATERIAL

STEEL

STEEL

STEEL

STEEL

CLASS

CLASS III

CLASS III

CLASS III

CLASS V



SKU

BSDH0030

BSDH0031

BSDH0032

BSDH0033

BALL SIZE

2" AND 2-5/16"

2" AND 2-5/16"

2" AND 2-5/16"

2" AND 2-5/16"

DROP

0-4"

0-6"

0-8"

0-10"

RISE

0-4"

0-6"

0-8"

0-10"

TYPE

ADJUSTABLE

ADJUSTABLE

ADJUSTABLE

ADJUSTABLE

CAPACITY

8,000/10,000 LBS

8,000/10,000 LBS

8,000/10,000 LBS

8,000/10,000 LBS

MATERIAL

ALUMINUM

ALUMINUM

ALUMINUM

ALUMINUM

CLASS

CLASS IV

CLASS IV

CLASS IV

CLASS IV

