 


REVIVE TURNTABLE

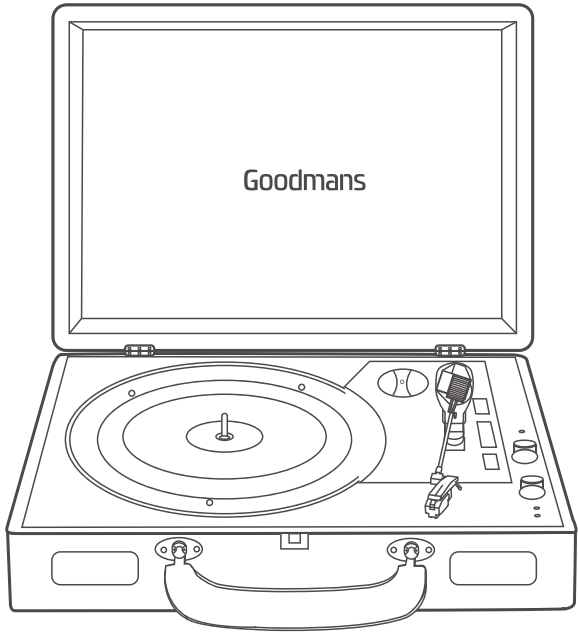

MODEL: 347753

USER MANUAL



Goodmans

1 Welcome

2 Your Revive Turntable

2.1 In The Box

2.2 Front View

2.3 Back View

3 Quick Setup

3.1 AC Power Operation

3.2 Bluetooth Operation

3.3 Line in Operation

3.4 Line Out

3.5 Headphone Out

3.6 Playing a Record

4 Troubleshooting

5 Technical Specifications

6 EC Declaration

1 Welcome

Thank you for choosing this Goodmans product. We've been making electrical products for the British people for over 90 years. Each of our projects have been carefully designed to be great at what they do and this one is no exception. We hope you enjoy your new Revive Turntable.

2 Your Revive Turntable

2.1 In The Box

Carefully remove your Revive Turntable from the box.

Inside the box you will find:

- 1 x Main Unit
- 1 x AC adaptor
- 1 x Line in Cable
- Quick Start Guide
- Instruction Manual
- Guarantee & Safety Leaflet

2.2 Front View

1 Turntable lid

2 Lock catch

3 Tone arm lift

4 Speed selection

5 Line in port

6 Function control

7 Power switch / Volume control

8 Headphone output

9 Auto stop ON / OFF

 
10 Speaker

11 Cartridge

12 Turntable platter

13 Carrying handle


14 45 RPM adapter

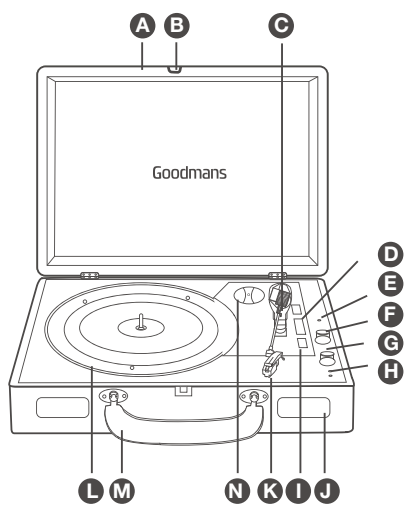

2.3 Back View

1 Line out

 2 DC-In socket

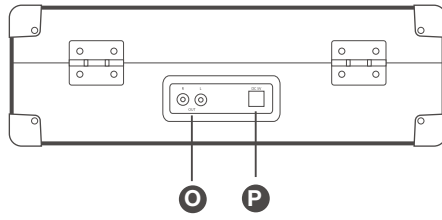


3 Quick Set Up

3.1 AC Power Operation :

1. Insert the DC plug of the adapter into the DC Jack on the back of the unit.

 2. Plug the AC Adapter plug into the mains outlet. Connecting this system to any other power source may cause damage to the system.

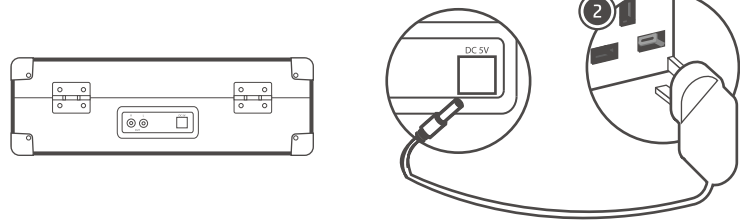


3.2 Bluetooth Operation :

1. Turn the function control to the BT position, The blue indicator light will begin to flash.

2. Turn your devices Bluetooth setting on ,and search devices.

3. Select the Bluetooth pairing name "GOODMANS TURNTABLE "to connect to the record player

 4. Once you are connected the blue indicator light will stop flashing ,you can now play music from your device through your record player ,use the volume control dial to adjust the volume

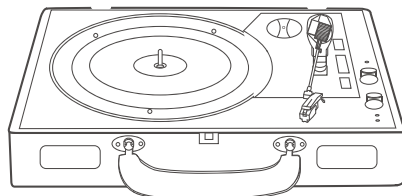

Note: After initial pairing the record player will stay paired to your device unless it is unpaired manually or the device is reset .

3.3 Line in Operation :

1. Use an audio cable with one 3.5mm stereo plug on each end of the cable .

2. Plug one end into the line-in jack on the main unit and plug the other end of the cable into the line-out of your external audio device.

 
3. Turn on the unit and your external audio device.

4. To select auxiliary audio input turn the function control to the line-in position.

5. The volume level can now be controlled through the main unit. Operate all other functions on the auxiliary device as normal.

3.4 Line Out


1. You can listen to your new turntable using the built in speakers but you may wish to connect it to your existing Hi Fi system. Connect the audio plugs to the line input on your mixer or amplifier using an RCA cable

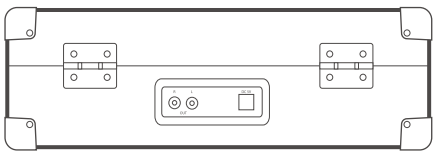

Line out cable not included

3.5 Headphone Out:

 1. Use a wired earphone or headphone (not included) and insert the 3.5mm stereo plug in phone jack on the turntable.

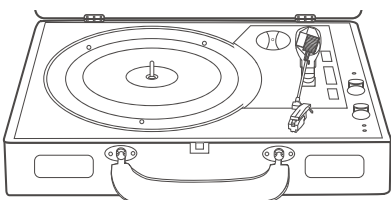

3.6 Playing a Record

1. Carefully holding the vinyl record by the edges, place the record on the Revive Turntable.

2. Turn on the power and select Phono mode.

3. Select the correct speed for the record that you want to play.

4. Release the tone arm lock.

 
5. Carefully raise the tone arm. The turntable will start to rotate.

6. Place the stylus over the first track of the record.

7. Put down the stylus slowly on to the record to play.

8. When a record reaches the end, the turntable will stop automatically if the auto-stop switch is in the ON position.

9. Lift up to the tone arm and put it on the rest when finished. and replace the tone arm lock.

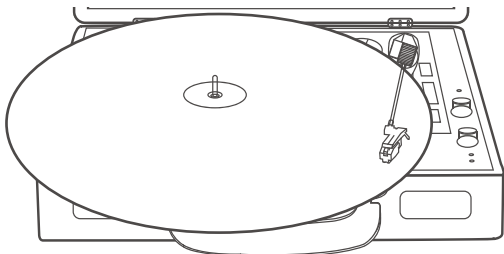

4 Troubleshooting

Problem	What to do
Power does not come on when the unit is switched on.	Plug the AC adapter into a wall outlet.
No sound comes out of the speakers.	Adjust the volume. Re-select the desired input source using the mode button
The unit does not respond.	Remove the power cord and all other power supplies from the device, and then plug in the unit again after one minute.
The sound is distorted when playing the record.	Place the stylus in the centre.
Unit gets warm after extended play at high volume.	Turn the unit off a period of time or lower volume.

5 Technical Specifications

Model number	347753
Bluetooth version	JL 5.0
Input	AC 100-240V ~50/60Hz
Power supply	5V ±1000mA
Speaker driver	40 x 70mm, 4OHM
Speaker power	2 x 3W
Dimensions	W355 x D120 x H278mm
Weight	2600g

6 EC Declaration

This Product is intended for use within the UK

This appliance complies with the below listed EU directives
2014/50/EU Electromagnetic Compatibility Directive
2014/35/EU Low Voltage Directive
2011/65/EU Restriction of Hazardous Substances Directive
2014/53/EU Radio Equipment Directive
2009/125/EC Eco-design Directive

The complete declaration of conformity is available upon request for relevant enquiries.

 Bluetooth® is a trademark on a registered trademark of Bluetooth SIG Inc.

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

 This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).
Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.
For proper treatment, recovery and recycling, please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.
If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.



Made in China
Imported by B&M Retail Ltd., Dakota Drive, Liverpool, L24 8RJ, UK

Goodmans

尺寸：148*210mm

材质：200G铜板纸，单黑印刷，要85%的黑色印刷