


Outdoor Furniture Maintenance Instruction

Sumpar wood has the same texture as natural wood while being outstandingly water and weather resistant. With minimal care, you will be able to clean and maintain its beauty. Work these steps below into your maintenance routine and you're assured many seasons of fabulous and stylish outdoor lounging.

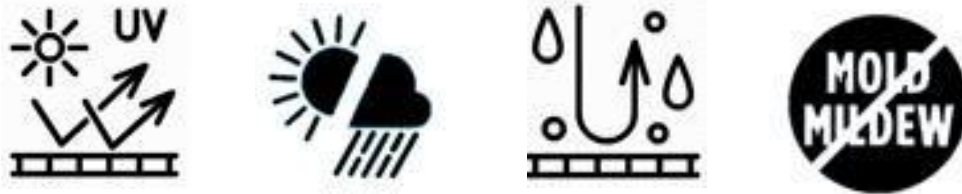

Simple Maintenance Key Points for Sumpar wood Outdoor Furniture:

- Use heat-resistant pads under hot items (i.e. pots, pans, dishes, baking sheets, etc.) to avoid heat damage.
- Place coasters under any glass items to avoid heat damage from refracted sunlight.
- Rest cold beverages on coasters to catch any drip and avoid moisture rings.
- Light cleaning is best done with a cloth moistened with water or a mild soapy solution to remove dirt and debris.
- For a deeper cleaning at the start or finish of each season, you can scrub with a soft brush and a mix of water and dishwasher detergent.
- Use non-abrasive cleaners such as dish wash detergent to remove oil stains immediately after it's formed to avoid long-lasting stains.
- Do not place sharp objects on furniture surface so as to avoid damaging or scratching the surface.
- Clean sling items with dish detergent and water mixture with soft brush to remove dirt.
- Tip furniture on its side to drain water and help it dry.
- Check bolts, screws, hinges, and other working parts periodically.
- The best way to remove surface imperfections, such as scratches and small dents, is to use a scouring pad. Sand lightly with the grain.
- Regularly brush off cushion's dirt and debris, and rinse as needed.
- Cover items when they're not in use, or store them indoor for protection. (Do not use furniture covers made of 100% polyester.)

