

TDX

Infrared Heater 740101

IMPORTANT INSTALLATION AND WARRANTY INSTRUCTIONS

Thank you and congratulations on your purchase of the TXD infrared tube heater.

Please read these instructions carefully before installing and using the product. Keep the instructions handy for future reference

Electrical mounted must only be done by a licensed electrician and a "Certificate of Compliance must be issued at the completion of the installation.

LOCATION

The unit must be located and installed in accordance with AS/ NZS60335 and local building codes relating to damp situations.

 
The unit can be installed in any room that requires direct radiant heating such as the Dining room, outdoor courtyard, balcony, living room, etc. The unit can be installed on the wall.

POWER


AC 240V/50Hz electrical supply is required. All electrical work must be carried out in accordance with AS/ NZS60335 or the latest edition thereof, and local building codes and regulations. Ensure that supply power is isolated before commencing installation.

Mounting

1. Confirm the installation location: this product must be installed on a wall above 1.8 meters from the ground and must be kept away from flammable materials.
2. Drill the mounting holes: remove the mounting bracket from the product. According to the hole position of the fixed bracket, mark the punching point with a marker pen. And drill with a $\phi 8\text{mm}$ drill bit at the mark position, and the drilling depth is more than 35mm
3. Fix the mounting bracket: the drilling position corresponds to the bracket hole position on the wall panel, then drive the expansion rubber plug into the wall, and use self-tapping screws ST5*40 to fix the mounting bracket on the wall.
4. Fix the heater: make the product connect the fixing bracket, adjust the appropriate angle, and fix the heater with screws and nuts. (The fixing screws can be installed in different holes, and the maximum adjustment angle is 30 degrees. The adjustable angle of the wing nut end slot is 10 degrees. Through the cooperation of the double holes and the wing nut end slot, the user can adjust the heater angle to meet the different heating requirements.)
5. post-installation inspection: after the installation is completed, confirm that the product is fixed and tightened
6. without loosening, and it works normally when powered on.

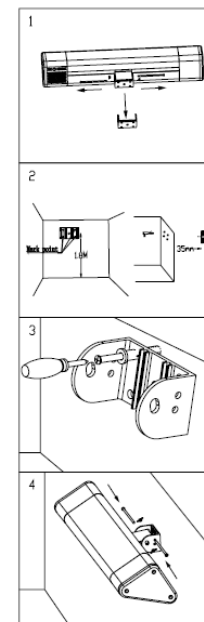


Circuit Diagram

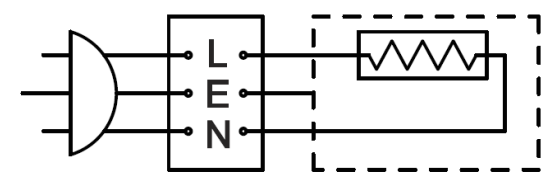 

240V~50Hz

REMOTE CONTROL:

 - 1. Press one of these buttons 1H 2H 3H 4H 5H 6H 7H to turn on and set the time duration.
- 2. Put  this button to turn off

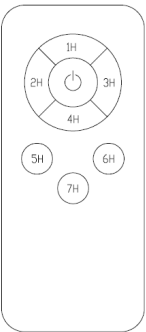

MAIN TECHNICAL PARAMETERS

Model No.	Voltage (V)	Heat (W)	Hertz (HZ)	Dimensions (W x D x H mm)	Weight (KG)
740101	240	1500	50	745x167x104	2.5

CARE AND MAINTENANCE

- Attention!
- Careful and regular maintenance of your heater considering our instructions assumes great importance to attain a long efficient operation of your appliance.
- 1. Check the filthiness of the Reflector and Heating pipe at least once a month. If necessary, apply cleaning and maintenance instructions.
 - 2. The number of checks may be increased considering the amount of dust in the environment.
 - 3. Check the deformation of the Reflector, Wire and Frame visually while cleaning the appliance. In case of deformation, consult your technical service.
 - 4. Check the Power Cord and Plug visually while cleaning the appliance. In case of deformation, consult your technical service.

Replacement Heat Tube

Heat tube: the heat tube must only be replaced with 1500W (maximum) globes.
Size: 486mm with lead line

