

Quikcell

Factory Instructions | Wireless Party Speaker Quick Start Guide

PMS 4054c C/M/Y/K: 6/1/6/7/24	PMS Cool Gray 8c C:33 M:24 Y:20 K:2	PMS 448c C/M/Y/K: 71/53/55/53	PMS Cool Gray 8c C/M/Y/K: 44/54/29/10
----------------------------------	--	----------------------------------	--

CHARGING YOUR SPEAKER

 
Plug micro-USB into Party Speaker and USB into a compatible port (such as a wall charger, car charger, or computer). LED indicator light will be RED while charging and goes off when fully charged.

Conecta el micro-USB en Party Speaker y el USB en un puerto compatible (como un cargador de pared, un cargador de automóvil o una computadora). La luz indicadora LED será ROJA durante la carga y se apagará cuando esté completamente cargada.

**USB charging port not included*

**Puerto de carga USB no incluido*

STEP 1

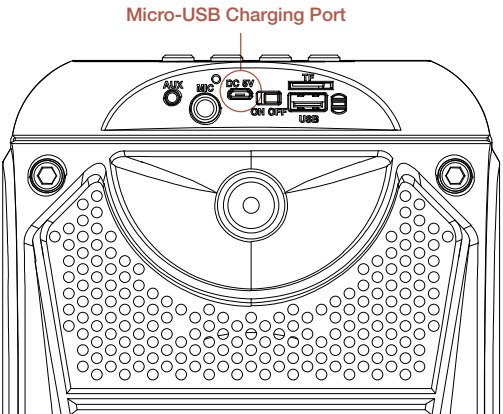


PAIRING YOUR DEVICE

On the front of your Party Speaker slide the ON/OFF switch to ON. You will then see the LED indicator light flashing blue and hear "The Bluetooth device is ready to pair." In your devices Bluetooth settings look for "PARTY SPEAKER" to appear as an option and select. You will then hear "Bluetooth device paired successfully" and the LED indicator light will be solid blue. Your device is now successfully paired!

En la parte delantera de tu Party Speaker, desliza el interruptor de ENCENDIDO/APAGADO a la posición de ENCENDIDO. A continuación, verás la luz indicadora LED parpadeando en azul y escucharás "El dispositivo Bluetooth está listo para emparejarse". En la configuración de Bluetooth de tus dispositivos, busca "PARTY SPEAKER" para que aparezca como una opción y selecciona. A continuación, escucharás

 STEP 2

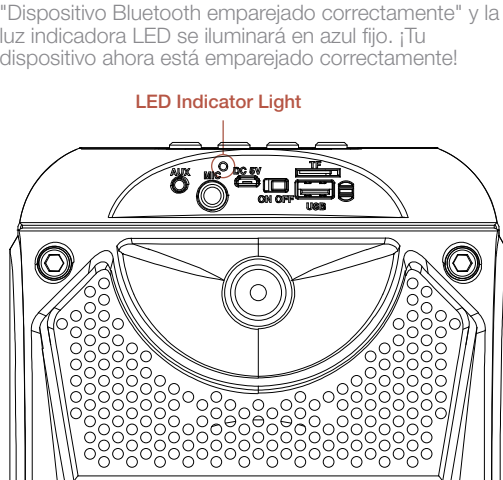

BLAST THE SOUND!

Flip the switch on the Party Speaker to turn ON/OFF.

Mueve el interruptor del Party Speaker para encenderlo o apagarlo.

Use the + and - buttons to adjust volume, skip songs, or switch stations.

Usa los botones + y - para ajustar el volumen, saltar canciones o cambiar de estación.

Use the PLAY/PAUSE button to control music, answer, end or decline phone calls, scan FM stations, and enter/exit TWS pairing.

Usa el botón REPRODUCIR/PAUSA para controlar la música, contestar, finalizar o rechazar llamadas telefónicas, escanear

STEP 3

 
estaciones de FM e ingresar/salir del emparejamiento TWS.

FCC Warning
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
•Reorient or relocate the receiving antenna.
•Increase the separation between the equipment and receiver.
•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
•Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


LIGHT UP!

Easily turn your light show ON/OFF by long pressing your Mode button.

Enciende/apaga fácilmente tu espectáculo de luces presionando prolongadamente el botón Modo.

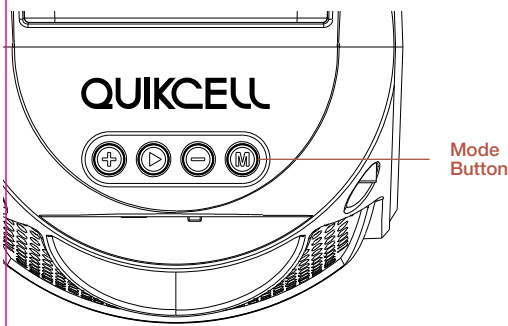

 STEP 4

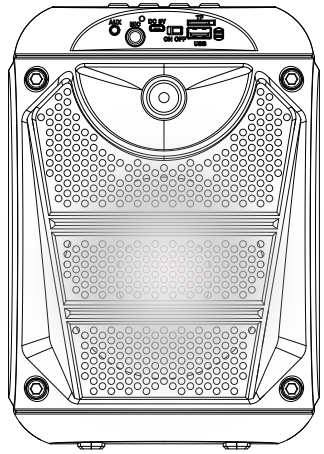

SPECIFICATIONS

Dimensions (w x h x d): 7 x 10 x 7 in
Dimensiones (ancho x alto x profundidad): 7 x 10 x 7 pulgadas

Music Operating Time: 15 H (at 50% volume)
Tiempo de funcionamiento de la música: 15 h (al 50% del volumen)

Phone Operating Time: 15 H (at 50% volume)
Tiempo de funcionamiento del teléfono: 15 h (al 50% del volumen)

Charging Time: 3-4 H
Tiempo de carga: 3 a 4 horas

Bluetooth Standard: JL V5.0
Estándar de Bluetooth: JL V5.0

Operation Range: 32 ft
Rango de operación: 32 pies

 
Voltage: DV 5V
Voltaje: DV 5V

Output Power: 10W
Potencia de salida: 10W



Battery Type: Lithium Ion 1200mAh
Tipo de batería: Ion de litio 1200mAh

WHAT'S INSIDE

- 1 Portable Wireless Speaker
Altavoz Inalámbrico Portátil
- 2 Micro-USB Charging Cable
Cable de Carga Micro-USB

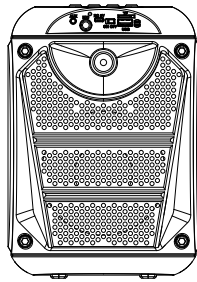

HEADPHONE CONTROLS

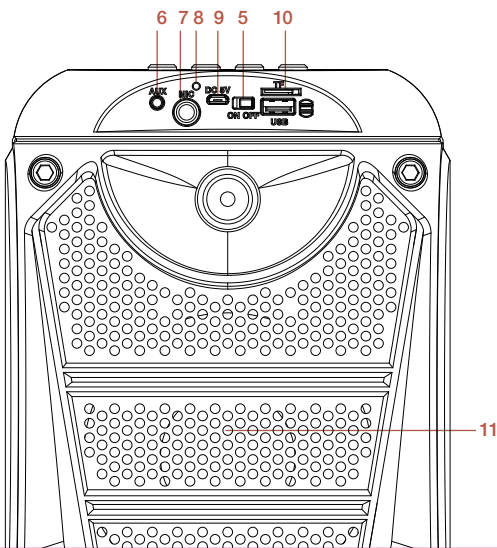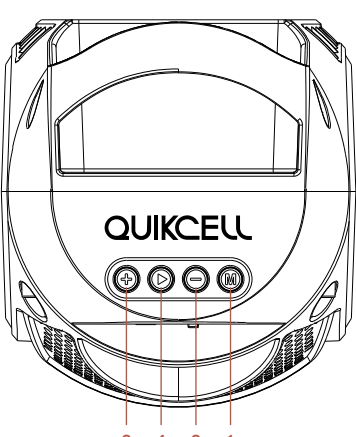  

1. Mode [M] Button
 - Short Press = switching between BT, line-in, and FM connections
 - Long Press = LED lights on/off

1. Botón de modo [M]
 - Pulsación corta = cambiar entre conexiones BT, line-in y FM
 - Pulsación larga = luces LED encendidas/apagadas

2. [+] Button
 - Long Press = increase volume
 - Short Press = skip to next song, or play next radio station when in FM mode

2. Botón [+]
 - Pulsación larga = subir el volumen
 - Pulsación corta = saltar a la siguiente canción, o reproducir la siguiente estación de radio cuando está en modo FM

3. [-] Button
 - Long Press = decrease volume, or play previous radio station when in FM mode
 - Short Press = skip to previous song

3. Botón [-]
 - Pulsación larga = bajar el volumen o reproducir la estación de radio anterior cuando está en modo FM
 - Pulsación corta = saltar a la canción anterior

4. [Play, Pause, Answer] Button
 - Short Press = play/pause music & answer phone calls, scan FM stations
 - Double Press = enter/exit TWS pairing

4. Botón [Reproducir, Pausar, Responder]
 - Pulsación corta = reproducir/pausar la música y contestar llamadas telefónicas, buscar estaciones de FM
 - Doble pulsación = entrar/salir del emparejamiento TWS

5. [ON/OFF] Switch
5. Interruptor [ENCENDIDO/APAGADO]
6. AUX-In Jack
6. Conector de entrada auxiliar
7. Microphone Input
7. Entrada del micrófono
8. LED Indicator Light
8. Luz LED Indicadora
9. Micro-USB Charging Port
9. Puerto de carga Micro-USB
10. TF Card Port
10. Puerto de tarjeta TF
11. LED Light Show Light
11. Luz LED para espectáculo de luces

FLIP OVER →

Notes

- L x W x H = 3in x 3in
- Paper Color: matte Off White (Same as package color)
- Paper Weight: Card Stock 100lb
- Z-fold Brochure