



**JVA Solar Wi-Fi Anywhere
Quick Start Guide**

**WA100
PTE2703**



Wi-Fi Anywhere



Introduction

The PTE2703 JVA Wi-Fi Anywhere (WA100) provides an integrated Wireless Cellular USB Dongle (Wingle) power supply with a solar battery charger and management system.

This product provides a Wi-Fi network wherever a 3G/4G signal is available*. The Wi-Fi can then be used to connect an IP device or Internet of Things (IoT) device to the Cloud (Internet).

The JVA Solar Wi-Fi Anywhere is installed with an ALDI SIM card at the factory, all you need to do is:

1. Register the SIM card
2. Connect any Wi-Fi enabled device to the network provided

This quick-start guide explains how to deploy your WA100 and connect a battery ready for Wi-Fi connections.

*An external cellular antenna (included) may be connected to increase reception. An upgraded YAGI style antenna is available from sales@jva-fence.com.au

Specifications

Component	Information
Solar Panel	Nominal 12v Solar Panel (maximum open circuit voltage - 22v DC) Maxmium Power 100W
Battery	Nominal 12.8v DC Minimum Battery size 150Ah A larger battery may be required if any additional 12v device is connected to the battery
Outputs(1)	12v DC SAE Connector Used for powering the IP Monitor



Component	Information
Outputs (2)	12v DC Battery Connector Alligator clips for battery connection
SIM	Full Size
Wi-Fi	2.4GHz b/g/n Up to 10 connections at a time
Network (Huawei E8372)	3G 850/2100MHz 4GX 700MHz + 4G B1/3/7/21
Antenna Connector	Female SMA Ensure antenna is mounted away from sources of interference such as AC or high voltage cables.

Troubleshooting

Fault	Likely Cause	Remedy
No lights are on	Power is not connected Power wires are reversed	Check power connections Check battery polarity
Batt level flashing	Battery disconnected Bad battery	Check battery connections Check battery voltage
USB_5V LED off	USB device drawing too much current	Unplug USB device, check for damage/ seek manufacturer advice

Fault	Likely Cause	Remedy
Battery not charging	Solar wiring backwards	Check that the Solar + goes to the left-hand screw terminal
	Broken cables	Check that the battery cables are not damaged
	Solar panel broken	Check solar panel for physical damage (broken glass, bent frame etc.)
Cannot connect to Wi-Fi	Low signal from 3G/4G	Check management page of Wingle
	Out of Wi-Fi range (~10m)	Move closer to Wingle
	SIM card not inserted correctly	Re-insert SIM card

If the unit is still not working correctly, contact your nearest JVA distributor for technical support.

Before you start

Activate the SIM card

Activate your SIM card and test it in a mobile phone. The Wi-Fi network allows a data-only connection, the number of devices connected to the module will determine how much data will be used.

As a guide, a single IP Energiser or IP Monitor will use less than 1MB per day, so for connecting a single IP Energiser, an upper limit of 500MB per year is an option with a lot of headroom.

Deployment and Orientation


1. Unpack the solar kit from it's packaging. Look inside the packaging for a set of U-Bolts.




2. Remove the U-Bolts from the zip lock bag and mopunt it to the top and bottom panel of the bracket.

(A) U-Bolt x 2 (B) Top or Bottom Panel


(C) Washers x 4 (D) Spring Washers x 4 (E) Hex Nut x 4

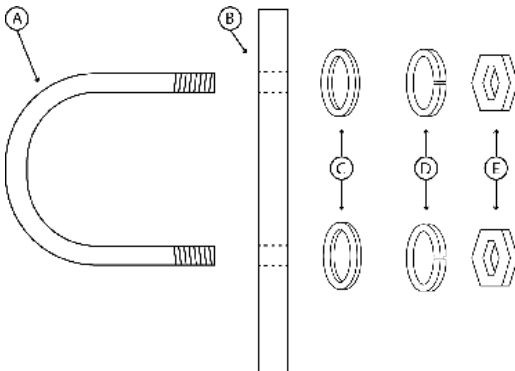

3. Loosen the 6 bolts on the inside of the frame that are used to hold the solar panel at a right angle. DO NOT completely remove these bolts.

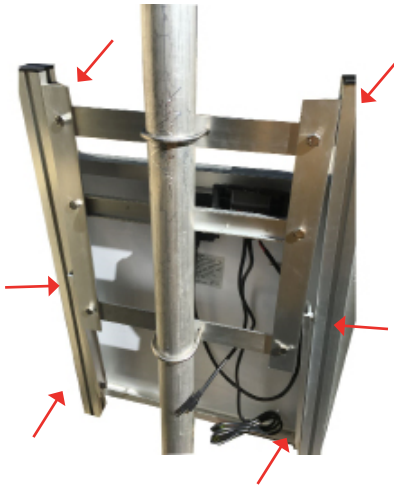


4. Lift the bottom of the solar panel until the attached arms holding it are angled at 90 degrees. Tighten all 6 bolts again from step 3.

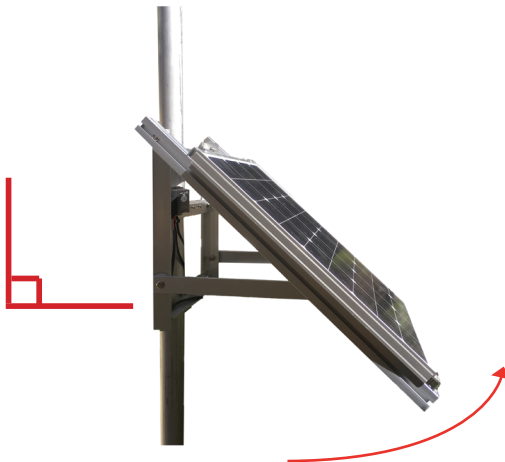

5. Attach the red and black eyelet crimps to the battery

To find a battery that will suit you, visit our website:

<https://jva-fence.com.au/solar.php>

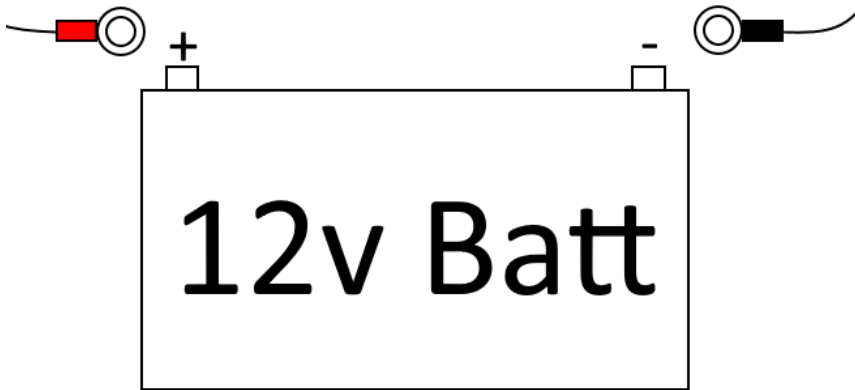

6. Alternative wiring:

The following diagram shows an alternative method for wiring the Solar Kit. The battery is connected directly to the solar kit and the Wi-Fi device.

The solar kit will have a spare connector (load cable), but the solar kit will still operate properly.



Overview

Weatherproof
Plastic Enclosure


Wingle


Antenna Port

Solar Panel

Load Output

Battery

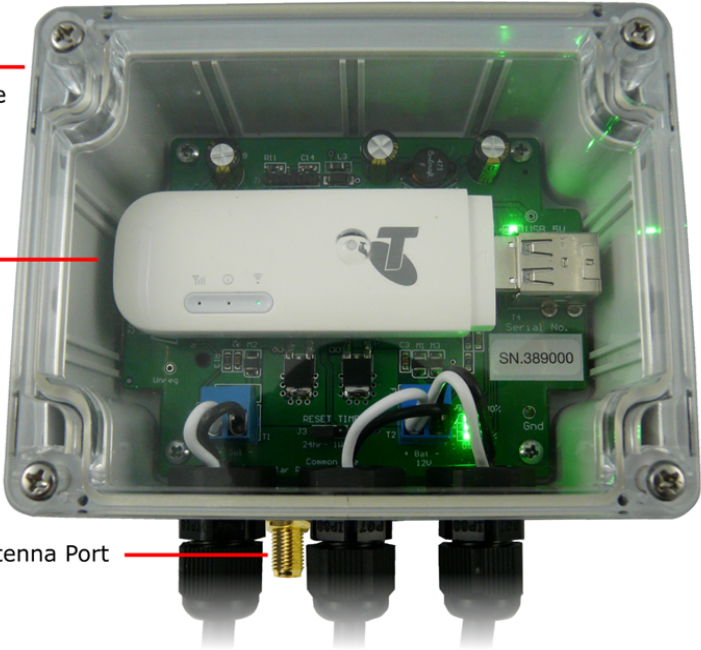

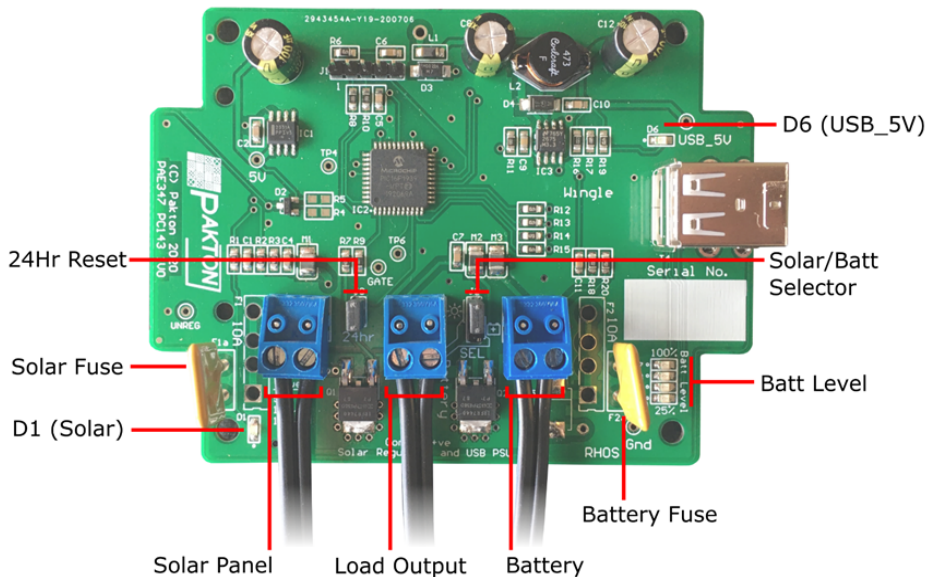

LED Indicators

D1 (Solar)	Solid on when solar panel in sunlight Blinking when solar panel in low power conditions Off when no solar power detected
D6 (USB_5V)	Solid on when USB Power is turned on
Batt Level	Bottom LED flashes if no battery is disconnected or bad Shows battery level from bottom to top: 25% to 100%

JVA Distributors

If you have questions or need further assistance, please email us at sales@jva-fence.com.au or call

Region	Number
Australia	0731 030 582
South Africa	0861 782 349
World Wide	+61 731 030 582

For more information on our complete range of electric fencing products please see the JVA website at <https://www.jva-fence.com.au>



Tel : +61 (0)499 000 455 Email : sales@jva-fence.com.au

www.jva-fence.com

