


NAZONNI

Portable Smoke Infuser

USE AND CARE GUIDE

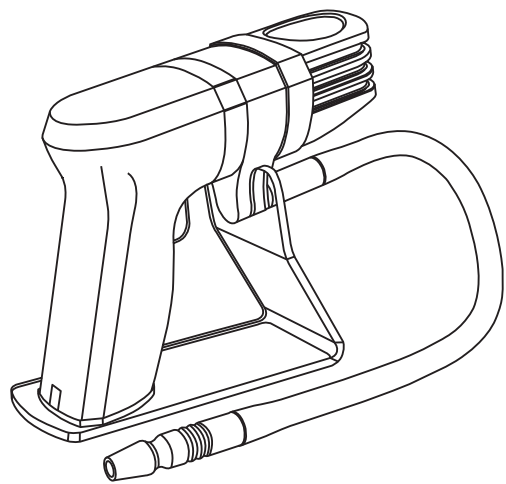

SM010A


SAFETY INSTRUCTIONS

1. This product is intended for household use only. Do not use this product for anything other than its intended use. Do not use it in moving vehicles or boats.
2. Keep this product clear of walls, curtains and other heat or steam sensitive materials a minimum distance of 8 inches.
3. Avoid using this product in areas where smoke may activate smoke alarms or fire suppression systems.
4. Do not leave the product unattended while powered on.
5. Do not attempt to burn anything other than small wood chips, wood sawdust, or dried Herbs in the chamber.
6. Never operate this product without the stainless steel mesh filter in place. Burning/glowing embers may enter the body and damage the unit or be ejected through the nozzle, creating a fire or burn hazard.
7. Always empty the burnt remains into a non-flammable container.
8. In case the unit is overheated, please don't start it again before it's completely cooled down.


01

OPERATION DIAGRAM


- 1

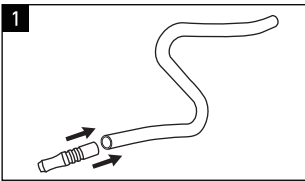


1. Insert the nozzle into the silicone hose.
- 2

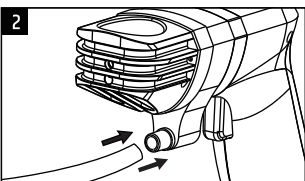

2. Insert the other end of the silicone hose into the front of the rigid tube.
- 3

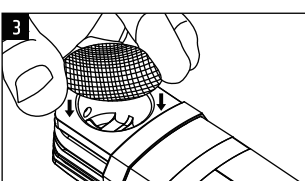

3. Place the mesh filter in the top of the burn chamber and press down to seat it into the bottom of the burn chamber. Place a small amount of wood chips (or desired smoking materials) into the burn chamber.
- 4

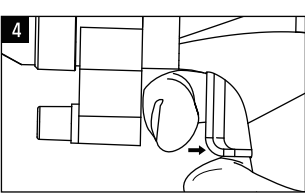


4. Press the trigger to activate the fan. Use a handheld lighter or match to apply a flame to the top surface of the wood chips. For best results make sure the burning area is evenly distributed.

WARNING!
The burning chamber and the barrel are very hot during and after use. Do not touch!


02

BATTERY INSTALLATION


- 1

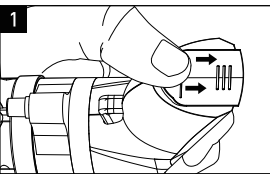

1. Access the battery compartment by sliding the cover as indicated by the red arrow, then remove the cover.
- 2

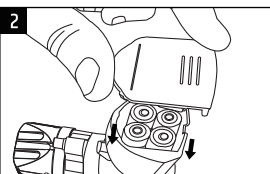

2. Install 4 AA batteries, making sure to orient them as indicated on the inside of the battery compartment.
- 3

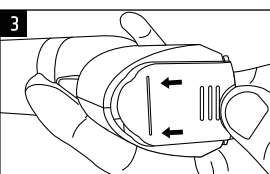


3. Slide the battery compartment cover back into place.

* Remove the batteries if the unit is not going to be used for an extended period of time to prevent battery corrosion.

03


CARE & CLEANING

Quick Cleaning (Recommended after each use)

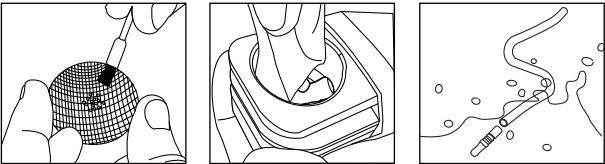

1. Before cleaning, make sure the device is completely cooled down and the power switch is OFF.
2. Use a damp cloth to wipe off the main unit. It CANNOT be immersed in water.
3. Clean the residue from the Mesh Filter with a small brush (Figure 1)
4. Wipe the residue from the Burn Chamber with a paper towel (Figure 2)
5. Clean the Hose and Nozzle with warm, soapy water (Figure 3)

Deep Cleaning (Recommended after 10-minutes of use)

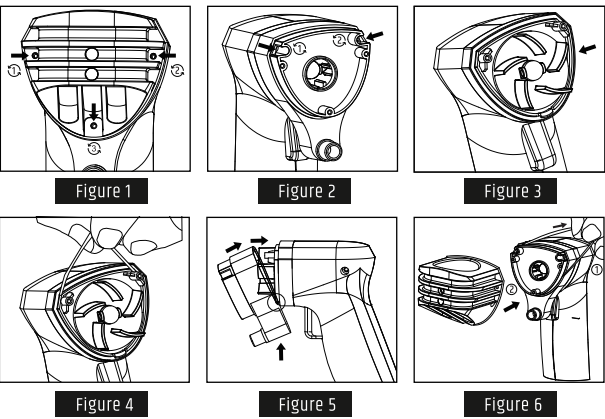

04

CARE & CLEANING

1. Before cleaning, make sure the device is completely cooled down and the power switch is OFF.
2. Use a damp cloth to wipe off the main unit. It's NOT machine-washable.
3. Unscrew the Burn Chamber screws with a screwdriver and remove from the burn chamber. (Figure 1)
4. Unscrew the Hose Holder's screws and remove from the burn chamber. (Figure 2)
5. Wipe the visible residue from the fan blades with a cloth and warm, soapy water. (Figure 3)
6. Complete the Quick Cleaning steps with a cloth and warm, soapy water.
7. Confirm the fan blades are well-placed. (Figure 4)
8. Reinsert the Hose Holder screws. (Figure 5)
9. Reinsert the Mesh Filter screws. (Figure 6)

* CLEAN CAREFULLY AND DO NOT USE TOO MUCH FORCE.

TROUBLESHOOTING

FAN NOT STARTING

- Check orientation of batteries.
- Replace batteries.
- Deep clean the unit, especially the residue and the oil on the fan blades.

NO SMOKE GENERATED

- Ensure the mesh filter is not blocked.
- Ensure the hose is not blocked.
- When using a container, ensure there is an outlet for the air to escape.
- Ensure wood chips are dry and small.

05

PACKAGE CONTENTS

Description	Image	Qty
Smoke Infuser		1
Smoker Stand		1
Filter Mesh		5
Silicone Hose		1
User Manual		1
Tweezers		1
Screwdriver		1
Cleaning Brush		1
AA Batteries		4
Wood Chips (APPLEWOOD, CHERRYWOOD, HICKORY, PEAR)		4

06

SPECIFICATION

Item list	Specification
Model	SM010A
Product size	6.4 x 2.2 x 4.9 INCHES
Rated voltage	DC6V AA × 4 PCS
Smoke level	3.0 L / MIN
Noise	< 60 dB
Net weight	0.7 LBS
Gross weight	1.3 LBS
Material	ABS + Aluminum

Do not dispose of electrical appliances as unsorted municipal waste, please use separate collection facilities. Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

07