

CB-4G QUICK START GUIDE

SIM Service



This product comes with a SIM card, which will run on At&T service. You must have At&T signal in the area for this unit to operate. Please survey the location for signal BEFORE installing this device.


Earthing



This product MUST be EARTHED in the following states in order to qualify for manufacturers warranty
FL, LA, MS, AR, OK, MO, AL, IL, KY, TN, IN, KS, SC, GA, IA, TX, OH, NC, NE, MD, WV, VA, DE


Site Wiring

Use 110V surge protection!

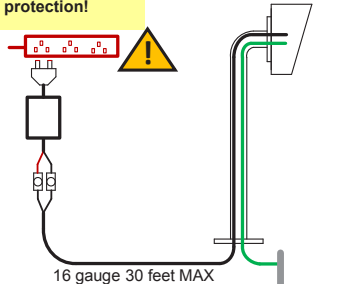


Earth rod close as possible to device!

Wiring Relays

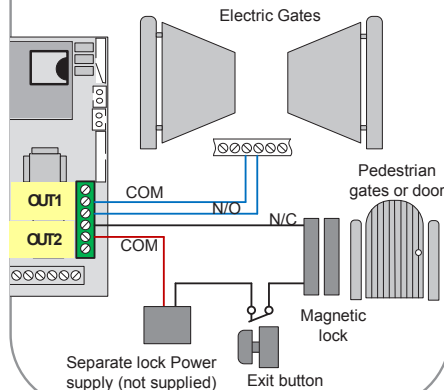


Inserting SIM

 



Power OFF!
NANO SIM
45 chamfer IN pads DOWN

Power

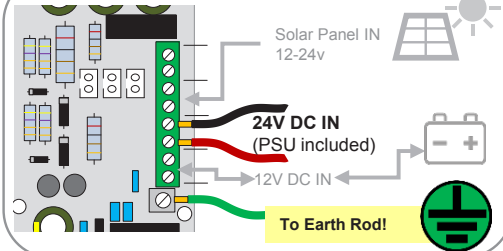

LEDs

Ensure your SIM is activated!

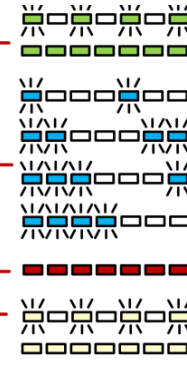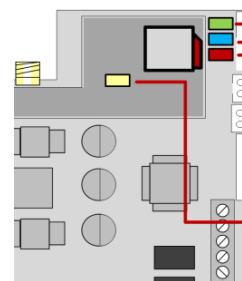

CPU
Flashing = standby
Constant ON/OFF = busy


SIGNAL STRENGTH
1 flash = poor (1 bar)
2 flashes = low (2 bars)
3 flashes = good (3 bars)
4 flashes = Strong (4 bars)
5 flashes = searching

POWER

MODEM
Flashing = standby
Constant ON/OFF = searching

Basic Programming

1.

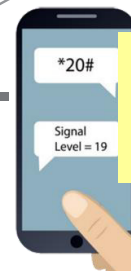

Check for Signal
Use your phone to send SMS *20# to the intercom cell number.
Intercom should reply, 1-31 (1=min, 31=max)
Less than 10 is too low!

2.

Setting APN
Only do this if the signal reply is 3G. APN details for various networks in main manual and can be searched online. To change APN send SMS below..

9999#97APNinfo#
Pass code APN info for network
Function code

3.

To Set Dial out phone numbers..
Send SMS below..

9999#111telephonenumber#
Pass code Data
Function code (add number) Telephone number position 1-4
Button number (1-10)

4.

To program keypad codes..
Send SMS below..

9999#811code#time#
Pass code Function code 1 = Relay 1 2 = Relay 2 4 digit user code =SECONDS 1-9999 0 = Latching

Scan to view full instructions



SCAN ME

5.

To program caller ID phone numbers
Send SMS below..

9999#72telephonenumber#72telephonenumber#
72telephonenumber#72telephonenumber#



For more information, please visit www.devancocanada.com or call toll free at 855-931-3334