

Thank you for your recent purchase - we hope you enjoy your new cordless lamps.

We would love to hear what you think and value any feedback you may have. You can either contact us by email, phone, Facebook or Twitter using the @CordlessLamps handle.

We have included this User Manual for your convenience, should you have any queries about any aspect of your lamp, please do not hesitate to contact us by email info@insightcordlesslighting.com one of our team will only be too happy to help.

USING THE REMOTE CONTROL

Start by removing the plastic strip from the bottom of the remote control.

ON/OFF: To activate the lamps simply press the On button, and to deactivate simply press the Off button. One remote control will operate multiple lamps.

Colour Selection: Control the colour of your lamp. Choose from 16 LED colour options.

Brightness Control: Adjust the brightness of each lamp. [Battery life will be extended on the lowest intensity.](#)

Transitional Effects: 4 different transitional effects to choose from - FLASH, STROBE, FADE, SMOOTH. Each effect switches between a pre-programmed colour selection at different speeds.



ACTIVATING YOUR LAMP

To activate your lamp press the on/off button on the base/bottom. The lamp should switch on. If your lamp doesn't switch on, make sure it is fully charged. [*You will need to activate your lamp everytime the battery has been fully exhausted.](#)

When the lamp needs recharging follow the below instructions for charging your lamp.

HOW TO RECHARGE YOUR LAMPS

Insert the USB cable into one of two ports located at either end of the charging base. Plug the adaptor to the power supply.

Indicators on the charging base will light up to notify the base is now connected to a electricity supply. If the indicator light fails to show up, check the cable is plugged in correctly and you are using the correct power adaptor.

Place your cordless lamps onto the charging base using the pins as a guide to the centre of the lamp. A red indicator light inside the lamp will illuminate when charging.

The indicator light inside the lamp will turn green when fully charged and ready to use. The charging of the lamps should take upto 6 hours to complete. To extend the operating life of the charging base, its advisable to leave the plug sockets attached in order to prevent any wear and tear of the entry ports.

Due to the nature of Induction charging, we advise that the lamps are removed from the charging pad once fully charged.

* Lamps and accessories may vary.



IMPORTANT INFORMATION

- * Do not place lamp on an unstable surface or heat source.
- * Do not use a damaged power cord.
- * Do not immerse into water.
- * Do not expose lamp to extreme humidity and hot environments.
- * Use the lamp regularly - batteries like to be exercised for optimum life.
- * Always store lamp with charged battery.
- * Always use the correct power adaptor to charge the lamps. [Do not use a 12V adaptor in a 5V charging base as this will damage the lithium ion battery.](#)

BATTERY MAINTENANCE

- * The Cordless Lamps are powered by rechargeable lithium-ion battery packs.
- * The batteries will perform to their optimum service life if operated with care.
- * Please read the following tips to keep your lamp battery in the best condition:
 1. Rechargeable batteries like to be frequently charged for optimum life
 2. Recharge the lamp at least once a month
 3. For storage longer than 1 month, always store your lamps fully charged and turn off using the manual on/off button on the base of the lamps. Avoid high temperature.Operating and storing lamps in hot environments will impair performance and shorten battery life.

WARRANTY POLICY

We warrant all products sold to be free from defects in materials and workmanship for a period of 12 months from the date of purchase. We shall repair or replace any part which is found to be defective within the warranty period. This warranty extends only to the original purchaser who acquires the new product from Insight Cordless Lighting. In no event shall we be liable for any claim made outside the warranty period or for any other claims or damages including but not limited to, claims for faulty design, negligent or misleading advice, incidental or consequential damages or injury to any other person, corporation or entity.

This warranty does not include consumables such as battery packs or light sources (bulbs). Our battery manufacturers warrant their batteries to be free from defects in workmanship and material under normal use and service conditions for a period of one year after the date of purchase. However, this warranty does not warrant the effective life (length of service) of the battery since the effective life of a battery is primarily determined by the usage patterns and the care taken over the battery's lifetime. All claims are limited to the repair or replacement of the products only and do not include transportation charges.

CORRECT DISPOSAL OF THE LAMP



(Waste Electrical & Electronic Equipment)
(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charging base, USB power adaptor) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable re-use of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

CORRECT DISPOSAL OF THE BATTERY

(Applicable in countries with separate collection systems)

The marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. The battery incorporated in this product is replaceable. For information on its replacement, please contact Insight Cordless Lighting. Do not attempt to remove the battery or dispose it in a fire. Do not disassemble, crush, or puncture the battery. If you intend to discard the product, the waste collection site will take the appropriate measures for the recycling and treatment of the product, including the battery.

CORDLESS LAMP SERVICING

As distributors of the Cordless Lamp range, Insight Cordless Lighting provide a complete replacement parts and servicing facility.

If you require further information please email the support team at info@insightcordlesslighting.com or visit our website www.insightcordlesslighting.com

All rights reserved. No part of this publication may be reproduced in any form or by any means without the prior written permission of Insight Cordless Lighting. www.insightcordlesslighting.com

INSIGHT

CORDLESS LIGHTING

USER MANUAL

