

INSTRUCTIONS

EZCHOP MINI FOOD PROCESSOR

PACKAGE CONTENTS

- EzChop food processor
- Micro-USB charging cable
- User manual

TECHNICAL SPECIFICATIONS

- Material: ABS, PC, stainless steel
- Dimensions: 8.7 × 9.7 cm
- Cup capacity: 250 ml
- Rated power: 30 W



HOW TO USE

- Before first use, completely charge the battery and clean all components. The container and blades can be washed with running water and soap. Clean the lid with a damp cloth.
- To charge the battery, use the included charging cable and plug one end into a charger or computer, and the other end into the charging port on the side of the device.
- While charging, the indicator light on the top of the device will shine red. After charging is done, the light turns blue. The food processor is now ready to be used.
- Open the lid and put your diced food into the plastic cup. Leave the blade inside.
- Close the lid and press the power button on top of the device.
- You need to keep the power button pressed for the blade to rotate.
- When the food is chopped to your preferred size, release the button. Open the lid and remove the blade. Your chopped food is ready.
- Clean the device after each use.

WARNINGS

- Do not clean in the dishwasher. Do not submerge the lid in the water.
- Make sure that the device is correctly assembled before use.

- The cutting blade is very sharp, so it is necessary to be especially careful when handling it to prevent injury.
- Do not place the device on an electric or gas stove, in the vicinity of an open flame, or appliances that are sources of heat.
- Only use the product for its intended purpose.
- Do not disassemble or modify the device in any way.
- Store out of children's reach.
- Do not overfill.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFMU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.



	WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.
---	--