

Temperature hygrometer user manual

Specifications :

- (1) Range of temperature measurement: -10°C (-14°F ~ 122°F)
- (2) Accuracy of temperature measurement: $\pm 1^{\circ}\text{C}$ (1.8°F)
- (3) Temperature resolution : $\pm 0.1^{\circ}\text{C}$ (0.2°F)
- (4) Range of humidity measurement : 10%~99%RH
- (5) Accuracy of humidity measurement : $\pm 5\%$ RH
- (6) Humidity resolution: 1%
- (7) Battery : 1 * AAA 1.5V

Basic functions of the device:

- (1) Temperature&Humidity display, $^{\circ}\text{C}$ and $^{\circ}\text{F}$ temperature switch display
- (2) The Minimum & Maximum temperature and humidity memory function
- (3) 12 / 24 hour display
- (4) Hourly chime function
- (5) Daily clock alarm function
- (6) Calendar function

User manual :

- (1) Install battery--remover battery cover and install battery.
- (2) The $^{\circ}\text{C}$ and $^{\circ}\text{F}$ setting key is covered by the back bracket, press $^{\circ}\text{C}$ and $^{\circ}\text{F}$ key to switch $^{\circ}\text{C}$ and $^{\circ}\text{F}$ display.





(3) **Time setting**--press "MODE" for 2 seconds, then the minutes time will flash. Press "MODE" to switch hour time & minutes time. press "ADJ" button to adjust the correct time.

(4) **12 / 24 hour setting**--press "MODE" for 2 seconds, then press "MODE" for 2 times into 12 /24 hr setting, press "ADJ" to adjust 12/24 hr.

(5) **Month(M) and Day (D) time setting**--press "MODE" for 2 seconds, then the minutes time is flashing, press "MODE" for 3 times into Month and Day time setting, press "ADJ" to adjust correct date, and press "MODE" to switch Month(M) and Day(D) setting.

(6) **Nowtime setting**--press "MODE" for 1 time to switch alarm setting, press "ADJ" to switch on NowTime function.

(7) **Alarm clock setting**--press "MODE" for 1 time switch alarm setting; press "ADJ" for 3 times to switch on NowTime and Alarm clock functions; press "MODE" for 2 seconds to alarm clock time setting; press "MODE" to switch Hour and Minute, press "ADJ" to set time.

(8) Under alarm clock setting mode--press "ADJ" will show Calender.

(9) Press "MEMORY" display show minimum temperature&humidity and maximum temperature&humidity.

(10) Press "MEMORY" for 2 seconds to clear Maximum and Minimum.

