

371.25mm

74.25mm 74.25mm 74.25mm 74.25mm 74.25mm

105mm

105mm

NOKIA Nokia True Wireless Earphones T3110 User Guide	Contents	Pairing mode	Charging	Reset																																		
Troubleshooting <table border="1"> <thead> <tr> <th>Problem</th><th>Reason</th><th>Solution</th></tr> </thead> <tbody> <tr> <td>Does not power on/ Does not respond</td><td>Battery is low</td><td>Charge the earphones for 2-3 hours and restart the earphones</td></tr> <tr> <td>No sound after pairing</td><td>Incorrect pairing</td><td>Pair the earphones again Or reset the earphones</td></tr> <tr> <td>Turns off automatically</td><td>Battery is low</td><td>Charge the earphones for 2-3 hours</td></tr> <tr> <td>Failing to charge</td><td>Error with power supply</td><td>Perform a hardware reset</td></tr> <tr> <td>No light on the case during charging</td><td>Error with power supply</td><td>Check whether the charging cable is plugged in. Ensure the switch button is turned on</td></tr> <tr> <td>Hearing an echo</td><td>Volume is too loud or the environment is too noisy</td><td>Adjust the volume or change your location</td></tr> <tr> <td>Noisy in-call/sound occasionally drop</td><td>Noisy environment or distance between earphones and mobile phone is too far</td><td>Change your location or bring your earphones and mobile device closer together</td></tr> <tr> <td>Sound is too low</td><td>Low volume</td><td>Increase the volume</td></tr> <tr> <td>Pairing unsuccessful/ Only one side has sound/Cannot find the pairing name On the device/Mono pairing unsuccessful</td><td>Reset the earphones/ Reconnect the earphones again</td><td>Reset and reconnect the earphones</td></tr> <tr> <td>Hear crackling sound when tapping the earbuds button</td><td>The silicone ear tip was not put in accordingly</td><td>Match the alignment of earbuds speaker cover hole & silicon tips hole</td></tr> </tbody> </table>	Problem	Reason	Solution	Does not power on/ Does not respond	Battery is low	Charge the earphones for 2-3 hours and restart the earphones	No sound after pairing	Incorrect pairing	Pair the earphones again Or reset the earphones	Turns off automatically	Battery is low	Charge the earphones for 2-3 hours	Failing to charge	Error with power supply	Perform a hardware reset	No light on the case during charging	Error with power supply	Check whether the charging cable is plugged in. Ensure the switch button is turned on	Hearing an echo	Volume is too loud or the environment is too noisy	Adjust the volume or change your location	Noisy in-call/sound occasionally drop	Noisy environment or distance between earphones and mobile phone is too far	Change your location or bring your earphones and mobile device closer together	Sound is too low	Low volume	Increase the volume	Pairing unsuccessful/ Only one side has sound/Cannot find the pairing name On the device/Mono pairing unsuccessful	Reset the earphones/ Reconnect the earphones again	Reset and reconnect the earphones	Hear crackling sound when tapping the earbuds button	The silicone ear tip was not put in accordingly	Match the alignment of earbuds speaker cover hole & silicon tips hole	Touch controls Music [Play/Pause] -- "Quick double tap" [Previous] — 2S [Next] — 2S [Volume Up/Down] [ANC Off] [Call] *When in call mode, the ANC function can't turn on/off Voice Assistant [Voice Assistant Icon] — 1S	Specifications Nokia True Wireless Earphones T3110 - True wireless earphones - Wearing style : Ear canal - Ear coupling : ≥20Hz to 20kHz - Frequency response : Dynamic, closed - Transducer principle : 12.5mm - Sound pressure level(SPL) : 100 dB(kHz/1mW) - Impedance : 32Ω - Microphone principle : MEMS 3x2 - Power supply : Built-in Lithium rechargeable batteries, 3.7V - Right earbud: 60mAh - Left earbud: 60mAh - Charging case: 720mAh - ANC ON is 4.5 hrs/music playback via A2DP; With rechargeable battery of the earphones* - ANC OFF is 27.5 hrs. and ANC ON is 22.5 hrs* - When not connected to any Bluetooth device, no phone calls, no music for 10 minutes, TWS will go in Standby. - Standby time in ANC Off condition is 180 Hrs & in ANC On condition is upto 7.5hrs - Earphones: approx. 2.0hrs - Charging case: approx. 2.0hrs - Ingress protection (earbuds) : Waterproof (IPX7) - Weight : Left earbud: approx. 7g - Right earbud: approx. 7g - Charging case: approx. 57g - Yes Bluetooth - Version : Bluetooth specification version 5.1 - Profiles : HSP, HFP, AVRCP, A2DP, SPP 1.2, and PBAP 1.0 - Effective Range : Line of sight approx. 30R (10m) - Transmission frequency : 2402MHz to 2480MHz - Output power : ≤10mW (max.) - Supported Audio Format(s) : SBC *Charging case that holds multiple charges for having the total play time. Battery life depends on device settings, environment, usage and many other factors.	Safety guide Important safety instructions - Read the user guide & warranty manual as supplied carefully and completely before using the product. - Always include this safety guide when passing the product on to third parties. - Do not use an obviously defective product. - Use only the product in environments where wireless Bluetooth® transmission is permitted. Preventing damage to health and accidents - Do not listen at high volume levels for long periods of time to prevent hearing damage. - The product generates stronger permanent magnetic fields that could cause interference to cardiac pacemakers, implanted defibrillators (ICDs) and other implants. Always maintain a distance of at least 3.34" (10cm) between the product component containing the magnet and the cardiac pacemaker, implanted defibrillator or other implant. - Keep the product, accessories and packaging parts out of reach of: children and pets to prevent accidents, swallowing and choking hazard. - Do not use the product in an environment that requires your special attention (e.g., in traffic). Preventing damage to the product and malfunctions - Always keep the product dry and do not expose it to extreme temperatures (hairdryer, heater, extended exposure to sunlight, etc.) to avoid corrosion or deformation. The normal operating temperature is from 0°C to 40°C (32°F to 104°F). - Use only attachments/accessories/spare parts supplied or recommended by Flipkart. - Only clean the product with a soft, dry cloth. WARNING - In extreme cases, rechargeable batteries may leak and may cause the following hazards if abused or misused: - Explosion • fire development • heat generation • smoke or gas development Dispose of defective products or return them to your specialist dealer. Only use rechargeable batteries recommended by Flipkart and the appropriate charger. Only charge the product/rechargeable batteries at ambient temperatures between 10°C/50°F and 40°C/104°F. Switch battery pack-powered products off after use. When not using for extended periods of time, recharge the product / rechargeable batteries regularly (about every 3 months). Do not heat the product / rechargeable batteries above 70°C/158°F. Avoid exposure to sunlight and do not throw the product / rechargeable batteries into fire.	Intended use/Liability Flipkart India Private Limited will not be responsible for any indirect or consequential loss, loss of profits or loss of data. Warranty will be void under the following conditions, and manufacturer reserves the right to refuse to provide service and to demand charges for any costs of servicing from the customer. There will be no warranty if the product has been modified or repaired by persons not authorized by manufacturer; Mishandling or wrong application of product, such as leaving batteries over an extended period in the product causing battery fluid leakage, or applying wrong voltage, manual destruction, damage caused by natural disaster or accident; Caused by impact sand or liquid damage, tampering or operating fail; install and maintain product without following instructions provided by the manufacturer; If the model number or item code attached with the product has been erased or modified; Modify without authorization the contents of this warranty policy. If the product have been used for commercial, display, demonstration or rental purpose. All parts replaced within the warranty period are properties of manufacturer. We have the right to handle those parts as necessary. Warranty covers only the hardware of the product's main body. All other accessories are not covered within the warranty terms, such as external connector cable, power cable, computer cables, software, CD, external cover/ cabinet and user manual. (for item description and accessories, please refer to the user manual/instruction manual/user guide) Manufacturer Declarations More information on legal compliance labels can be found at the end of this document. CE EU Declaration of Conformity Flipkart India Private Limited hereby declares that this product conforms to the relevant safety regulations of EU Directive 2014/53/EU. The full Declaration of Conformity can be requested via the website at: www.nokia.com/shop/support. Recycling symbols Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Electrical and electronic products contain a lot of valuable materials, including metals (such as copper, aluminium, steel, and magnesium) and precious metals (such as gold, silver, and palladium). All materials of the device can be recovered as materials and energy. The crossed-out wheeled bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection of their end of their working life. Do not dispose these products as unsorted municipal waste; take them for recycling. For info on your nearest recycling point, check with your local waste authority.	NOKIA Flipkart India Private Limited is a licensee of the Nokia brand in India. Nokia is a registered trademark of Nokia Corporation. All trademarks are the property of their respective owners.
Problem	Reason	Solution																																				
Does not power on/ Does not respond	Battery is low	Charge the earphones for 2-3 hours and restart the earphones																																				
No sound after pairing	Incorrect pairing	Pair the earphones again Or reset the earphones																																				
Turns off automatically	Battery is low	Charge the earphones for 2-3 hours																																				
Failing to charge	Error with power supply	Perform a hardware reset																																				
No light on the case during charging	Error with power supply	Check whether the charging cable is plugged in. Ensure the switch button is turned on																																				
Hearing an echo	Volume is too loud or the environment is too noisy	Adjust the volume or change your location																																				
Noisy in-call/sound occasionally drop	Noisy environment or distance between earphones and mobile phone is too far	Change your location or bring your earphones and mobile device closer together																																				
Sound is too low	Low volume	Increase the volume																																				
Pairing unsuccessful/ Only one side has sound/Cannot find the pairing name On the device/Mono pairing unsuccessful	Reset the earphones/ Reconnect the earphones again	Reset and reconnect the earphones																																				
Hear crackling sound when tapping the earbuds button	The silicone ear tip was not put in accordingly	Match the alignment of earbuds speaker cover hole & silicon tips hole																																				

快速指南/成品尺寸:74.25X105mm/材质:80g双胶纸/黑色印刷/需折叠



东莞市库珀电子有限公司

DONGGUAN KOPPO ELECTRONICS CO., LTD.

客户名/型号	NOKIA T3110 860F 黑	物 料 编 码	4050000738
物 料 名 称	快速指南	比 例	1:1
制 作	陈娜娜	日 期	21-1-19
审 核		批 准	
单 位: MM	 A3	未标注公差：参照 GB/T1804-V	

