



FRIZZ DEFENSE STRAIGHTENING BRUSH

INSTRUCTION BOOKLET

Please ensure you read & follow the styling instructions
before using for the first time.

VSS2440A

NEVER UNDERESTIMATE THE POWER OF A WOMAN WITH GOOD HAIR

SEE AMAZING, BE AMAZING

For all our style tutorials
check us out online
vssassoon.com.au





IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully & keep for future reference.

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies & children. This bag is not a toy.

DANGER:

- Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water - keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use given the proximity of water hazards are present even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately - **DO NOT REACH INTO THE WATER.**
- Do not immerse the appliance into water or other liquids.
- This appliance is a burn hazard. Keep appliance out of reach from young children particularly during use & cool down.
- Always place the appliance on a stand if one has been provided, or on a heat-resistant flat surface.



WARNING: Before & During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.

- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surfaces or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch where the air openings may be blocked - keep the air openings free of lint & other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face & neck.
- Do not use extension cord with this appliance.

WARNING: Storage & Maintenance

Always unplug the appliance immediately after use & before cleaning or maintenance.

Do not wrap the power cord around the appliance when storing. This causes undue strain on the power cord & protective guard. Over time, this will damage the power cord resulting in an unsafe condition to the user.

- If the power cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.



- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer Service if you have any issues operating your appliance.

CAUTION:

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience & knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use & as described in this instruction booklet. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom - ask your installer for advice.

FRIZZ DEFENSE STRAIGHTENING BRUSH

AMAZING CHOICE!

You'll love the smooth results of this straightening brush with Super Frizz Defense Technology. Combining an advanced 3D straightening system with detangling combs, ceramic straightening fins & silicone bristles that gently grip & control with Super Frizz Defense Technology to eliminate static.



1. Super Frizz Defense Technology
2. LED indicator light
3. Heat settings (I = 180°C, II = 190°C, III = 200°C)
4. Off setting ('0')
5. 3D straightening system (detangling combs, ceramic straightening fins & silicone bristles)
6. Ceramic Technology
7. Professional ceramic heater

FRIZZ DEFENSE TECHNOLOGY

Many aspects of modern living, including air conditioning, contact with man-made fibers & air pollution add to the build-up of static electricity in your hair. Even simply brushing & towel-drying your hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, your hair may have a dull appearance. High levels of static charge cause your hair to become 'flyaway' & difficult to style.

The Super Frizz Defense Technology releases 60% more ions[^] to eliminate static, conditioning the hair cuticle for ultimate frizz-free smoothness & enhanced shine.

NOTE: There will be a slight buzzing sound from the heated brush which is from the ionic generator releasing the ions. This is normal.

CERAMIC TECHNOLOGY

Ceramic Technology helps keep your hair looking healthy & shiny by maintaining even heat during the styling process. Static is reduced by quickly sealing the hair cuticle layer ensuring minimal frizz making your hair easier to manage.

PROFESSIONAL CERAMIC HEATER

This straightening brush features a microprocessor controlled professional ceramic heater for superior fast-action heat transfer & constant even heat on every section by intelligently maintaining a high heat level. The internal ceramic heater allows for ultra fast heat up & consistent heat delivery so that every strand of hair is set with the same level of heat & comes out the same way, for a perfect, flawless finish.



HOW TO USE THE FRIZZ DEFENSE STRAIGHTENING BRUSH

IMPORTANT:

Hair that has been heavily bleached or chemically treated should only use the low heat setting on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

CAUTION:

This is a high-heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into contact with the skin (e.g. scalp, neck ears, face, etc.) as the straightening brush can, particularly if held too close, cause discomfort or even burn.

BEFORE USING

- Remove all packaging & point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation).

OPERATING INSTRUCTIONS

Wash, condition & dry your hair as normal.

Ensure your hair is combed through & tangle-free.

1. Plug your straightening brush into a 230-240V~ suitable power outlet & place on a heat protective, flat level surface.
2. Slide the switch to your desired setting indicated by the colour of the LED light (yellow = 180°C, orange = 190°C, red = 200°C). Once the temperature you have selected has been reached, the LED light will then stop flashing.
3. Moderately stretch sections of your hair with your free hand & apply the straightening brush slowly from root to tip as you would a regular straightener, ensuring your hair penetrates deep into the bristles.
4. Repeat this through all hair.
5. After use, turn your straightening brush off by sliding the switch to the 'O' setting.

Allow straightening brush to cool before storing.



VARIABLE HEAT SETTINGS

Please ensure you choose the required temperature setting according to your particular need & hair type.

SETTINGS	HAIR TYPE
I - 180°C	Delicate, fine, bleached hair
II - 190°C	Average to thick or treated hair
III - 200°C	Thick or wavy hair

AUTOMATIC SHUT-OFF

This straightening brush has an automatic shut-off feature for added safety. If the straightening brush is switched on for more than 72 minutes continuously, it will automatically switch off. If you wish to continue using the straightening brush after this time, simply slide the switch to your desired temperature setting, I, II or III again to turn the power on.

HEAT MAT

The straightening brush comes with a heat mat for use during & after styling. During use do not place the straightening brush on any heat sensitive surface, even when using the heat mat provided. After use, switch off & unplug the straightening brush. Allow to fully cool down & wrap the mat around the straightening brush. Continue to keep it out of reach of children as it will remain hot for several minutes.

HOW TO STYLE WITH THE FRIZZ DEFENSE STRAIGHTENING BRUSH

STRAIGHTEN

Start with clean & dry hair, thoroughly combed through. Apply a heat spray for extra protection & longer lasting results. Straighten your hair in sections ensuring you go over each section once to get that gorgeous, silky finish. If you are needing to go over the section more than once, creating thinner sections will help create straight hair in the first glide.

VOLUME

Create volume by brushing on the inner side of your hair section by making a curved movement with your wrist as you glide the straightening brush through the section of hair.

EXPERT TIP

Set your style by finishing with a spritz of light hold hair spray, for extra hold if needed.

SEE AMAZING, BE AMAZING

For all our style tutorials
check us out online
vssassoon.com.au



LIMITED 2 YEAR WARRANTY

Retain this section of the warranty card with your receipt/proof of purchase. You must present it to obtain replacement or service under the warranty.

The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice.

Attach a copy of your purchase receipt and store in a safe place.

To make a warranty claim, call Customer Service on the phone number or email below. Or you can return the defective product back to the place it was purchased where it will be replaced (see point 12 of paragraph C. Conditions).

Please provide the following details:

1. Date of purchase
2. Retailer Name & Location
3. Product Name/Model Number
4. Confirm you have your purchase receipt
5. Detail the problem with your product

Conair Australia Pty Ltd

PO Box 146
Terrey Hills
NSW 2084

Customer Service

Australia
1800 650 263
email: aus_info@conair.com

Conair New Zealand Ltd

PO Box 251159
Pakuranga, Auckland
New Zealand 2140

Customer Service

New Zealand
0800 266 247
email: aus_info@conair.com



WARRANTY AGAINST DEFECTS

A. AUSTRALIAN CONSUMER LAW

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The guarantees under the Australian Consumer Law ("ACL") are provided in sections 51 to 59 inclusive of the ACL ("Statutory Guarantees") and the remedies are provided in sections 259 to 266 inclusive of the ACL (Statutory Remedies).

B. VS SASSOON EXTENDED WARRANTY

1. In addition and subject to the Statutory Guarantees and Statutory Remedies, the following express warranty ("Warranty") commences from the date of purchase and continues for a period of 24 months ("Warranty Period") after which it expires. Subject to the conditions in Section C below, Conair warrants to the original purchaser ("Purchaser") of the VS Sassoon product that is the subject of this warranty ("Product") that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Conair will a) replace the Product, or b) exchange defective parts in the Product or c) repair the Product, as Conair may choose in its discretion ("Warranty"). In this Warranty "Conair" means Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086. in relation to Products purchased in Australia and Conair New Zealand Ltd in relation to Products purchased in New Zealand.
2. To honour the Warranty, Conair must replace, or exchange parts in, or repair, the Product, as Conair determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.
3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made thereunder, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.



C. CONDITIONS

1. The Product must be used in accordance with manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, act of God such as lightning, or nonobservance of manufacturer's instructions on the part of the user. This Warranty does not cover ordinary wear and tear in the Product or its parts.
2. Conair does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer's instructions, and b) any indirect, consequential or economic loss or damage however caused.
3. This Warranty is immediately void if – a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so by Conair or where non approved replacement parts are used.
4. The Product is designed for domestic use only. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from non-domestic use or incorrect voltage supply.
5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.
6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, becomes the property of Conair. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.
7. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Product which the Purchaser has under the ACL, and applicable laws in New Zealand, which rights and remedies by law may not be excluded. All other warranties and representations express and implied are hereby excluded.
8. The defect must have occurred during the Warranty Period and Purchaser bears the onus of proving that fact, and that the defect was not caused by any of the causes excluded from this Warranty.
9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Conair's authorised distributors or purchased second hand.



10. The Purchaser is responsible for all postage and freight charges and any other expenses incidental to claiming against this Warranty.
11. The Warranty excludes consumable items (such as blades or brushes) and normal wear and tear.
12. If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this warranty you will need to present this portion of the warranty card and the purchase receipt as proof of purchase so please make sure you keep both this card and your receipt on hand for the duration of the warranty period.

SPARE PARTS

Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.









Certain trademarks used under
license from The Procter & Gamble
Company or its affiliates.

©2022 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 1706
New Zealand

CONTACT US:

For advice, tips on your new VS
product
E-mail us on: aus_info@conair.com

CUSTOMER SERVICE:

Australia: 1800 650 263
New Zealand: 0800 266 247

vssassoon.com.au

VSS2440A



SEE
AMAZING
BE
AMAZING