

MAINSRING

LONDON

INSTRUCTION
MANUAL



Vol.1.07_EN



MAINSRING

LONDON

**OXFORD
GUARDIAN
WATCH WINDER**

The Oxford Guardian Watch Winder is a device helps keep automatic watches running when not being worn.

Not only does the watch winder keep the watch parts lubricated and moving, but it also helps extend the overall life of the watches.


For more details on operating this watch winder please refer to the enclosed booklet or visit :

IM.MAINSPRING.STORE




Instruction for Use Automatic Watch Winder Manual


1. Power input;
2. LED Switch of ambient light
3. Gear adjustment switch;
4. watch support;
5. turntable;
6. USB-DC power cord;
7. Wiping cloth
8. Blue LED Atmosphere Light
9. right turntable switch

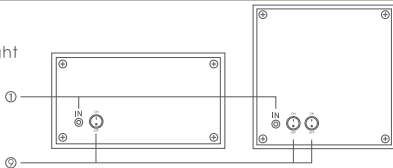

The DC input port on the lower left of the back panel is a power input part of 3~9V, please connect with configured USB-DC power cord

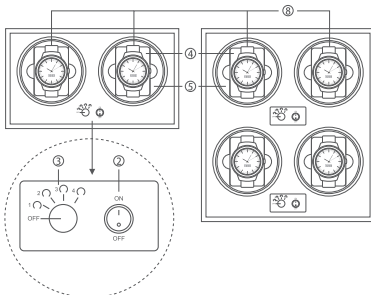

Before using the product, please read this Manual carefully and keep it properly.

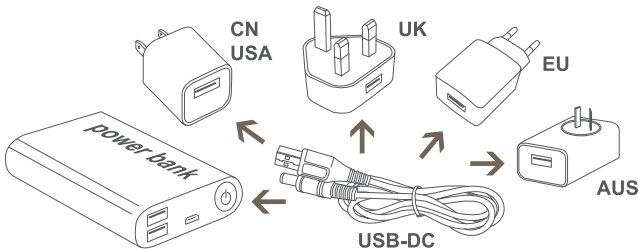

- Universal USB power interface, suitable for all mobile phone power adapters;
- It can also use a power bank as power input, which is more durable and economical than dry batteries;
- Multi-gear program is suitable for different service scenarios;
- Blue LED ambient light (with independent switch control)
- Vertical chain engagement can function better;
- The memory foam support can fit watches for men and women;

Cautions:

1. Please use a mobile phone power adapter to power this product (output voltage: 3V ~ 9V). **Never use the power adapter of any other electrical appliance;**
2. Please do not turn the turntable in the watch winder; otherwise, the integrated circuit of your watch winder will be directly damaged;
3. This product is very low in power consumption, but in order to protect the service life of the motor, it is recommended to turn off the power as much as possible to make the motor rest for 2 hours after 30 consecutive days, so as to extend its service life.

Multi-program mode:

OFF: Switch


Gear 1: The watch winder will stop for 6 minutes after turning forward for 2 minutes and repeat the cycle following the procedure;

Gear 2: The watch winder will stop for 6 minutes after turning in reverse for 2 minutes and repeat the cycle following the procedure;

Gear3: The watch winder will stop for 6 minutes after turning forward for 2 minutes, stop for 6 minutes after turning in reverse for 2 minutes and repeat the cycle following the procedure;

Gear4: The watch winder will last for 3 hours and stop for 9 hours after turning forward 5 minutes and in reverse for 5 minutes, and then it will repeat the cycle following the procedure;

The round switch in the right picture is used to control the LED ambient light independently

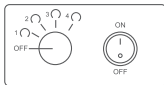

FAQ

1. Q: Can't find its power adapter?

A: This product is not equipped with a power adapter, but has a USB-DC power cord. Connect your idle mobile phone power adapter with this USB power cord to power the product (Note: All mobile phone power adapters throughout the world can be used and it is unnecessary to be subject to the power system of each country).

2. Q: Why does the watch winder not rotate?

A: 1. Please check whether your power adapter is properly engaged to the power socket of the watch winder; 2. Check whether your adapter plug is normally connected with the mains power; 3. Please confirm whether the knob switch below the turntable of the watch winder is in the working position;

3. Q: Why did the watch winder stop working in a few minutes?

A: Normally, it will rotate again in a few minutes (subject to the IC program setting). If it stops working for long, please check the details of the multi-program mode. At Gear 4, it will stop for 9 hours at most (many customers mistakenly think that the product is broken); in 9 hours, it will start again automatically. If not for some external reasons, please refer to the answer of Question 2!



4. Q: The watch winder can't get my watch chain tightened, why?

A: Firstly, make sure that your mechanical watch has the function of automatic chain tightening. Secondly, put your watch in the winder under normal working condition. However, the Gear-4 program is not suitable for mechanical watches with low efficiency; otherwise, the chain tightening may fail and the watch may stop working. In this case, change to Gear-3 and your watch can keep working normally.

5. Q: How to put my watch around the watch support correctly?

A: Take out the memory foam watch winder from the turntable; groove, put your watch around it, buckle your watch strap and put the support into the groove. If you can't put your watch normally around the watch support due to a rather short strap (women's watch), buckle your watch by force so that it could fit your watch as much as possible because the watch support is made from memory foam.

6. Q: No dry battery box can be found, why?

A: This product is not equipped with a dry battery box, but with a USB-DC power cord, so it can be powered directly with your mobile phone power bank, whose durability and economy are many times higher than that of a dry battery (Note: The capacitance is about 1500-2100 MA for five conventional 1.5V batteries (5#), but a conventional power bank is about 10000-20000 MA in capacitance and can be used for repeated charging).

CARE AND MAINTENANCE

1. Please do not place your watch winder in direct sunlight or other heat sources such as radiators, electric heaters or stoves.
2. Your watch winder should be kept away from water and liquids.
3. Avoid placing your winder next to areas of excessive sand, dust or other objects that may vibrate, as this may also impact the functioning of your winder.
4. Please store your watch winder at room temperature.
5. When the watch winder is on, make sure there is nothing stopping or blocking it from turning.
6. Unplug your watch winder if not being used for a prolonged period of time.
7. Watch winders are not toys. We recommend that you store your winder carefully out of reach of children.
8. Your watch winder does not require any special maintenance.
We recommend cleaning it regularly with a soft, damp cloth, then wiping it dry.



RECYCLING

Your watch winder, must not be disposed of as household waste. These elements must be taken to a waste collection point that recycles electrical devices and batteries.

By ensuring these products are disposed of properly you can help prevent potentially harmful effects, both to the environment and human health. Recycling helps conserve natural resources. For further information on recycling this product please contact your local authority, waste collection site, or place of purchase.

Dartmouth Brands Ltd
C/O The Wow Company
Hikenfield House,
East Anton Court,
Icknield Way, East Anton,
Andover SP10 5RG,
United Kingdom.

RoHS
COMPLIANT

