 


TOWER®

over 100 YEARS of quality

3 IN 1 Sandwich, Panini & Waffle Maker

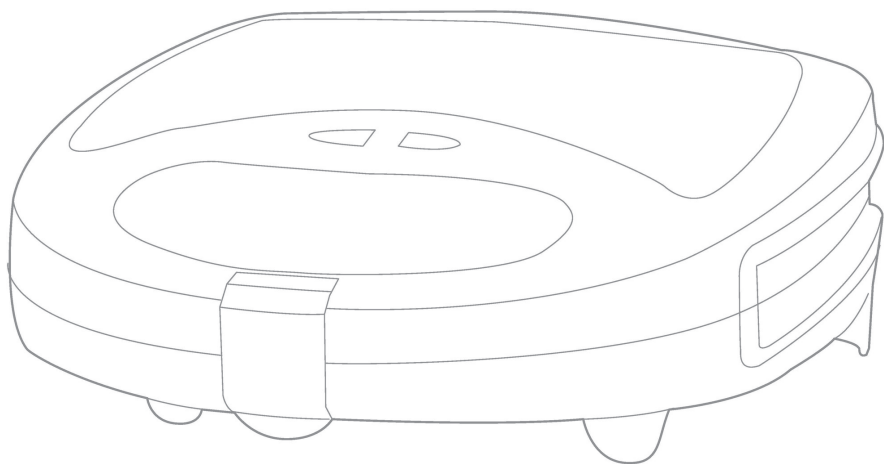

TOWER®
over 100 YEARS of quality



TOWER

over 100 YEARS of quality

1912 Midland Metal Spinners was founded by George Cadman, who was then 65 years old, as a metal holloware manufacturing company, in St. Mark's Street, Wolverhampton. They later moved into the Tower and Fort Works in Pelham Street, which ultimately gave rise to the famous Tower brand name.

1937 Tower exhibited some of their latest holloware designs at the British Industries Fair. As you can see from the original poster, their stand No. A410 must have been a great sight as it promoted their "Beautiful, inexpensive, untarnishable Plate, at prices all can afford to pay".



1961 Tower became one of the largest manufacturers of aluminium holloware, electric kettles, tea pots and other household articles with over 1,000 employees.

1974 Russell Hobbs took ownership of the expanding Tower brand.



Towerbrand

Your 3 in 1 Sandwich, Panini & Waffle Maker

In The Box

Carefully remove your snack maker from the box.

- Snack maker
- 2 x grill plates
- 2 x sandwich plates
- 2 x waffle plates
- Instruction manual



General Safety

- Ensure that you read all of the safety instructions before using this product.
- This product has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.
- Do read the operating instructions before you attempt to use the product.
- Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the instructions.
- Switch off and remove the mains plug or mains adapter when making or changing any connections.
- Do consult your dealer if you are ever in doubt about the installation, operation or safety of your product.
- Don't remove any fixed covers as this may expose you to dangerous voltages.
- Don't continue to operate the product if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, withdraw the plug from the mains and consult your dealer.
- There are no user serviceable parts in the product. When servicing, refer to qualified service personnel.
- Don't leave the product switched on when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has standby mode.
- Don't obstruct the ventilation vents on the product, for example with curtains or soft furnishings, as this may cause overheating.
- Do not place the product in closed bookcases or racks without proper ventilation.
- Do not use the product in humid or damp conditions or allow it to be exposed to rain or moisture.
- Store the product in a clean, dry environment.
- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on it.
- Position the power cable and other connected cables so that they are not likely to be walked on, pinched or where items can be placed on or against them.
- Never allow children to insert foreign objects into holes or slots on the product.
- No naked flame sources, such as lighted candles, should be placed on the product.
- Disconnect the product from the mains supply before cleaning.
- Do not use any liquids or aerosol cleaners, as this may damage the product. Use a soft, dust-free cloth.
- Contact local authorities for means of disposal.
- Make sure that other people in your household are conversant with operation of the product.



Product Safety

 
 
 
 
 
- This appliance is intended to be used in household and similar applications such as:
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply.
- For indoor use only.
- Do not use outdoors or near water.
- Place the appliance on a flat, stable, heat resistant surface, away from heat source and where it cannot be splashed by water.
- Keep the appliance and cord away from any hot gas, electric burner and heated oven.
- Allow adequate air space above and on all sides for air circulation.
- Do not use under cupboards or shelves.
- Do not use too close to curtains, draperies, walls, cupboards and other flammable materials.
- Do not touch hot surfaces during operation or before it cools. Use handles, or oven gloves when opening lid.
- Do not immerse the appliance in water or in any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The mains lead should reach from the power socket without straining the connections.
- Route the cable so it doesn't overhang and do not let the cord hang over the edge of the worktop.
- Children should be supervised to ensure that they do not play with the appliance.
- Never allow children to operate the appliance.
- Unplug from the power socket when not in use and before cleaning and maintenance.
- The use of attachments or tools not recommended by manufacturer may cause fire, electric shock or injury.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not attempt repairs – the appliance contains no user-serviceable parts.
- Do not use the appliance other than for its intended use.



- Allow the appliance to cool down first before cleaning and storage.
- Do not leave the appliance unattended during operation.
- The appliance must not be operated by an external timer or remote control system.
- All fillings must be safe and fit to eat before they are used in the appliance.
- Don't place food in plastic film, polythene bags or foil before placing on the appliance. You'll damage the appliance and may cause a fire hazard.
- The appliance has a non-stick surface. Do not use pointed or hard utensils such as metal spatulas to remove food as this would damage the non-stick coating. Use spatulas made of wood or plastic.
- Only the detachable plates are dishwasher safe. Do not put the whole appliance in the dishwasher.
- Do not open the appliance casing. Do not insert any foreign objects into the inside of the casing.



Description Of Parts

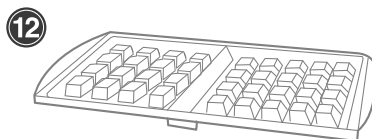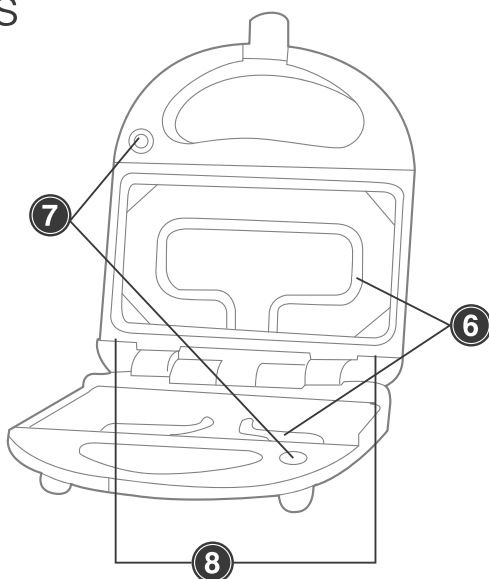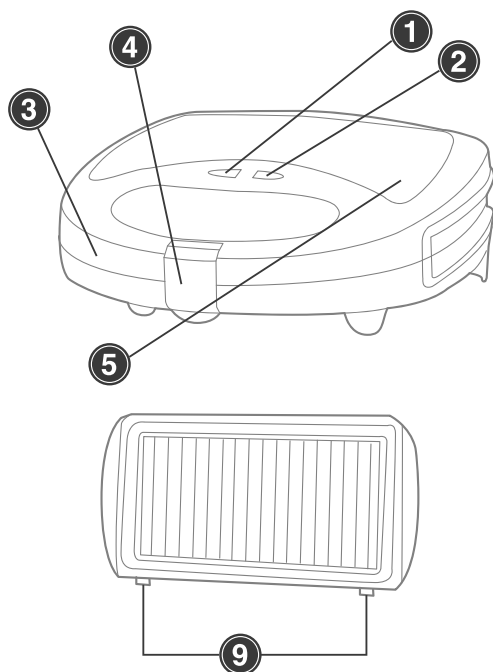

- ① Power indicator light (red)
- ② Ready indicator light (green)
- ③ Handle
- ④ Clasp
- ⑤ Body
- ⑥ Heating elements
- ⑦ Plates release button
- ⑧ Slots
- ⑨ Tabs
- ⑩ 2 x grill plates
- ⑪ 2 x sandwich plates
- ⑫ 2 x waffle plates



Using Your 3 in 1 Sandwich, Panini & Waffle Maker

- Before first use, wipe the non-stick surfaces of the cooking plates with a damp cloth and dry thoroughly.
- During initial use, the snack maker may emit slight odour/smoke due to the burning off of the manufacturing residues. This is completely normal and will disappear after a few uses.
- The cooking plates must be used in pairs on both top and bottom heating elements, decide which plates you want to use:

Plates	
Grill	Great for Panini, grill meat, sausages, burgers. • Food should be no more than 10mm thick. • Wipe the plates with a little cooking oil/butter. Lay the food on the bottom plates with plastic or wooden spatula. • Close the snack maker and cook food to your liking. • Cook meat/poultry until the juices run clear. Cook fish until the flesh is opaque throughout.
Sandwich	Great for toasted sandwiches. • Spread butter thinly on each slice of bread then place butter side out on the bottom sandwich plates. • Fill the sandwich. Do not put too much filling. • Place a slice of bread on top of the filling with the buttered side up. • Close the snack maker. • Cook for 2-4 minutes until it is toasted to your colour preference.
Waffle	Great for waffles. • Prepare the batter mix and let it rest before cooking. • Pour about 40ml of batter mix into each bottom plate and close the snack maker. • Cook for 2-4 minutes until it is cooked to your liking.

- To remove plates, press the release button on the top and bottom and lift the plates away from the heating elements.
- To add plates, put the tabs into the slots (the slots are near the hinge of the snack maker) and push the plates into the body until it locks in place.
- Plug into a suitable power socket and switch the socket on. The power indicator light will come on.
- When the ready indicator light goes green, the snack maker is ready to use.
- Once food is cooked, carefully remove your food with a plastic or wooden spatula and switch off at the power socket.

Note: During cooking, the ready indicator light will cycle on and off to maintain the correct temperature for snack maker.



Cleaning and Maintenance

Before cleaning, switch off the snack maker, unplug from power socket and allow it to cool completely.

- Clean after every use to remove debris and oil as this might otherwise lead to the dirt sticking on the plates.
- Remove cooking plates and hand wash them in warm soapy water. Dry thoroughly before placing them on the snack maker.
- Clean the exterior surface of the snack maker with a damp cloth and then polish with a soft dry cloth. Do not use steel wool pads or harsh/abrasive cleaners.



Electrical information

(Fixed Mains Plug Only)

The mains lead supplied with this product is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be replaced with an appropriate plug.

If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions on the next page. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard.

If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions shown. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

Electrical Information (Power adapters only)

 
Never open the power adapter, you risk getting an electric shock.

Only use the power adapter that is supplied with your product.

You must always connect the power adapter to the product before connecting to the mains power supply.

The power adapter must be used indoors only, and must not be subjected to damp conditions.

The power adapter does not have any user serviceable parts.

2-core plug  WARNING: Do not connect either wire to the earth terminal.  This symbol indicates that this 2-core appliance is Class II and does not require an earth connection. The wire coloured blue must be connected to the terminal marked with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.	Live (Brown)  Neutral (Blue)	3-core plug  WARNING: This appliance must be earthed.  The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, or coloured green or green and yellow. The wire coloured blue must be connected to the terminal marked with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.	Earth (Green & Yellow)  Neutral (Blue) Live (Brown)
---	--	--	--

Guarantee

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in the instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

Technical Specification

Model Number	350629
Power Supply	220-240V~50Hz
Power	700-800W



Waste electrical products should not be disposed of with household waste. Please recycle at your local recycling facility. Check with your local authority for recycling advice.

B&M Retail Ltd, L24 8RJ, HK
Centz Stores 7 Ltd, A94 K1H5, Ireland



