 
 
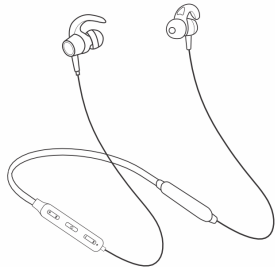 


FLYBOT BLAZE

WIRELESS EARPHONES USER'S MANUAL

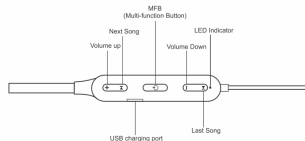

Earphone Diagram

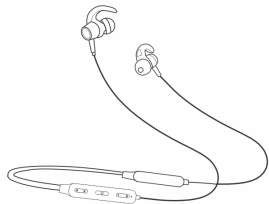

Introduction

Thank you for choosing the wireless earphone developed by Flybot. In order to better use this product, please read the Quick Start Guide carefully before use and properly manage it. This product may contain small parts. Keep them out of the reach of children. The earphone and the other device should be within 10 meters of each other. Connections may be subject to interference from obstructions such as walls or other electronics devices.

Using Your Earphone

This section explains how to turn the earphone on, pair to your bluetooth devices and use various functions.

Turning the earphone on or off:-

- To turn the earphone on, press the MFB for 5 seconds, the blue indicator light flashes with notification voice.
- To turn the earphone off, press the MFB for 5 seconds, the indicator light turns off after the blue indicator light changes to red.

Pairing and Connecting the Earphone

Enter Pairing Mode:-

- Turn on your earphone and it proceeds into pairing mode immediately.
- Activate the Bluetooth feature on your phone and search for the earphone Flybot Blaze
- Select the earphone (Flybot Blaze) from the list of devices found on your phone.
- Enter the Bluetooth PIN (0000) to pair and connect the earphone to your phone.

Pairing will create a unique and encrypted wireless link between two bluetooth enabled devices i.e. bluetooth phone and your bluetooth earphone.

Using Call Functions

Answering a call :-

Press the MFB to answer a call when you hear incoming call tune.

Ending a call :-

Press the MFB to end a call.

Rejecting a Call :-

Press and hold the MFB to reject a call when a call comes in. When a call comes in while listening to music, your earphone will alert you so that you can answer the call.

- When the earphone play incoming call tune, press the MFB. The music stops and you are connected with the caller.

- When you have finished the conversation, press the MFB to end the call. The music automatically resumes playback after the call.

Battery and Charging information

- The earphone has an internal non-removable, rechargeable battery.
- Do not attempt to remove the battery from the device as you may damage the device.
- If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery.
- If the battery is completely discharged, it may take several minutes before the charging indicator light is displayed.
- Unplug the charger from the electrical plug and the device when not in use.
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.
- Do not dispose off batteries in fire as they may explode.
- Batteries may also explode if damaged.
- Never use any charger that is damaged.

Product Specifications

Model Name: Flybot Blaze
Bluetooth version: Bluetooth V4.2
Battery Capacity: 135mAh
Impedance: 16 Ohm
Charging Time: 1.5 Hrs.
Play Time: 8 to 10 Hrs
Charging Standard: DC 5V/500mA
Working Frequency: 2402MHz~2408MHz

Safety Rules

The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Do not use or store the device in dusty/dirty areas.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not attempt to open the devices.
- Do not drop, knock or shake the device. Rough Handling can break internal circuit boards.
- Do not use harsh chemicals to clean the device.