



GLIDIC TW-4000s
[TOMORROW X TOGETHER Model]

Quick Start Guide

Before Use

To enjoy music under the best conditions, select earbuds that fit your ears.



*: Attached to the earbuds.



This guide explains the basic knowledge to use this product. For details, refer to the "User's Guide" from a 2D code on the left.

Notes

 
- Read this "Quick Start Guide" before using this product. Make sure you read and follow all "Safety Instructions". Keep this guide for future reference.
- This guide describes information on screens and procedures for a general smartphone. The display and procedure may vary depending on your device or environment. Also refer to the user's manual of your device.

CAUTION


- The charging case is not splash/sweat-proof. Do not get the case wet or place the wet earbuds in the charging case. Stop using this device immediately if it gets wet.
- The sound quality may change once a microphone or speaker gets wet with water. In this case, wipe the device with a dry cloth or let it dry.

Included Items

Earbuds (left/right) × 1

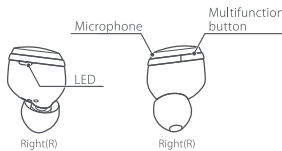

Charging case × 1

 

Note) A USB AC adapter or a PC with a USB port is required for charging the case.

 
Ear tips (XXS/XS/S/M/L) × 2

Charging cable × 1

Quick Start Guide/Warranty × 1 (This document)

Pairing (Connect) to a Device

- ① Place the earbuds in the charging case.
- ② Remove the earbuds from the charging case again. Note) Follow this procedure for pairing the first time even when using only either right or left earbud.

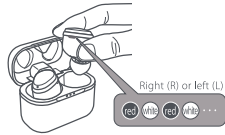

It enters the pairing mode automatically.

- A sound indicating that the pairing mode has started is heard from the right and left earbuds.

- ③ Use a compatible device for pairing.

<Operation example on a smartphone>

Note) The procedure and display may vary depending on your environment.
Note) The earbud name may be displayed as "Headset" on the Bluetooth setting screen.

1. Select **Settings** on your home screen.

2. Select **Bluetooth**.

3. Turn **On Bluetooth**.

4. Select **GLIDIC TW-4000s ○○○ Ver.*** on the list.

*: "○○○" varies depending on a product.
When the device is paired, such as "Connected" is displayed on the screen on the compatible device, and the blinking of the LED indicator changes from red/white to white only.

- The sound indicating the completion of pairing is heard from the earbuds.

5. Tap **Pair once a message prompt for pairing is displayed**.

Note) This may not be displayed in some cases.

Subsequently, the left or right earbud is reconnected automatically when both the left and right earbuds are removed from the charging case. The left or right earbud can be used monaurally when either is removed from the charging case.

- ④ Configure "Tile" function used to detect the earbuds.

Note) This can be configured later.

About Tile

When the earbuds are lost, you can output sound from the earbuds through your smartphone or spot where Bluetooth communication was last connected on a map of the Tile application. Even the left or right earbud can be detected when lost.

1. Install the **Tile** application from App Store/Google Play.

2. Once your account is registered, tap + on the upper left of the top screen of the application, select **GLIDIC**, and navigate the screen to register **TW-4000s**.

Note) You are required to agree on the Statement of Use and Privacy Policies for Tile Application.
Note) Some Tile functions are pay services.
Note) For details on Tile, see below.



<https://www.tile.com>

? Paired a Device Mistakenly

Follow "Deleting Pairing Information (Reset)" on the right to reset the pairing and redo the pairing operation.

? Do Not Know the Pairing Procedure for Your Device

The procedure varies depending on your device. Refer to the user's manual of your device.

Hearing a Secret Voice

Press the Multifunction button during music playback or on standby (while connected) to hear a secret voice.

Note) The secret voice is randomly played back for each operation.

Secret Voice	Left (L)	Right (R)
Stream sound	—	Press 3 times*

*: Press the left or right earbud 3 times when you want to use only a single earbud.

Phone Call

Use the Multifunction button to control.

Phone Call	Left (L)	Right (R)
Answer a call	Press either once	Press either once
End/decline a call	Long press either	Long press either
Microphone mute ON/OFF	—	Press once during a call*

*: Press the left or right earbud once when you want to use only a single earbud.

Using a Ambient Sound Hearing Function

This function can be controlled with the Multifunction button during music playback or a call, or on standby (connecting).

Note) This function is not available when you are using a single earbud.

Note) You will hear faint noise while in this mode.

Note) Not all of the background sounds can be heard. The sound may not be heard if the set volume of the music etc. is loud.

Ambient Sound Hearing	Left (L)	Right (R)
ON/OFF	Press once	—

Playing Music and Volume Control

Use the Multifunction button to control.

Note) The operation depends on your device or OS.

Music	Left (L)	Right (R)
Play/Stop music	—	Press once
Skip forward ¹⁾	—	Long press (2 sec)
Skip backward ²⁾	Long press (2 sec)	—

*1: Skip forward jumps to the cue of the next track.


*2: Skip backward jumps to the cue of the previous (or in playback) track.

Volume	Left (L)	Right (R)
Volume up	—	Double press
Volume down	Double press	—

Power On/Off the Earbuds

Power on

 
Remove the earbuds from the charging case.

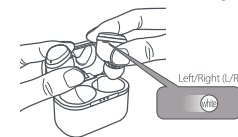

Power off

Place the earbuds in the charging case.

 Note) Close the case after checking the earbuds are properly placed.




Charging the earbuds starts.

Charging the Case/Earbuds

Charge the Charging Case

 
Connect the charging cable to the back of the case.



Note) You can charge the case and the earbuds simultaneously by storing the earbuds in the charging case. Note) The LED indicators turn off when the charging case is fully charged.

Charging the Earbuds

 Place the earbuds in the charging case.



Note) The LED indicators turn off when the earbuds are fully charged.

Reconnecting/Disconnecting

Reconnecting a Device

Subsequently, the earbuds are reconnected automatically when they are removed from the charging case, however, if they are not reconnected, follow the operation below in the relevant device.

Example: Select **Settings** then **Bluetooth**. Select **GLIDIC TW-4000s ○○○ Ver.** from the list displayed.

Disconnecting a Device

Go through the disconnecting procedure on your mobile device.

 
Example: Select **Settings** then **Bluetooth**. Set **Bluetooth** to **Off**.



Deleting Pairing Information (Reset)

Reset the earbuds when the earbuds do not operate properly or you want to delete pairing information from the earbuds.

- ① Place the earbuds in the charging case and press and hold the Multifunction buttons on both earbuds (L/R) for five seconds.

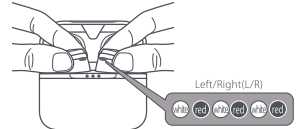

- ② Delete pairing information on your paired mobile device (if it is already paired).

Example: Tap **Settings** > **Bluetooth** > **GLIDIC TW-4000s ○○○ Ver.**, then tap **Forget This Device**.

- ③ Follow "Pairing (Connect) to a Device" on the left to connect the relevant device.

It takes a while after reset until the earbuds enter the pairing mode.

After the left and right earbuds are removed from the charging case, place the earbuds close to each other and wait until the right or left earbud starts blinking in red and white, indicating that the device has entered the pairing mode.

● FCC ID : 2A02PGL-TW4000SSE

● FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Safety Instructions

Make sure you follow the safety instructions described here to avoid harm or injury to the user of this device or others.

Meaning of Indicators

The following indicators show the degree of harm or injury caused by not following the instructions and deviating from the intended use of this device.

	Indicates instructions, which, if not followed, may result in death or severe injury ¹ immediately.
	Indicates instructions, which, if not followed, may result in death or severe injury ² .
	Indicates instructions, which, if not followed, may result in minor injury ³ and may cause physical damage ⁴ .

¹1. A severe injury refers to injuries that will leave permanent damage such as blindness, injury, burns (high and low), electric shock, fracture, poisoning, as well as injuries which require hospitalization/long term hospital visits.

²2. A minor injury refers to injuries such as burns (high and low), electric shock, injuries that do not require hospitalization/long term hospital visits.

³3. Physical damage refers to external damage caused to houses/household belongings and domestic animals/pets.

Meaning of Pictograms

	Indicates a mandatory action based on instructions (must-do).
	Indicates a prohibited action (must-not-do).
	Indicates prohibition of disassembly.
	Indicates prohibition of using this device at where it is splashed with water or getting it wet with water.
	Indicates prohibition of handling the device with wet hands.

DANGER

For Safety from Fire, Burns, Injuries, and Electric Shock

Stop using this device immediately when an abnormality such as odor, abnormal sound, smoke, heat, deformation, breakage, expose of core wire, disconnection is seen either during use or storage.
Do not repair the product after a failure occurs. Doing so may cause short-circuit of connectors or ports.

Stop using this device immediately when there is a leakage from the built-in battery or odor, and keep it away from fire.
Failing to do so may start a fire from the leak liquid or cause an ignite or explosion.

Use this device in an environment in which the ambient temperature range is 5 to 35°C (41 to 95°F).
For the operating temperature range of your device, refer to the user's manual of the relevant device.

Stop charging this device if charging does not stop after a long time.
Failing to do so may cause an overcharge.

Do not place this device close to heating utensils such as microwave ovens or induction cookers, or inside a pressurized container.

Do not charge the device the way other than designated.

Do not use or store this device under the following conditions.

- Places where the temperature gets hot such as near fires or heaters; places in direct sunlight or inside a car.
- Places with high humidity or condensation such as bathrooms, kitchens, or near humidifiers.
- Dusty places.
- Unstable places, including on a wobbling platform or tilting place.
- Covered with a cloth or blanket.

Do not allow conductive objects (necklaces, hairpins, pencil leads, metal straps) to come in contact with this device's connectors or ports and do not carry or place this device with them.
Make sure no dust gets inside. It may cause heat, fire, and explosion.

Do not stab sharp objects (such as nails) into this device or subject it to excessive shocks with hard objects (such as hammers) or stamping.
It may cause fire, explosion, heat, and battery leakage.

Do not apply heat to this device or throw it in a fire.
It may cause fire, explosion, heat, and battery leakage.

Do not disassemble or modify.

Do not splash liquids, including juice other than rain/water, salt water, pet urine, skin lotion, soapy solution, or hot or cold water, over the earbuds. In addition, do not immerse them in these liquids or water.
Wipe off rainwater, sweat, or water with a dry cloth on the earbuds before placing them in the charging case. Stop using the device when liquids other than these may be splashed.

The charging case is not splash/sweat-proof. Do not get the device wet with sweat, rain, water, salt water, pet urine, skin lotion, soapy solution, or other chemicals, or do not handle the device with wet hands. In addition, do not place the device near a container that contains liquid, including a vase or flower pot, cup, and cosmetics.
Stop using this device if it gets wet.

WARNING

For Safety from Low Temperature Burns and Failures

Before use, check and remove any foreign matter of the earbuds and inside connectors and ports of the charging cable.

Do not use or store this device under the following conditions.

- On beds
- Places easily accessible by infants
- Places nearby pets
- Places where flammable gas may be generated such as gas stations

Do not touch the device for a long time while charging.
Do not touch the product for a long time if you go asleep unknowingly or put it in your pocket.

CAUTION

For Safety from Injuries and Failures

Remove the charging cable when not in use.

When inserting the charging cable, check the orientation and insert it slowly. When disconnecting, hold the connector and pull it straight out.

Do not operate mobile devices, make a phone call, or watch the display while driving. Regarding operations of this device while driving, make sure to follow all local applicable laws. Even when no driving, do not use this device in places where it would be dangerous if you are unable to hear ambient sound, such as at railroad crossings, train station platforms, roads, and construction sites.

Do not let children use this device without proper supervision.

For Safety from Lost of Sight and Skin Hazard

Be careful of sharp edges and objects if this device breaks. If anything leaks from inside the device, do not let it come in contact with your face, hands, skin, or clothes.

If it comes in contact with your skin, rinse it off with clean water immediately. If it comes in contact with your eye or mouth, rinse it off with clean water immediately and seek medical advice.

Stop using this device immediately if you feel any abnormalities of skin due to use this product, and seek medical advice.

For Safety from Hearing Defect

Before use, lower the volume of the relevant device.

Stop using this device immediately if you feel discomfort during using the device.

Do not turn the volume up too loud or continue usage for an extended amount of time.

About Radio Waves

This product has been given a construction and design approval as a radio facility of a radio station for a low electric power data communication system based on the Radio Act. Therefore, no radio station's license is required to use this product. In addition, this product can be used only in the United States.

This product uses the same frequency band as that used for the following equipment and radio stations:

- Industrial, scientific, medical equipment
- A radio station for identifying a mobile object used for a factory's production line
 - A on-the-premise radio station (radio station which requires a license -A specific lower electric power radio station (radio station which does not require a license)
- An amateur radio station (radio station which requires a license)

Before using this product, ensure that a on-the-premise radio station for identifying a mobile object, a specific lower electric power radio station and an amateur radio station are not in operation nearby.

If a harmful radio wave interference for a on-the-premise radio station for identifying a mobile object is emitting from this product, immediately change the location where this product is used or stop using this product.

WARNING

Do not use this product near an equipment which may be seriously affected by improper operation of this product.

Failing to do so may start a fire from the leak liquid or cause an ignite or explosion.

Do not use this product at a location where use of radio waves is not allowed, for example, at a hospital or in an aircraft.

Medical devices (e.g., pacemaker) or electronic devices may be affected by the radio waves from this product.

LIMITED WARRANTY

U.S. only - 1 year
SB C&S Corp. ("SB"), solely for purchases made in the United States, warrants this product against defects in material or workmanship for the original end-use purchaser or the person receiving the product from such a purchaser as a gift ("You" or "Your") for the time period set forth above from the original date of purchase of the product. SB does not warrant this product for any other person or transferee. For this Limited Warranty to apply, the purchase must have been made directly from SB or a dealer authorized by SB. Pursuant to this Limited Warranty, SB will, at its sole option, replace the product with a new or recertified/refurbished product or part of the same (or similar) model. For purposes of this Limited Warranty, "recertified" or "refurbished" means a product or part that has been returned to its original specifications. **In the event of a defect, these are Your exclusive remedies.** SB does not warrant that the operation of the product will be uninterrupted or error-free. SB will not replace any consumable needed for operation of this product (such as fuses or batteries). **This Limited Warranty covers only the hardware components packaged with the product.** It does not cover separate accessories nor does it cover technical assistance for hardware usage. If you purchased an extended service plan, please refer to the service plan for the coverage, duration and terms of service. Extended service plans are not governed by this Limited Warranty.

This Limited Warranty does not cover defects or damage resulting from improper or reasonable use or maintenance; failure to follow operating instructions; accident; excess moisture; insects; lightning; power surges; connections to improper voltage supply; unauthorized alteration or modification of original condition; damages caused by inadequate packing or shipping procedures; loss of, damage to or corruption of stored data; malfunctions due to PC/peripherals/accessories; or repair of products damaged by any of the foregoing. **This Limited Warranty does not cover products modified or adapted to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, and products purchased from unauthorized dealers.** **To obtain warranty service,** You must have a dated purchase receipt. SB will not pay Your costs of shipping, insurance or transporting the product to SB, or any import fees, duties and taxes. SB cannot guarantee that it will be able to repair any product under this warranty or make a product exchange without risk to or loss of software or data.

This Limited Warranty does not cover any product sold "AS IS" or "WITH ALL FAULTS", expressly or implied. SB will not replace missing components from any package purchased "Open Box" or "AS IS". This Limited Warranty is valid only in the United States

LIMITATION ON DAMAGES: EXCEPT AS EXPRESSLY SET FORTH IN THE PRECEDING SENTENCES, SB HAS NOT MADE, DOES NOT MAKE, AND WILL NOT MAKE ANY REPRESENTATION OR WARRANTY, EXPRESS OR IMPLIED, WITH RESPECT TO THE MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SAFETY, DESIGN, CONDITION, QUALITY, CAPACITY, ENVIRONMENTAL COMPLIANCE, OPERATION, PERFORMANCE, DURABILITY, OR SUITABILITY FOR YOUR PURPOSES OF THE PRODUCT IN ANY RESPECT. TO THE EXTENT PERMITTED BY LAW, SB SHALL NOT BE LIABLE FOR ANY INCIDENTAL, SPECIAL, PUNITIVE, EXEMPLARY OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. ON THIS PRODUCT, NOR SHALL RECOVERY OF ANY KIND AGAINST SB BE GREATER THAN THE ORIGINAL PURCHASE PRICE OF THE PRODUCT FROM SB OR AN AUTHORIZED SB DEALER. TO THE EXTENT PERMITTED BY LAW, ANY IMPLIED WARRANTY SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental, punitive, special, exemplary or consequential damages. So, the above limitation or exclusions may not apply to You. This limited warranty gives You specific legal rights and You may have other rights which vary from state to state or jurisdiction to jurisdiction. **ARBITRATION: YOU AGREE THAT DISPUTES BETWEEN YOU AND SB WILL BE RESOLVED BY BINDING, INDIVIDUAL ARBITRATION, AND YOU ARE WAIVING YOUR RIGHT TO A TRIAL BY JURY OR TO PARTICIPATE AS A PLAINTIFF OR CLASS MEMBER IN ANY PURPORTED CLASS ACTION OR REPRESENTATIVE PROCEEDING.** THIS NOTICE ABOVE DOES NOT APPLY IF: (1) YOU ARE A RESIDENT OF ANY JURISDICTION WHICH DOES NOT ALLOW THIS ARBITRATION AGREEMENT, (2) YOU OPT OUT OF ARBITRATION AS DESCRIBED IN THE "OPT-OUT INSTRUCTIONS" SECTION BELOW, OR (3) EXCEPT FOR CERTAIN TYPES OF DISPUTES DESCRIBED IN THE PARAGRAPH BELOW.

What Happens If We Have A Dispute: If You live in the U.S. or another jurisdiction which allows You to agree to arbitration, You and SB agree that any disputes **shall be resolved exclusively through binding arbitration**, except that each party retains the right: (a) to bring an individual action in small claims court and (b) to seek injunctive or other equitable relief in a court of competent jurisdiction notwithstanding, or violation of a party's copyrights, trademarks, trade secrets, patents, or other intellectual property rights. Notwithstanding this arbitration agreement, SB reserves the right to bring an action in any court of competent jurisdiction against You to stop and/or seek compensation for the intentional or willful misuse or abuse of its IP, products, and services. Without limiting the preceding, an individual basis in small claims court or other similar court of limited jurisdiction if You provide SB with written notice according to the "Opt-Out Instructions" Section, to the extent the amount at issue does not exceed \$15,000, and as long as such court has proper jurisdiction and all other requirements (including the amount in controversy) are satisfied. If You don't provide SB with an Arbitration opt-out notice within the period described in the "Opt-Out Instructions" Section, You will be deemed to have knowingly and

intentionally waived Your right to litigate any dispute except as expressly set forth in clauses (a) and (b) above.

Arbitration Instructions: To begin Arbitration, either You or SB must make a written demand to the other for arbitration. The Arbitration will take place before a single arbitrator. The Arbitration will be administered by the American Arbitration Association ("AAA") in accordance with the Commercial Arbitration Rules and the Supplementary Procedures for Consumer Related Disputes ("Rules") then in effect (the Rules are available at www.adr.org or by calling AAA at 1-800-778-7879). The filing fees to begin and carry out arbitration will be shared between You and SB, but in no event shall Your fees ever exceed the amount allowable by the special rules for Consumer Disputes provided for by AAA, at which point SB will cover all additional administrative fees and expenses. This does not prohibit the Arbitrator from giving the winning party their fees and expenses of the arbitration when appropriate pursuant to the Rules. Unless You and SB agree differently, the arbitration will take place in the country and state where You live, and applicable federal or state law shall govern the substance of any Dispute during the arbitration. The Federal Arbitration Act will govern the interpretation and enforcement of this Section. The arbitrator's decision will be binding and final, except for a limited right of appeal under the Federal Arbitration Act.

Opt-Out Instructions: IF YOU DO NOT WISH TO BE BOUND BY THE BINDING ARBITRATION PROCEDURE, THEN: (1) You must notify SB in writing within 30 days of the date that You purchased the product; (2) Your written notification must be mailed to: SB C&S Corp., 1-7-1 KASGAN, MINATO-KU, TOKYO, 105-0022 JAPAN, Attn: Customer Support; AND (3) Your written notification must include (a) Your NAME, (b) Your ADDRESS, (c) the DATE You purchased the product, and (d) a clear statement that "YOU DO NOT WISH TO RESOLVE DISPUTES WITH ANY SB ENTITY THROUGH ARBITRATION AND/OR BE BOUND BY THE CLASS ACTION WAIVER." Opting out of this resolution procedure will not affect the coverage of the Limited Warranty in any way, and You will continue to enjoy the benefits of the Limited Warranty.

Governing Law: For purchases made in the U.S., this Limited Warranty is governed by the laws of the State of California, excluding its conflicts-of-law rules. For purchases made in a country other than the U.S., this Limited Warranty is governed by the laws of Japan, excluding its conflicts-of-law rules. If You are resident in a country in which this clause is prohibited by local law, this section does not apply to You, and does not deprive You of the protection of the mandatory provisions of the consumer protection laws in Your country.

About this Document and Device

This product is for use only in the United States. We bear no responsibility for any damages or losses arising from use of, or inability to use, this product outside the United States and provide no technical support or after-service for this product outside the United States.)

We bear no responsibility for any affects caused by the use of this product.

This product and this document are subject to change without prior notice due to such reasons as improvements, etc.

USB Type-C is a trademark of USB Implementers Forum.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by SB C&S Corp. is under license.

©2013-2022 Tile Inc., TILE and the TILE design are trademarks of Tile, Inc.

All other company names, brand names, system names and product names described in the document are generally trademarks or registered trademarks of respective companies and individuals.

SB C&S Corp. is authorized to manufacture and distribute this licensed product. Reproduction and distribution of this product without written permission is strictly prohibited and is subject to legal action.

© BIGHT MUSIC & HYBE. All Rights Reserved.

For Long Use of the Device

The battery life of the lithium ion battery used in this device and the charging case shortens due to usage and the passage of time. Please purchase a new product if the length of time you can use this device drops to less than half even when fully charged. Though the life of this product may vary depending on usage and environment, follow the storage instructions to prevent the device from deteriorating quickly if it is not used for a long time.

- Do not keep this device in a fully charged or no charge state for a long time.
- Remove this device from the charging case and re-charge it every three months to confirm that the LED indicator on the earbuds turns on. Charge the device for several tens of minutes if it does not.

Product Inquiry

For customers in the United States, contact TNK Logistics by GLOBAL BRAND INC.
email: support@globalbrand.co.jp
service time : 10:00 a.m. to 5:00 p.m. (JST)
excluding weekend, Japanese national holidays and other special holidays