


Curtain String Lights Instruction

● Intended Use

This product is only intended for use indoors, in dry and enclosed areas. This product is only designed for use in private households. Other uses of or changes to the product are not as intended and could lead to risks such as injuries and damage.

● Delivery Scope

- 1 Indoor LED curtain lights with hooks
- 1 USB connector
- 1 Control
- 1 Operating manual

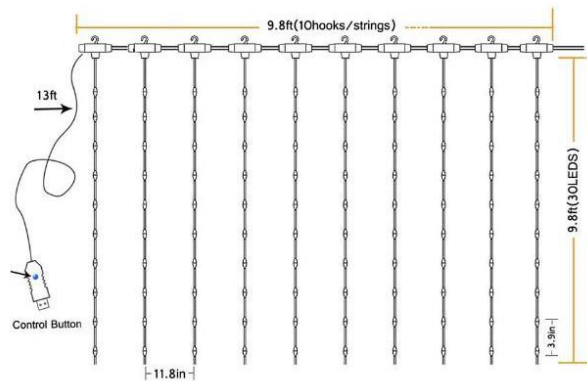


● How to Install the Curtain String Lights

- Step 1 Clip the hooks on the curtain or hang the main power cable onto the hook, and make sure the whole length for all six clips is within 3M/9.8ft.
- Step 2 Unfold the curtain lights and untie each light carefully. To avoid damage to the lights, please do not pull the lights with force when they are knotted.
- Step 3 Please straighten each pendant light to create better lighting effect.
- Step 4 Plug USB port onto USB charge, press power button on the USB port to turn on the lights. Switch different lights modes by repeatedly pressing the button.

● Remote and USB Control

1. Combination
2. In wave
3. Sequential
4. Slo glo
5. Chasing / Flash
6. Slow fade
7. Twinkle / Flash
8. Steady on

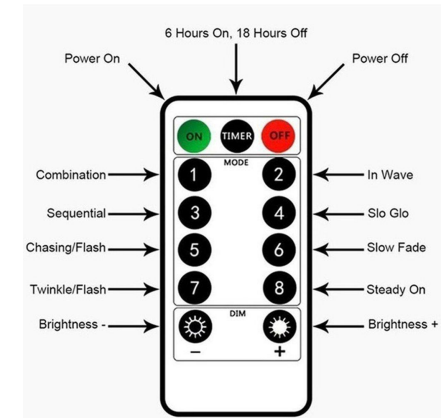

1. Press the button "on" to turn on the lights.
2. Press any of the buttons from "1" to "8" to switch the light modes. Press "1" to cycle the modes from "2" to "8".
3. Timer Program: Press the button "Timer" to activate timer program in any mode, once selected, the lights will turn on in the preprogrammed timing sequence of 6 hours on, 18 hours off over each 24 hours period. Timing sequence will continue until switched off or battery power is depleted.
4. Press "-" or press "+" of remote control to adjust the brightness of the lights.

● Tips:

1. Please remove the insulating plastic before use the Remote.
2. The remote controller should be faced to the front of the Battery box (Signal Receiver) rather the lights. The remote distance is within 30ft.
3. Once the mode is selected, the lights will work in this mode next time and you don't need to worry about re-set until battery power is depleted.
4. The timer function will work only when you switch to 'TIMER'. Please set the mode you need before switching to 'TIMER'. With a flash of the lights, Timer function is activated.
5. This remote control may interfere with other household appliances.

