



CYCLONIC SUCTION



60 MINS RUN TIME



CORDLESS



3 SPEEDS



ALL FLOORS



WASHABLE FILTER



CYCLONE DIGI ONE

29.6V CORDLESS VACUUM

User Manual

* Please refer to the warranty section for terms of your extended guarantee.



* Terms and conditions apply.

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:

- Read and familiarise yourself with all operating instructions before using this Vacuum Cleaner.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- Do not immerse the appliance or its cord in water or any other liquids.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Do not use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
- Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and



allow to cool.


- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- Do not use this appliance for anything other than its intended use.
- Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the plug, not the cord.
- Do not pull or carry the Vacuum Cleaner by the electrical cord, use the handle provided.
- Ensure fingers and other objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped if the vacuum is used improperly.
- Keep hair, loose clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Keep all air vents clear and free of dust, lint, hair and anything else that may reduce airflow.
- Avoid directing the appliance towards naked flames as the air discharged may extinguish gas fires or pilot lights and may disturb ashes in open fires.
- Do not Vacuum water or any other liquids with this vacuum.
- Do not Vacuum hot ashes or lit cigarettes, etc.
- Never use the appliance without the filter in place.
- Do not use the Vacuum without the Dust Compartment attached.
- Do not vacuum any large or broken objects such as glass.
- Do not vacuum anything that is burning or smoking such as cigarettes, matches or hot ashes.

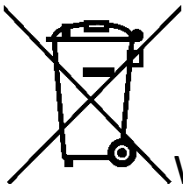

Waste batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.




Description of Parts

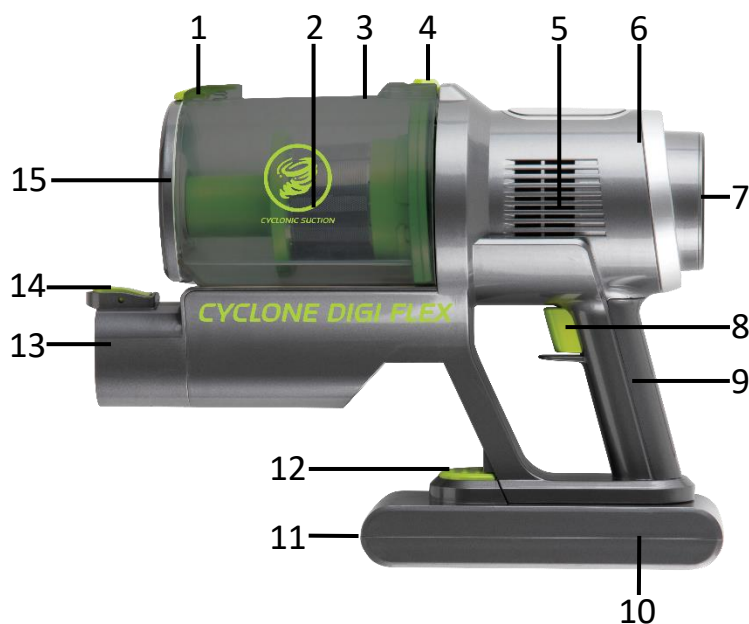


1. Dust Release Catch
2. Hepa & Cyclonic Filters
3. Dust Compartment
4. Dust Compartment Catch
5. Air Outlet
6. Motor Housing
7. Display Panel
8. On/Off Trigger Switch
9. Handle
10. Battery Compartment
11. Charging Socket
12. Battery Compartment Catch
13. Air Intake
14. Attachment Release Catch
15. Dust Compartment Cover

Description of Parts – Accessories

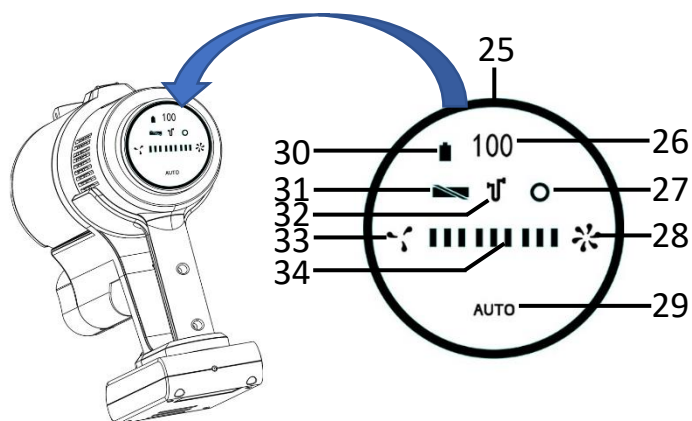

22. Carpet Brush
23. Hard Floor Brush
24. Long Reach Crevice Tool
25. Information Screen
26. Battery Charge Display
27. Dust Sensor Failure
28. High Speed
29. Intelligent AUTO Mode
30. Battery Indicator
31. Brush Blockage Indicator
32. Air Intake Blockage Indicator
33. Eco Speed
34. Speed/Suction Indicator



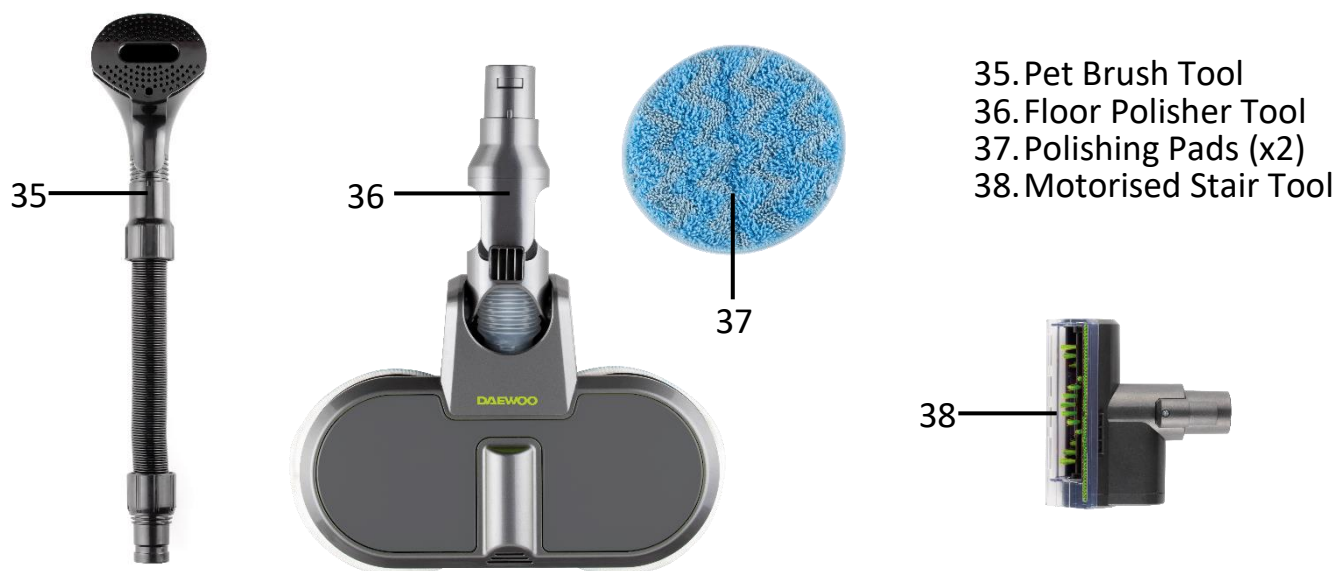

Before the first time you use your Cordless Vacuum Cleaner

Please read these operating instructions thoroughly and keep them in a safe place for future reference.

Remove all packing materials and discard responsibly.

Charging the internal Battery

Before use, please ensure that the internal rechargeable battery is fully charged as follows:

1. Insert the **Small Power Plug** (18) of the **Mains Charger** (19) into the **Charging Socket** (11).
2. Plug the **Mains Charger** (19) into the nearest mains socket.
3. The **Battery Indicator** (30) will flash green and the **Battery Charge Display** (26) will count up to 100% as the internal battery charges.
4. Once the battery is fully charged (after approximately 5 hours), the **Battery Charge Display** (26) will display 100 (arrowed below) showing that the internal battery is 100% fully charged and the **Mains Charger** (19) can now be removed.

NB Left: The internal battery will need recharging when the **Battery Indicator** (30) flashes red and the **Battery Charge Display** (26) reads a low value (less than 10%). Follow the above procedure (1 – 4) to recharge the internal battery.



Attaching the Accessories

CAUTION Ensure that the vacuum cleaner is not connected to the mains charger before use.

The Floor Attachment

1. Push the **Aluminium Flexi Tube** (21) onto the **Air Intake** (13) until it clicks home as shown below:



2. Push the **Motorised Floor Tool** (16) onto the other end of the **Aluminium Flexi Tube** (21) again until it clicks home.




Selecting the Correct Brush for the Motorised Floor Tool (16)

1. Before using the **Motorised Floor Tool** (16), first choose the appropriate brush type for the floor type being cleaned:

Select the **Carpet Brush** (22) for vacuum cleaning carpets, rugs, etc.



Select the **Hard Floor Brush** (23) for cleaning vinyl, laminate, tiled floors, etc.

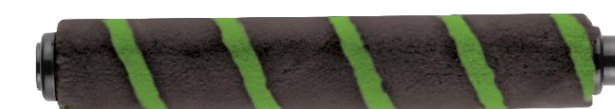

2



b.


2. To change the brush attachment, slide the catch (a) to the left and lift up the brush bearing retaining clip (b) on the underside of the **Motorised Floor Tool** (16) as shown left. **NB** the **Carpet Brush** (22) is currently fitted in this example.



c.

Lift out the **Carpet Brush** (22) and the brush bearing (c). Remove the brush bearing from the **Carpet Brush** (22).

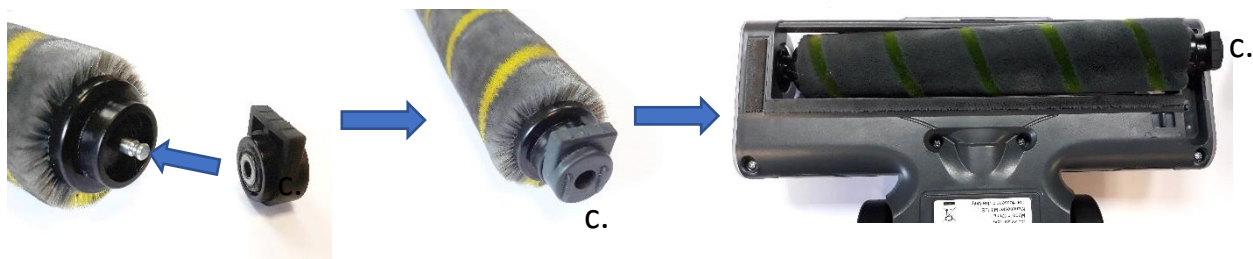

3


3. Place the brush bearing (c.) onto the end of the **Hard Floor Brush** (23) as shown above left. Once in place, insert the **Hard Floor Brush** (23) into the **Motorised Floor Tool** (16) as shown above right.

4


4. Finally, hook the brush bearing retaining clip at the front edge (d) and push down into until it clicks into place (e) as shown left. The vacuum is now ready to clean hard floors.

Using Your Cyclone Digi-Flex Vacuum Cleaner

1. **Right:** Grasp the vacuum cleaner firmly by the **Handle** (9) and press the **On/off Trigger Switch** (8) to power up the cleaner.

1

2


2. **Left:** During use, refer to the **Information Screen** (25), press the **Eco Speed** (33) to lower the vacuum speed/suction or **High Speed** (28) to increase speed/suction. The **Speed/Suction Indicator** (34) will move to show the current speed/suction level (low to high) selected. Alternatively press the 'AUTO' mode so that the vacuum will automatically vary the speed/suction power for the conditions.



3

3. **Right:** Place your foot gently on the **Motorised Floor Tool** (16) and pull the cleaner back by the **Handle** (9) and start vacuum cleaning.
Press the **On/off Trigger Switch** (8) again at the end of cleaning to switch the cleaner off.

Far Right: Press the catch on the Flexi joint (arrowed right) to release the **Aluminium Flexi Tube** (21) so that the tube can 'flex' in order to clean under furniture and other close to the ground objects.


4


4. **Left:** If the **Aluminium Flexi Tube** (21) is not required, the **Motorised Floor Tool** (16) can be attached directly to the vacuum as shown left for cleaning hard to get at areas such as stairs, car seats, etc.

Using the Crevice & Upholstery Tool (17)

1. Attach the **Crevice Tool & Upholstery Tool** (17) onto the **Aluminium Flexi Tube** (21) to clean carpet edges and hard to get at areas:



Left: Slide the brush back on the tool to reveal the crevice tool to clean carpet edges, etc. Alternatively use the **Long Reach Crevice Tool** (24).

Right: Pull the brush down on the tool to clean curtains, upholstery, etc.



2. If the **Aluminium Flexi Tube (21)** is not required, attach the **Crevice Tool & Upholstery Tool (17)** directly to the cleaner, this useful for cleaning soft furnishings, car seats, stairs, etc.:



Above: Using the **Crevice Tool & Upholstery Tool (17)** on Upholstery.



Above: Using the **Crevice Tool & Upholstery Tool (17)** to clean the car.

Using the Floor Polishing Tool (36)

1. Before using the **Floor Polishing Tool (36)**, turn the unit upside down and attach the two **Polishing Pads (37)** by pressing them onto the rotating plates as shown below:

1



1. **Left:** Attach the **Polishing Pads (37)** by pushing the pads against the Velcro pads on the underside of the polisher.

2



2. **Right:** Apply polish (not supplied) to the floor surface.
WARNING do not use the polishing tool without polish otherwise damage may occur to the appliance and/or the floor surface.




3


3. **Left:** Place your foot gently on the **Floor Polishing Tool (36)** and pull the cleaner back by the **Handle (9)**. Press the **On/off Trigger Switch (8)** to start the polishing action, move the polisher gently along the floor as shown left. Press the switch again at the end of polishing to switch the cleaner off.

Using the Pet Brush Tool (35)

1. Connect the **Pet Brush Tool (35)** to the cleaner as shown below:

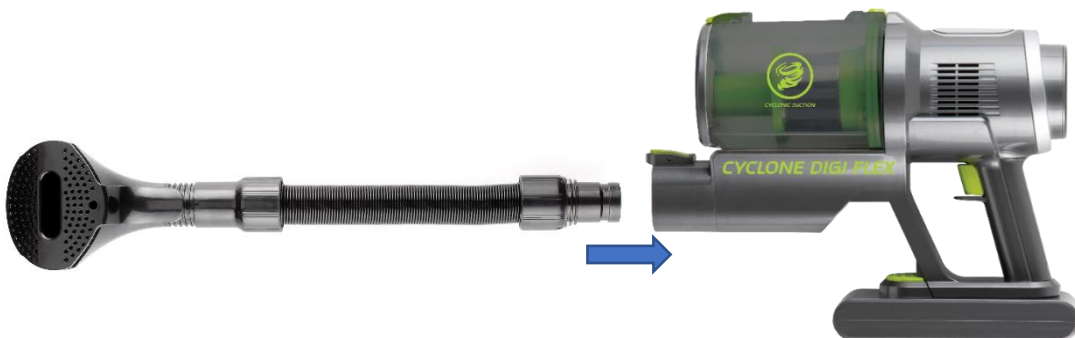1

2

2. Squeeze the trigger on the **Pet Brush Tool (35)** to reveal the brush teeth and brush the pet's coat as shown below:



3. Once the brush is full of hair:

a. Press the **On/off Trigger Switch** (8) to power up the cleaner.

b. Release the trigger button (arrowed right) on the **Pet Brush Tool** (35) and the hair will then be removed by the vacuum:

Repeat the above process to continue grooming your pet.

3

a.



b.



Using the Motorised Stair Tool (38)

Attach the **Motorised Stair Tool** (38) to the cleaner, this useful for cleaning the stairs as below:



Emptying and Cleaning Your Cyclone Digi-Flex Vacuum Cleaner

WARNING Always disconnect the cleaner from the mains charger before cleaning.

1



1. Once the dust level reaches the 'MAX' mark (arrowed left) on the **Dust Compartment** (3) it will need emptying and the filters cleaned.

WARNING do not continue to use your vacuum cleaner once the 'MAX' mark has been reached as permanent damage may occur to the appliance.

2. **Right:** To empty the cleaner, hold the **Dust Compartment** (3) over a dust bin as shown right and press the **Dust Release Catch** (1) (arrowed right) and the **Dust Compartment Cover** (15) of the dust compartment will swing open and allow the collected dust to fall out into the dust bin.

2



3




2. Hold the **Dust Compartment** (3) and press the **Dust Compartment Catch** (4) arrowed left and lift up the dust compartment and remove.



4. Remove the **Hepa & Cyclonic Filters** (2) from the **Dust Compartment** (3) as shown right:

4

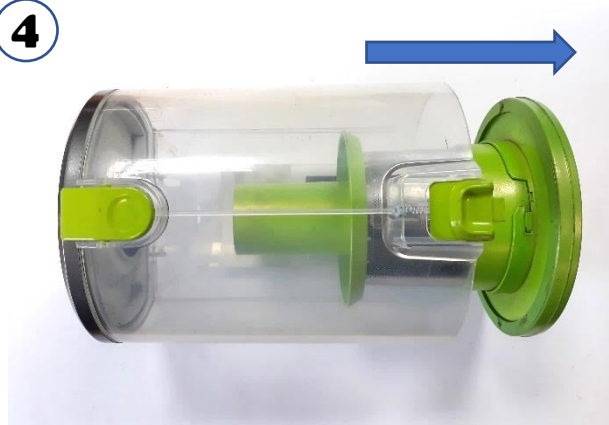


5



5. **Above:** Wash the **Hepa & Cyclonic Filters** (2) in warm running water until clean. Allow the filters to dry thoroughly for 24 hours before reuse.

Replacing the Filters in Your Cordless Vacuum Cleaner

6

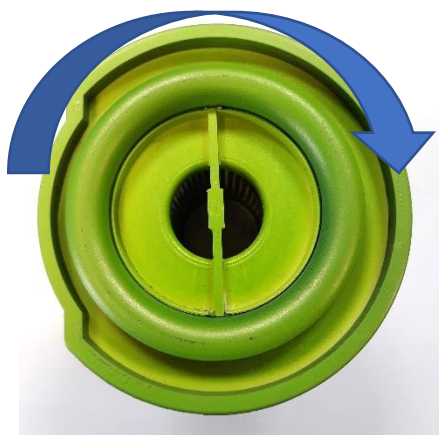

6. **Left:** First replace the Hepa Filter inside the Cyclonic Filter, rotate the Hepa filter clockwise to lock it onto the Cyclonic Filter as shown.



7

7. **Right:** Replace the **Hepa & Cyclonic Filters** (2) into the **Dust Compartment** (3) as shown.

**8**

8. **Left:** Replace the **Dust Compartment** (3) onto the vacuum by hooking the dust compartment on (arrowed left) and pushing it down until it clicks home as shown.

Care and Use of your Cordless Vacuum Cleaner

- Always disconnect the cleaner from the mains charger before cleaning.
- Clean outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner or its charger in water or any other liquids.
- Empty the **Dust Compartment** (3) as soon as the 'MAX' mark has been reached.*
- Wash the **Hepa & Cyclonic Filters** (2) regularly – see table below.
- Allow the filters to thoroughly dry out for 24 hours before reassembly and use.

***WARNING** do not continue to use your vacuum cleaner once the 'MAX' mark has been reached as permanent damage may occur to the appliance.



Recommended filter cleaning intervals

Filter Type	Recommended cleaning period
Hepa Filter 	• Shake out debris when you empty the dust container • Rinse under warm water once a month • Allow to dry thoroughly for 24 hours before reuse.
Cyclonic Filter 	• Shake out debris once a month • Rinse under warm water once a month. • Allow to dry thoroughly for 24 hours before reuse.

WARNING Ensure the filters are cleaned periodically according to the table above, failure to clean the filters regularly will severely impair the performance and permanent damage may occur to the appliance and may invalidate your warranty.

Technical Specification

Model Number	FLR00043
Mains Charger	Input: AC 100-240V ~ 50/60Hz Output: 36V DC 500mA
Rated Power	250W
Battery	29.6V 2500mAh Li-Ion (8 cells)
Unpacked Weight (approx.)	2.2 Kgs
Dimensions (approx.)	328mm (l) x 110mm (w) x 220mm (h)
Vacuum (max)	≥24kpa
Noise Level (approx.)	72dB
Dust Compartment Capacity	0.8L

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.

- *Replacement parts and accessories are guaranteed for 1 year from the date of purchase.*

- *It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance*



Troubleshooting Guide

Problem	Possible Cause	Solution
Unit fails to turn on.	Internal battery not charged. The charger is not plugged into the mains socket.	Charge the internal battery. Ensure the charger is fully inserted into the socket and the socket is switched on.
Low suction or poor pick-up.	Dust Compartment is full. Filters are clogged. Low Power Selected	Empty the cylinder. Check and clean the filters. Press the Min/Max Power Button (8)
The vacuum is making a "hissing" sound.	The airflow is restricted	Empty the Dust Compartment. Check and clean the filters. Clear any blockages if necessary.
 Brush Blockage Indicator (31) not lit	The Carpet Brush (22) or Hard Floor Roller (23) is obstructed and/or tangled with hair and debris	Switch off the vacuum cleaner and remove obstruction from the Carpet Brush (22) or Hard Floor Roller (23).
 Air Intake Blockage Indicator (32) not lit	The Aluminium Flexi-Tube (21) and/or vacuum Air Inlet (5) are blocked.	Switch off the vacuum cleaner and remove obstruction from the Aluminium Flexi-Tube (21) and/or vacuum Air Inlet (5)
 Dust Sensor Failure (27) Indicator not lit	The vacuum is very dirty and/or blocked and the Dust Compartment full.	Switch off the vacuum cleaner and empty and clean the Dust Compartment (3), Filters (2), Aluminium Flexi-Tube (21) and/or vacuum Air Inlet (5)



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.





DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo Vacuum.

As part of our commitment to quality we are offering you an extra 2 years warranty in addition to your 1 year guarantee.

Your Daewoo vacuum product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defects should arise due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The Guarantee is rendered invalid if the product has been resold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing) If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty* please register your purchase online within 28 days of the original purchase date by registering at www.daewoowarrantyregistration.com/warranty-registration

**Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.*

**ESG Ltd
Manchester M3 1JS**

www.esgltd.com

**Daewoo® is a registered trademark.
Produced and imported under licence by ESG Ltd**

