 




bestchoiceproducts

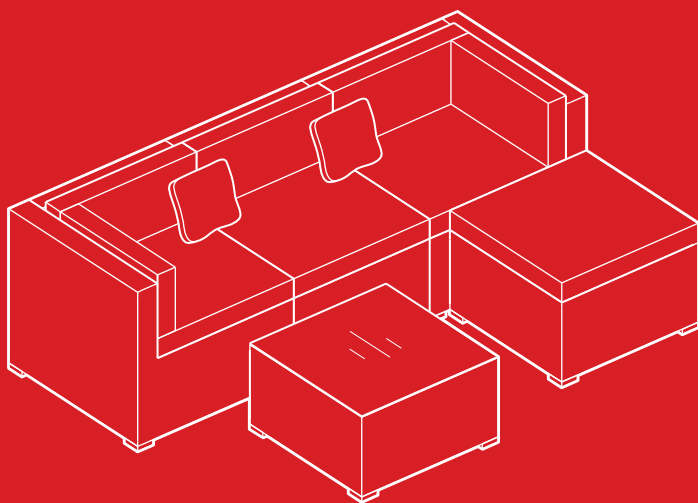

INSTRUCTION MANUAL

5-Piece Wicker Sofa Set

Ver. 2

SKY6141



! NOTICE

Please retain these instructions for future reference. Not for commercial use.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



1 PERSON
ASSEMBLY

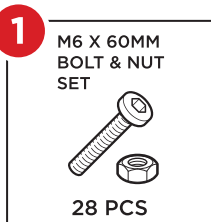 


TABLE
130 LBS
CAPACITY

 


CHAIR
360 LBS
CAPACITY


HARDWARE




28 PCS

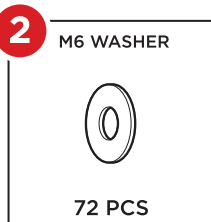


72 PCS

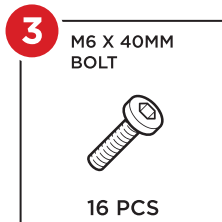 


16 PCS

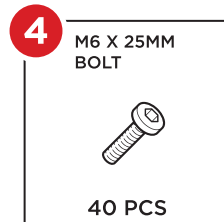 


40 PCS

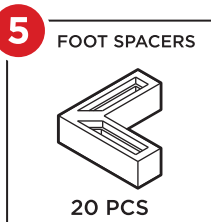 

20 PCS

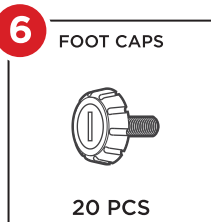 

20 PCS

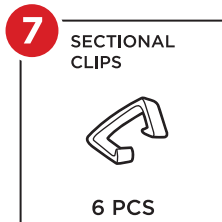 


6 PCS

PARTS

A

 
RIGHT BACK PANEL

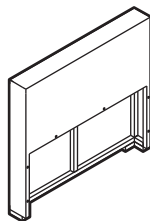

1 PC

A1

 
LEFT BACK PANEL

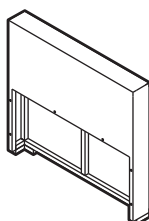

1 PC

B

 
RIGHT CORNER PANEL

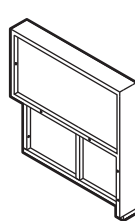

1 PC

B1

 
LEFT CORNER PANEL

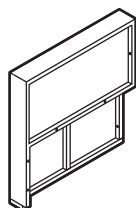

1 PC

C

 
CORNER SEAT FRAME

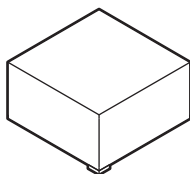

2 PCS

D

 
BACK CUSHION

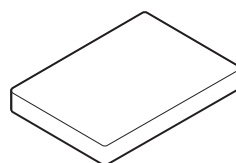

3 PCS

E

 
SIDE CUSHION

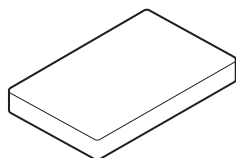

2 PC

F

 SEAT CUSHION

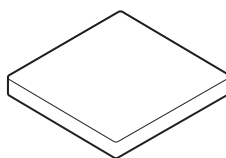

4 PCS

G

 
ACCENT PILLOW



2 PCS

H


MIDDLE BACK PANEL

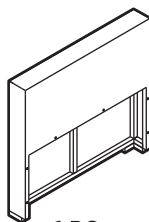

1 PC

I

 
MIDDLE SEAT FRAME

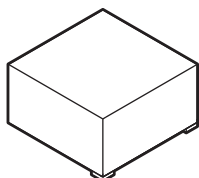

1 PC





J

 GLASS TABLETOP

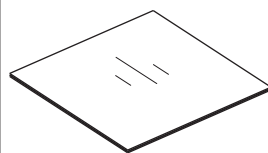

1 PC

    
PARTS

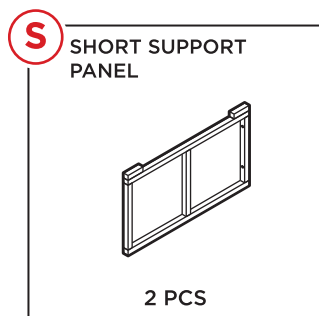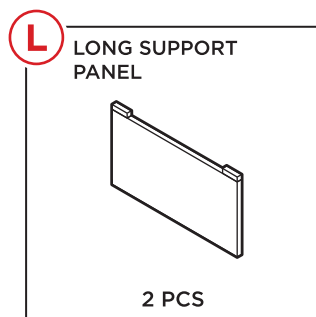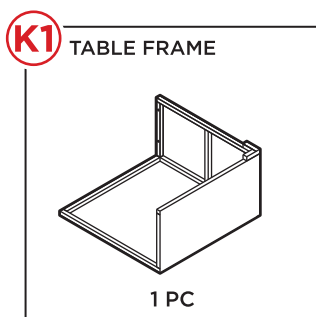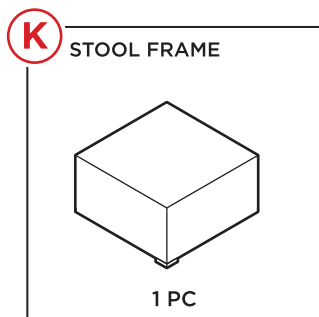

MIDDLE SEAT

1

 
Attach one **part H middle back panel** to one **part I middle seat frame** with six **part 1 nut & bolt sets** and twelve **part 2 washers**.

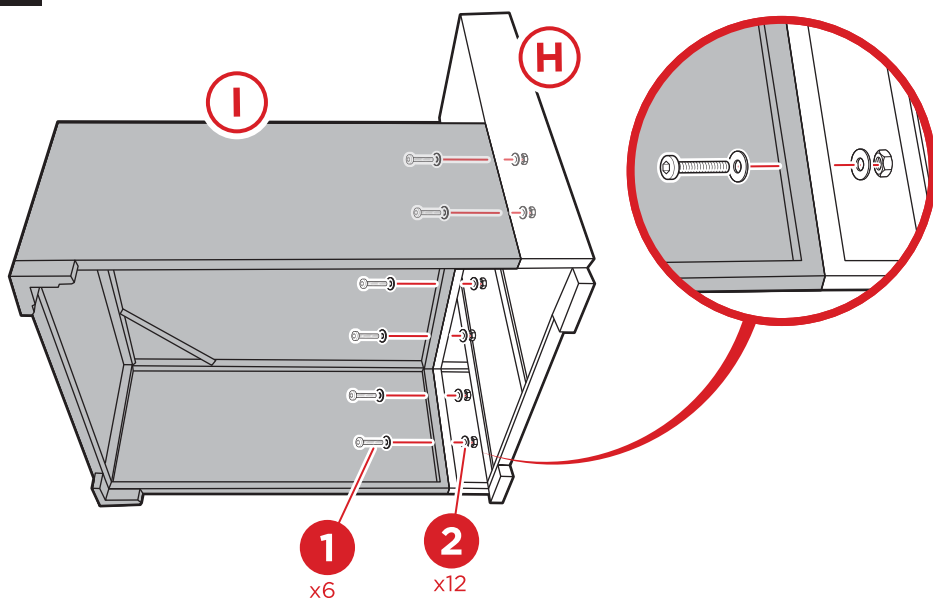

MIDDLE SEAT


2

 Flip the assembly, then attach four **part 5 foot spacers** with eight **part 4 bolts**, two bolts per spacer. Secure with four **part 6 foot caps**.

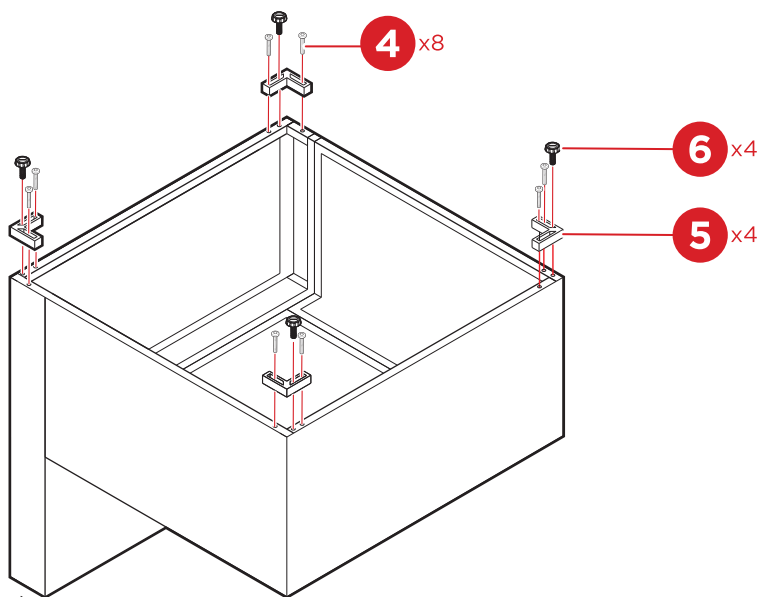

3

 
Place one **part F seat cushion** onto the seat then place one **part D back cushion**.

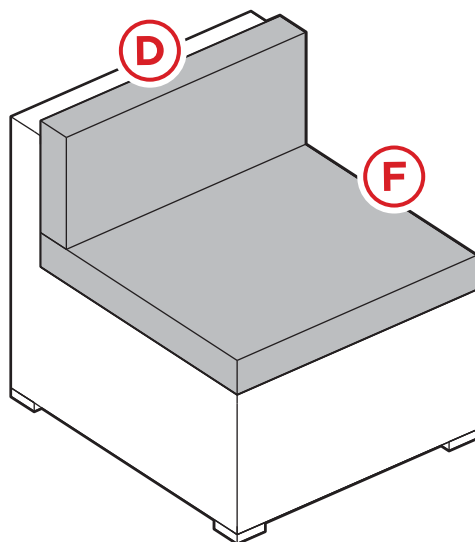

RIGHT CORNER SEAT


1

 Attach one **part A right back panel** to a **part B right corner panel** with three **part 1 bolt and nut sets** and six **part 2 washers**.

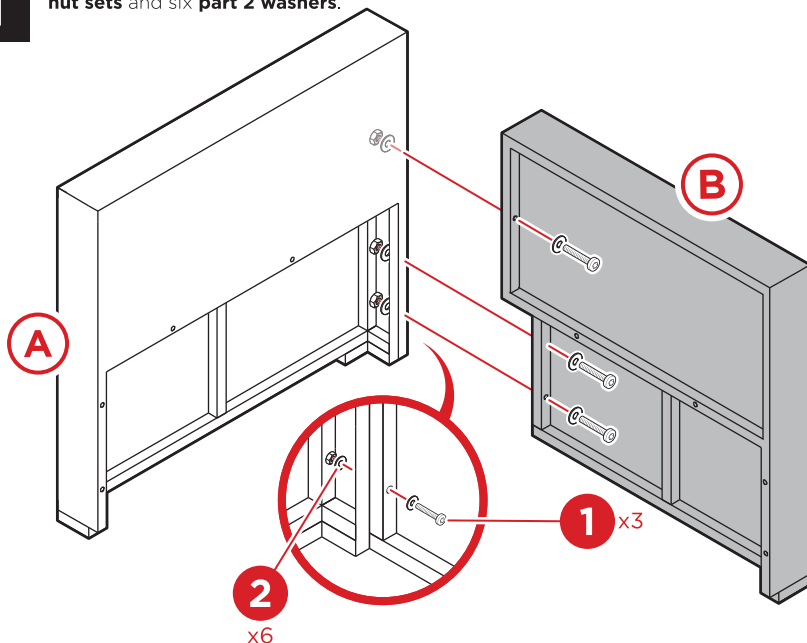

2

 
Attach the panel assembly to one **part C corner seat frame** with eight **part 1 bolt and nut sets** and sixteen **part 2 washers**.

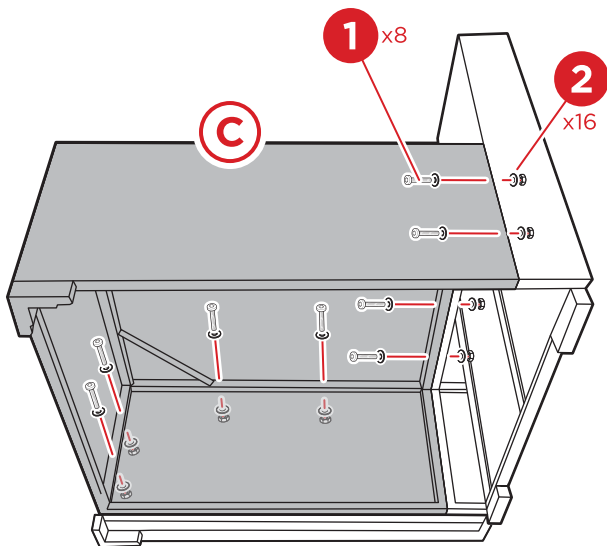

RIGHT CORNER SEAT


3

 Flip the assembly, then attach four **part 5 foot spacers** with eight **part 4 bolts**, two bolts per spacer. Secure with four **part 6 foot caps**.

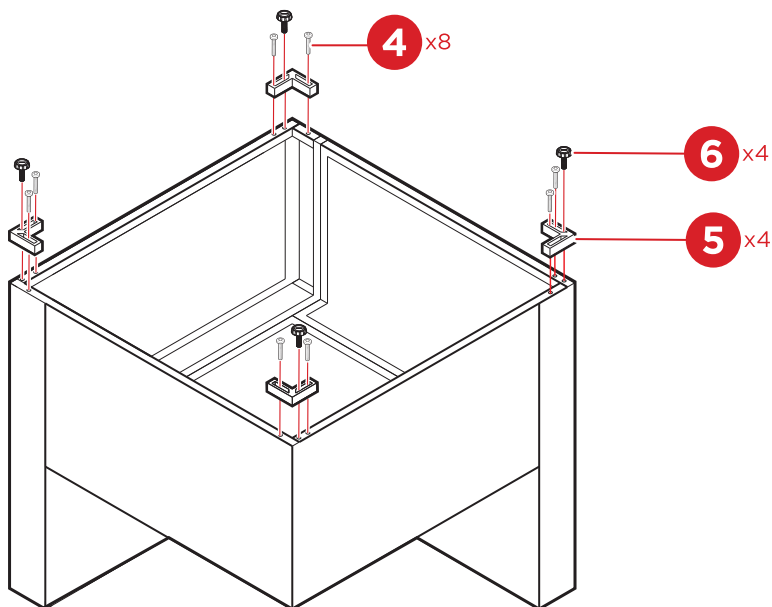

4

 
Place one **part F seat cushion** onto the seat then place one **part D back cushion** and one **part E side cushion**.

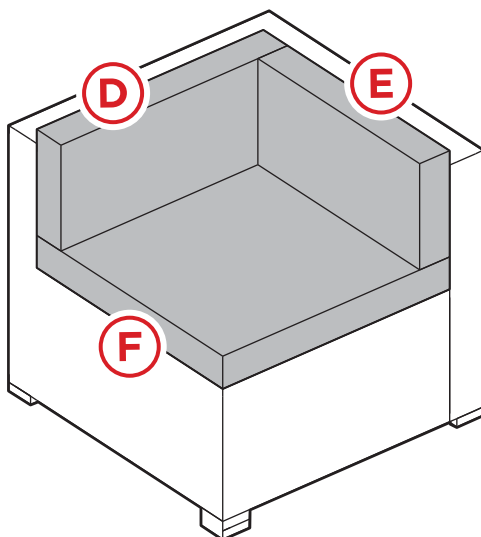

LEFT CORNER SEAT


1

 Attach one **part A1 right back panel** to a **part B1 right corner panel** with three **part 1 bolt and nut sets** and six **part 2 washers**.

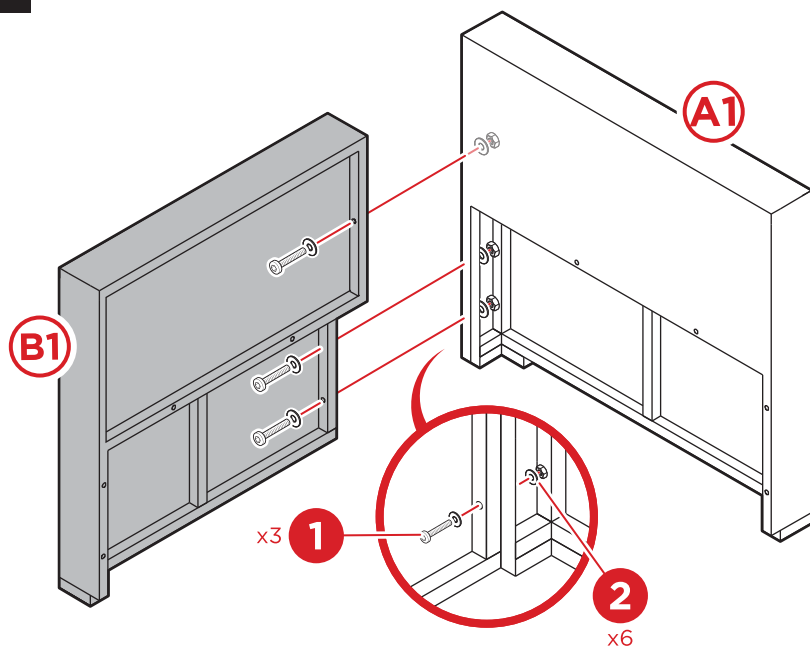

2

 
Attach the panel assembly to one **part C corner seat frame** with eight **part 1 bolt and nut sets** and sixteen **part 2 washers**.

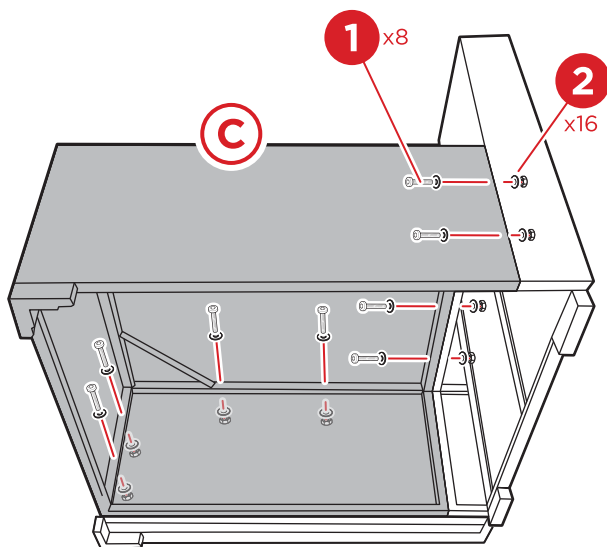

LEFT CORNER SEAT


3

 Flip the assembly, then attach four **part 5 foot spacers** with eight **part 4 bolts**, two bolts per spacer. Secure with four **part 6 foot caps**.

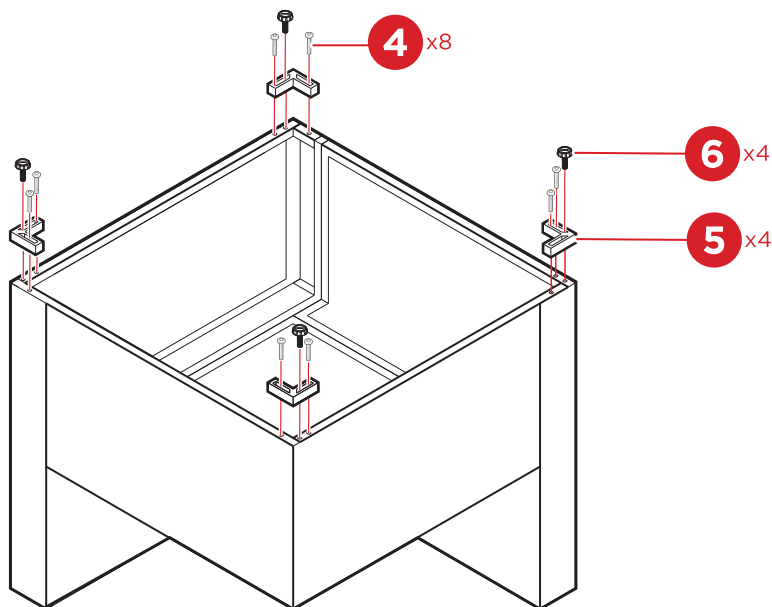

4

 
Place one **part F seat cushion** onto the seat then place one **part D back cushion** and one **part E side cushion**.

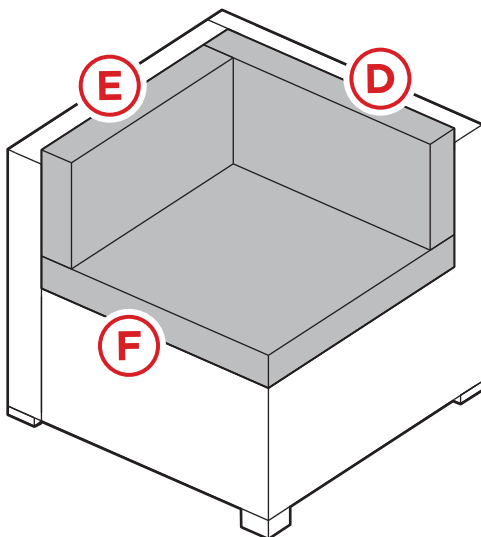

FOOTSTOOL


1

 Attach one **part S short support panel** to one **part K stool frame** with two **part 3 bolts** and two **part 2 washers**.

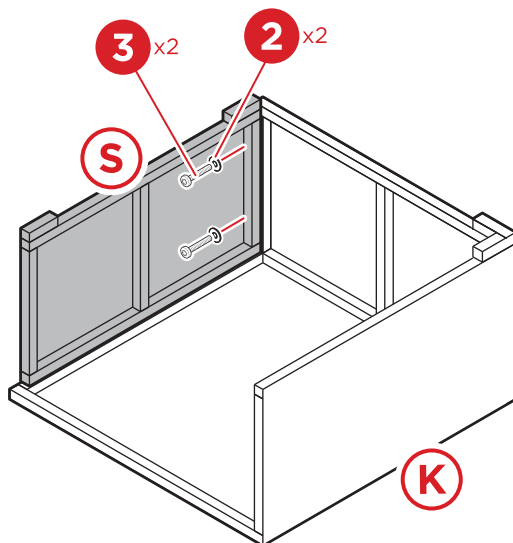

2

 
Attach one **part L long support panel** to the stool frame assembly with four **part 3 bolts** and four **part 2 washers**.

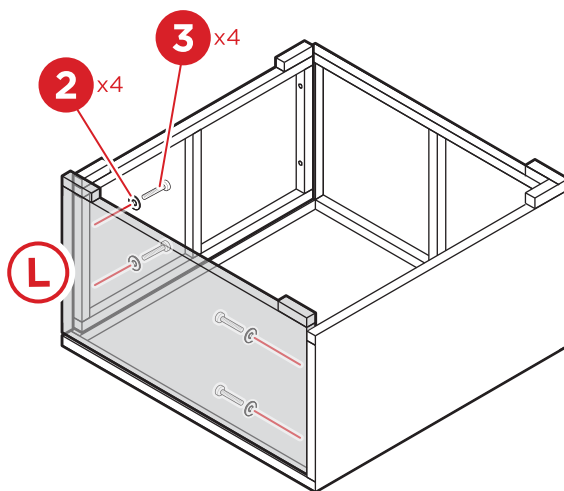

FOOTSTOOL


3

 Secure the two panels with two **part 3 bolts** and two **part 2 washers** (one set per panel).

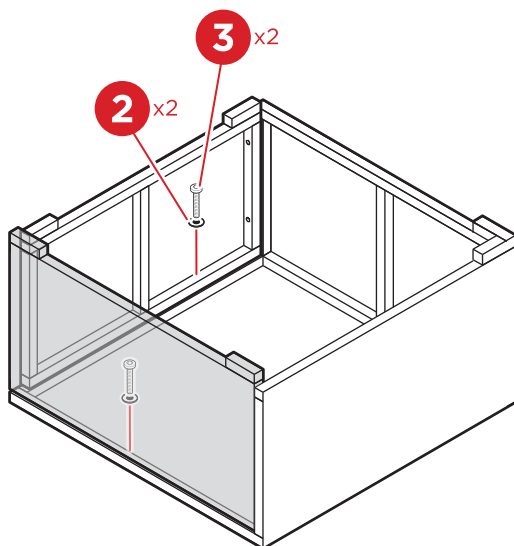

4

 
Flip the assembly, then attach four **part 5 foot spacers** with eight **part 4 bolts**, two bolts per spacer. Secure with four **part 6 foot caps**.

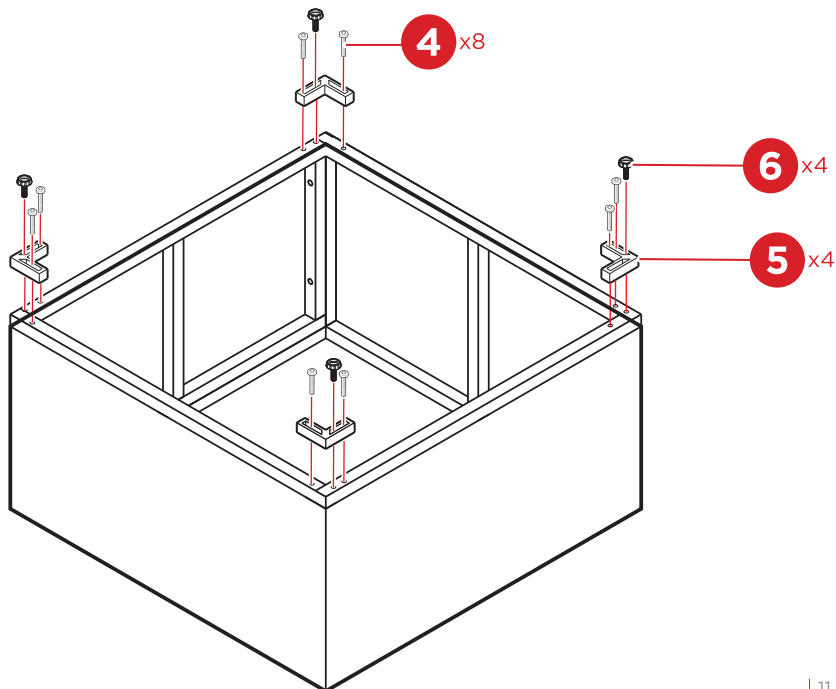

FOOTSTOOL

5

 
Place one **part F seat cushion** on top of the stool frame.

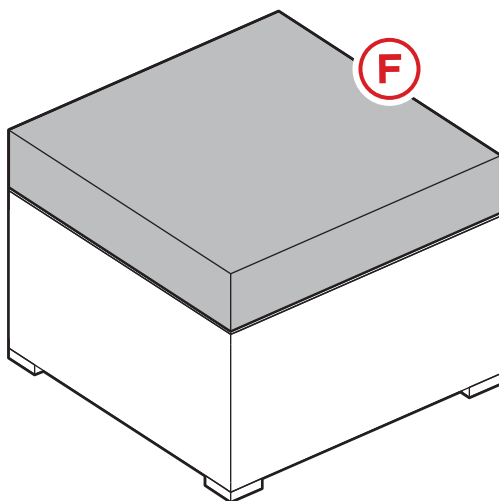

TABLE

1

 
Attach one **part S short support panel** to the **part K1 table frame** with two **part 3 bolts** and two **part 2 washers**.

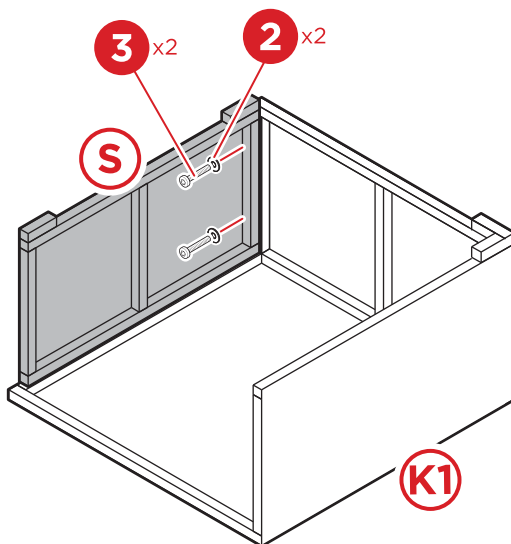

TABLE


2

 Attach one **part L long support panel** to the table frame assembly with four **part 3 bolts** and four **part 2 washers**.

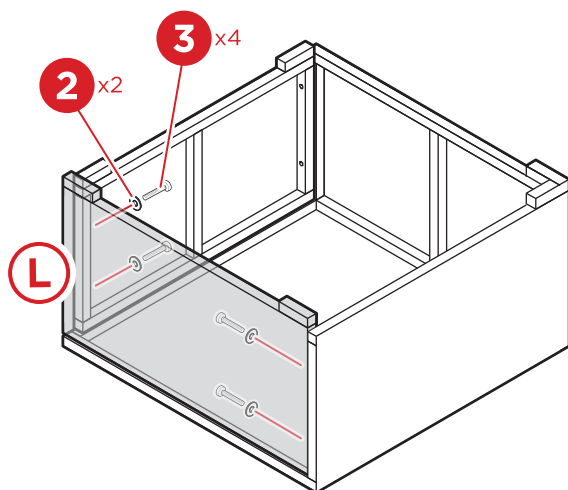

3

 
Secure the two panels with two **part 3 bolts** and two **part 2 washers** (one set per panel).

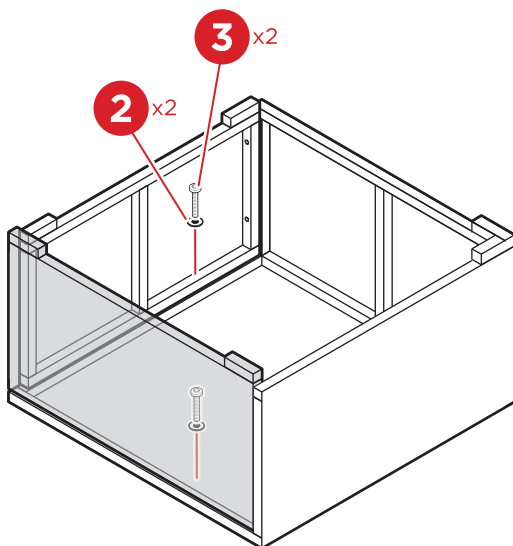

TABLE


4

 Flip the assembly, then attach four **part 5 foot spacers** with eight **part 4 bolts**, two bolts per spacer. Secure with four **part 6 foot caps**.

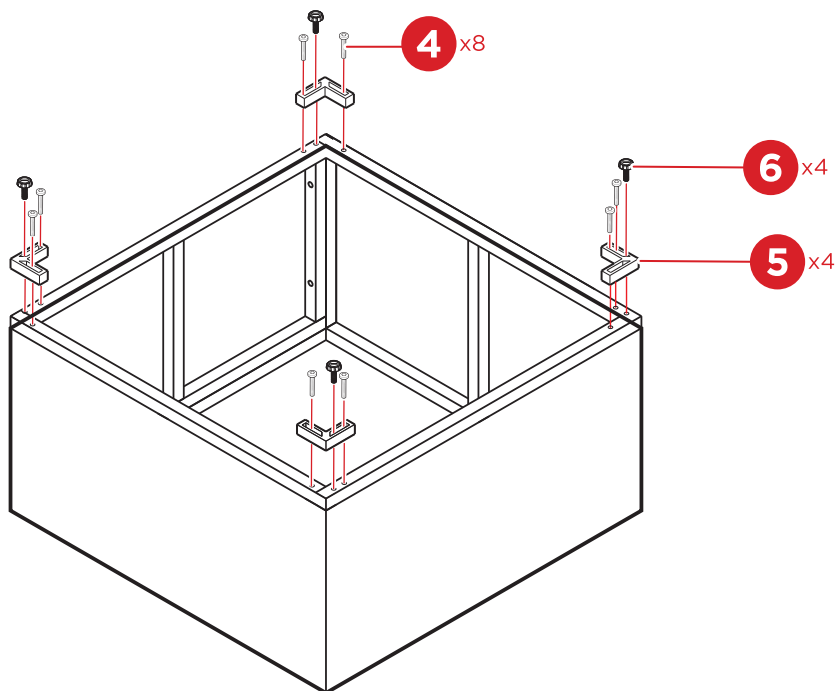

5

 
Place one **part J glass tabletop** on top of the table frame.

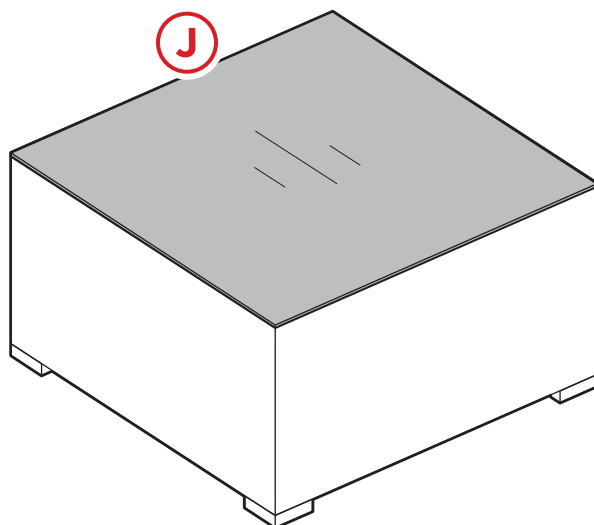

CONNECTING THE SEATS

1

 Use six **part 7 sectional clips** to connect or disconnect the furniture as desired. Place two **part G accent pillows** on your desired seats.

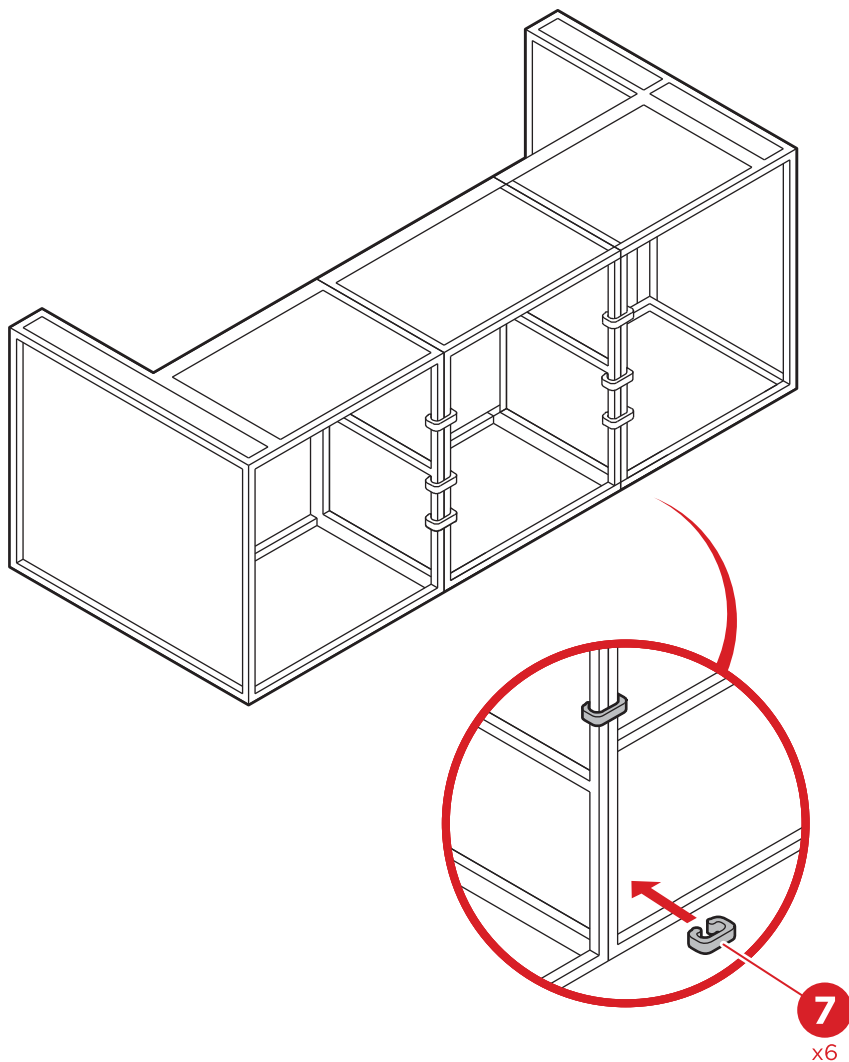

7

x6



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.

