

Smoke X4™ / Smoke X4™ Receiver

Sync Instructions

Smoke X4 and Smoke X4 Receiver come paired out of the box so you should only need to do this when replacing or adding Smoke X4 Receivers.

How to sync:

- With Smoke X4 powered on, press and hold the (⏻) button for 5 seconds until “SYNC” appears on the screen.
- Now that Smoke X4 is in SYNC mode, make sure Smoke X4 Receiver is powered on.
- Press and hold the VOL button for 5 seconds on Smoke X4 Receiver. The display should read “SYNC” for a short amount of time.
- Both Smoke X4 and Smoke X4 Receiver will beep and return to normal functionality signaling a successful pairing.

NOTE: To sync multiple Smoke X4 Receivers to one base, please follow the steps above on one Smoke X4 Receiver at a time. Putting Smoke X4 into Sync mode will not disable or interfere with previously synced Smoke X4 Receivers.

Go to www.thermoworks.com/smokex4 for additional product information and more tips for use.

www.thermoworks.com
741 E. Utah Valley Dr.
American Fork, UT 84003



For service or warranty:
1-800-393-6434
1-801-756-7705
techsupport@thermoworks.com