


CANDY 2 TRUE WIRELESS EARBUDS

USER MANUAL


CP-TW10

V21-11


1. Product Overview

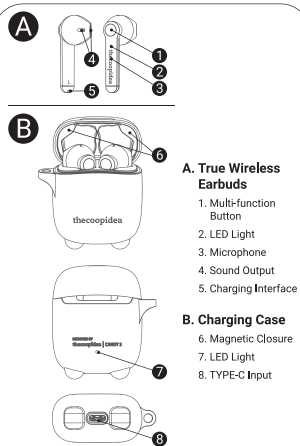


2. Inside the Box

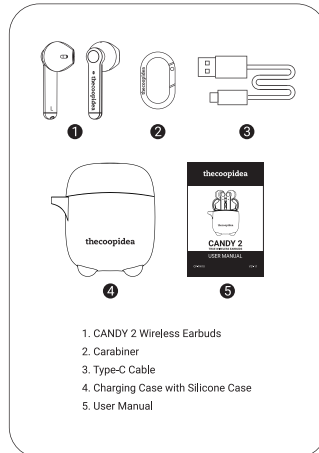


3. How to Charge

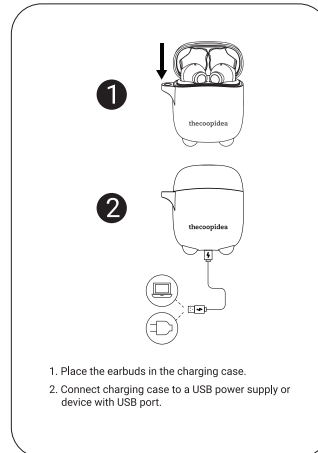


4. Battery Status

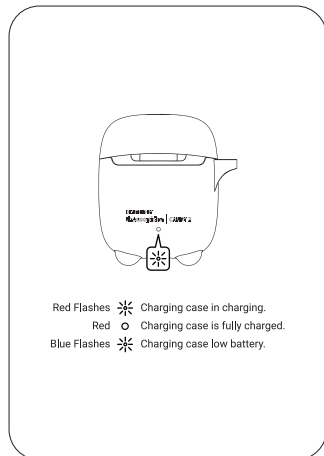


5. How to Wear

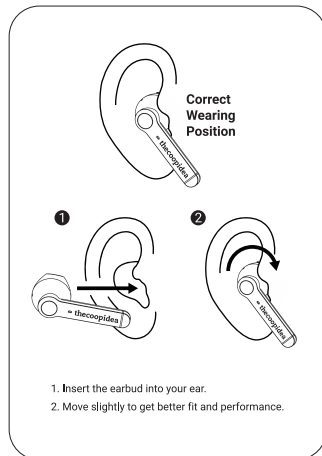


6. How to Pair (Auto-pairing)

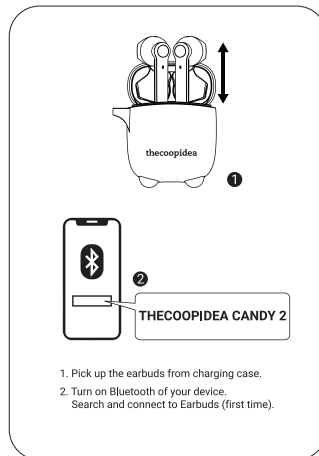

7. How to Turn On / Off Earbuds

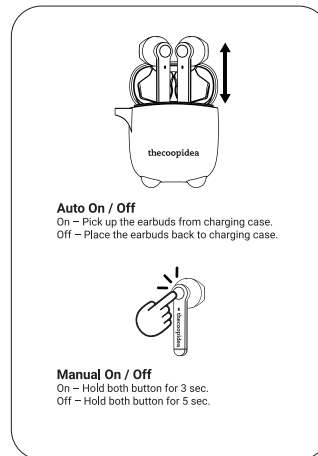

8. Call

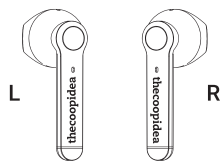


L or R x 1

L or R x 1

L or R x 2 sec

9. Music

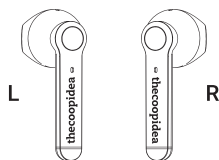

L or R x 1

R 2 sec

L 2 sec

R x 2

L x 2

L or R x 3

10. Full Control List

	L	R
Pick up call		• or •
Hang up		• or •
Reject call		• or •
Play/Pause		• or •
Next track		• or •
Previous track		• or •
Volume up		• or •
Volume down		• or •
Siri/Assistant	•••	••• or •••

• TAP • HOLD • 2SCE

11. Specification


Frequency Response	: 20 - 20000Hz
Wireless Version	: 5.0
Wireless Range	: 2.5 Hrs
Battery	: 300mAh
Input	: 5V/1A (Type-C)
Case Dimensions	: 56x46x24mm (LxWxH)
Case Net Weight	: 33.6g
Earbuds Net Weight	: 3.5g
Waterproof Rating	: IPX4
Stand by Time	: 50 Hrs
Playtime	: Up to 3Hrs Up to 8Hrs On-The-Go
Charging Time	: 60 mins (Earbuds) 90 mins (Charging Case)
Driver Size	: 10mm
Impedance	: 32 Ω
Antenna Type	: Ceramic Aantenna
Support Codex	: SBC,AAC
Support Profile	: HSP/HFP/A2DP/AVRCP
Mic	: Yes



12. Warning

- Always store the earbuds in the charging case and safely protected.
- Avoid storing the earbuds in hot or cold environments to prevent depletion of the battery capacity.
- Avoid storing the earbuds for extended periods of time without recharging them.
- If the earbuds or the charging case become dirty, it is recommended to clean them with a soft cloth that has been dampened with clean water.
- The OS version of mobile devices may affect performance of earbuds, it is recommended to update the OS of your mobile device to the latest version before use.
- It is strongly recommended to clean and dry the earbuds properly when it has been exposed to water and sweat.
- Don't put the earbuds into charging case while there is moist. Doing so can cause severe damage to the product. Earbuds charging case is not waterproof.
- Remove from power source once the product is fully charged. Extended periods of over-charging will decrease battery life.
- Store the product in a dry area. Keep away from fire, heat, moist and erosive materials.
- Do not use rough chemical such as soap or cleanser to scrub the product.
- Do not disassemble, damage, or expose the product to water or fire. Warranty will be voided by any misuse of the product.
- If the battery is expanded or emits smell, stop using the product immediately.

thecoopidea

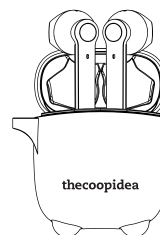

CANDY 2
TRUE WIRELESS EARBUDS

**BOLD TO BE FREE
DARE TO BE DIFFERENT**

For other languages and
soft copy of the manual, please scan:



Find out more at:
www.thecoopidea.com

thecoopidea

Inspirations from New Zealand. Designed in Hong Kong.
Produced in China. Copyright 2021 The Coop Idea Ltd.

