

128g双铜纸 过哑胶 双面印刷 风琴折

正面

solid white when fully charged. Charging time is approximately 2 hours if the battery is fully depleted.

Earbuds: Place the earbuds into the charging case for charging. While charging, the indicator flashes white. Once fully charged, the white light will turn off.

Warnings

1. Please follow the operational instructions for proper use.
2. Please charge the earbuds with input power below 5V/1A, in order to protect the battery.
3. Please store or use the earbuds in a normal temperature environment.
4. Please do not use this product near water. Do not immerse this product in any liquid or splash any liquid on the product.
5. Please keep the earbuds away from heat sources, such as radiators, hot air regulators, stoves, or other heat generating equipment.
6. Don't jam the ports of the earbuds, such as the charging port, LEDs, or microphones.
7. In order to protect your hearing and extend lifetime use, it is not recommended to adjust the volume to the maximum level for long periods of time.
8. If your earbuds are defective, please contact Palm support rather than attempt to repair them yourself. You will void the return policy if the product is tampered with.

Specifications

Bluetooth Version: V5.0
Noise cancelling reduction above -30dB
Earbud Battery: 40mAh*2 (Fully charged in 1.5h)
Charging case battery: 400mAh
Play time: 5-5.5H(BT),4-4.5H(ANC+BT)
Talk time: 3h
Standby time: 100h
Charging time: About 2h
Battery display indicator
TYPE-C port

Learn more at [Palm.com/support](https://palm.com/support)
Para más información viste [Palm.com/support](https://palm.com/support)

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Quick Start Guide

BUDS01
HYBRID ACTIVE NOISE CANCELLATION
TRUE WIRELESS EARBUDS

P
A
L
M

反面

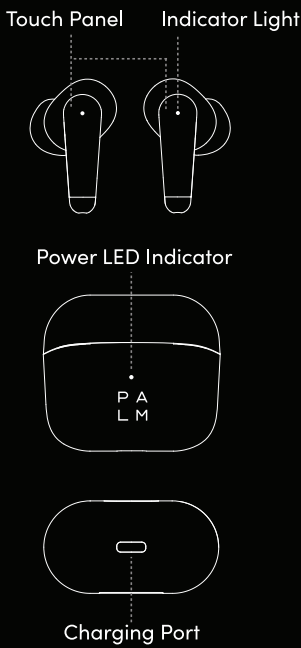

Fitting the BUDS01

Gently insert the BUDS01 into your ear and adjust for appropriate comfort. If necessary, swap the ear tips with the provided small, medium, or large sized tips to ensure a secure fit. Medium sized ear tips are pre-fitted on the Palm Buds Pro out of box.

Basic Functions

Power On Bluetooth (Ensure that your phone has a built-in Bluetooth function that is turned on.)

1. Powering on
Open the charging case and the Palm Buds Pro will power on.
If BUDS01 are powered

off outside of the case, touch and hold the Touch Panels on both earbuds for 3 seconds to turn them on.

2. Enable Bluetooth on your device and select "BUDS01", refer to your phone instructions if you need help. If the indicator turns off, the connection is successful.


3. Pairing mode will last up to 180 seconds. If you miss the pairing time, you will need to restart the device and follow the steps mentioned above.

*Note:

- a) BUDS01 will remember previously connected devices. When turned on, the earbuds will attempt to reconnect to a previously connected device.
- b) BUDS01 will lose their connection outside of the working range of Bluetooth (30 feet / 10 meters). The earbuds will reconnect automatically when you come back into range.

Powering Off

- a) Place the BUDS01 back into the charging case and close the charging case cover. They will automatically power off.
- b) Touch and hold the Touch Panel for 5 seconds to turn off the earbuds. The white light will flash quickly.

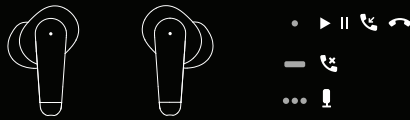

Answering Incoming Calls

Single-tap the left or right Touch Panel to answer incoming calls.

Ending Calls

Single-tap the left or right Touch Panel to end the current call.

Declining Incoming Calls

Touch and hold the left or right Touch Panel for 1.5 seconds to reject a call.

Voice Assistant

Triple-tap the left or right Touch Panel to activate your phone's voice assistant.

Music Control

- a) Play/Pause: Tap the left or right Touch Panel once.
- b) Double-tap the left Touch Panel to switch to the previous song.
- c) Double-tap the right Touch Panel to switch to the next song.



Active Noise Cancellation (ANC)

- a) Touch and hold the left Touch Panel for 1.5 seconds to enable the ambient monitoring function, you will hear an "ambient on" or the "ambient off" notification.

- b) Touch and hold the right Touch Panel for 1.5 seconds and you will hear the "noise canceling on" or "noise canceling off" notification.

Mono / Single Bud Use

Take out any one of the earbuds to create a single channel bluetooth earbud. If two earbuds are removed from the charging case, the earbuds will be used in dual channel mode by default.

- a) Take out an earbud from the charging case and the earbud will automatically turn on and reconnect to a previously connected device.
- b) To switch from one earbud to two when playing music, take out the other earbud from the charging case and the two earbuds will connect automatically.

*Note: Call mode is available when in single channel or dual channel modes.

Charging

Case: Charge the case using the Type-C cable connected to a computer or wall charger. The indicator at the front of the charging case flashes white while charging and then turns

