 


## Operating Instructions - Tumbler Dryer Zanussi ZDC46130W

### Control Panel and functions

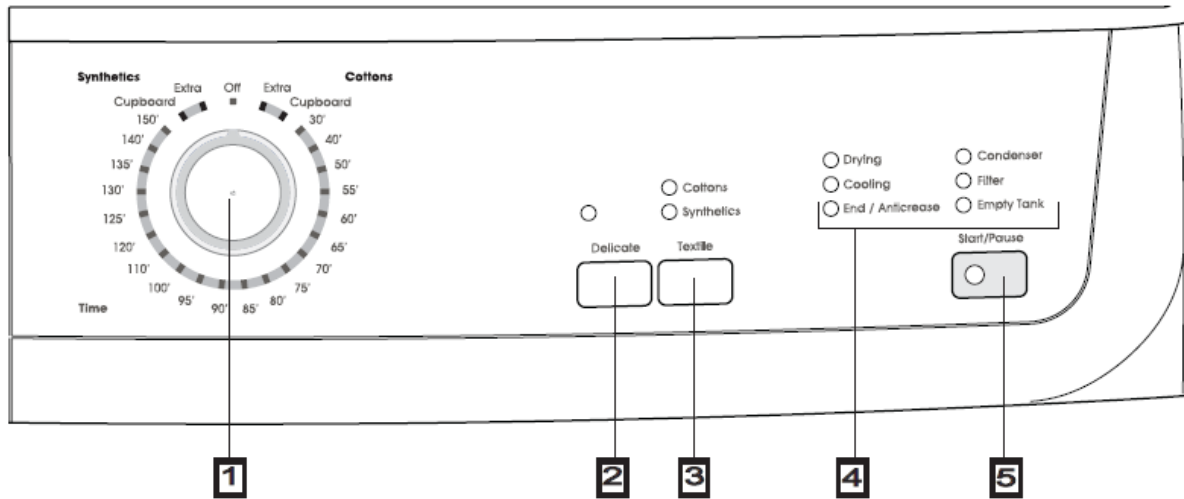

#### 1 PROGRAMME TIME SELECTOR DIAL

Allows you to select electronically controlled or time controlled drying.  
Turn the dial to the required programme or time.

#### 2 DELICATE button

1. Select programme.  
2. Press the DELICATE button. The relevant light will light up.  
3. Press the START/PAUSE button. The relevant light will stop flashing.  
DELICATE is only suitable for use with loads of up to 3kg!  
When the programme has finished the pilot lights End is on.

#### 3 TEXTILE button

1. Select programme. and press the TEXTILE button.  
• You can select 2 different options:  
- Cotton Cycle: to be used for cotton,  
- Synthetics to be used for synthetic or delicate items.  
3. Press the START/PAUSE button. The relevant light will stop flashing.

#### 4 INDICATOR LIGHTS

- "Drying" light
- "Cooling" light
- "End/Anticrease" light
- "Filter" light
- "Empty Tank" light
- "Condenser" light

#### 5 START/PAUSE button

1. Select programme.  
2. Press the START/PAUSE button. The relevant light will stop flashing.

## Drying Programmes

| Programme | Max load kg | Type of laundry | Options                           | Description of programme                                                                                                                                                                                                    |
|-----------|-------------|-----------------|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Extra     | 6           | Cottons         | Textile<br>-Cotton                | Drying thick or multi-layered textiles, e.g. terry towelling items                                                                                                                                                          |
| Cupboard  | 6           | Cottons         | Textile<br>-Cotton                | Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitted items, towels.                                                                                                                          |
| Extra     | 3           | Synthetics      | Textile<br>-Synthetics            | Thorough drying of thick or multilayered fabrics, e.g. pullovers, bedding, table linen.                                                                                                                                     |
| Cupboard  | 3           | Synthetics      | Textile<br>-Synthetics            | For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.                                                                                               |
| Time      | 6           | Cotton          | Textile<br>-Synthetics<br>-Cotton | If the TIME programme has been selected, programme duration time of 30 minutes up to 150 minutes can be set by intervals of 5 minutes or 10 minutes.<br>Drying thick or multi-layered textiles, e.g. terry towelling items. |
|           | 3           | Synthetics      | -Delicate                         |                                                                                                                                                                                                                             |



## Drying Hints

### Before loading the laundry

Never tumble dry the following:

Particularly delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:



may be tumble dried



normal drying (high temperature)



delicate drying (low temperature)



do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings.
- Sort laundry according to type and degree on drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- **Easy-care items**, too, e.g. shirts, should be briefly pre-spun before drying (depending on crease resistance approx. 30 seconds or using the special brief spin programme on your washing machine).
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying,

## Operating Sequence

### 1 Connect the appliance.



### 2. Open the door.

 
### 3. Load the items one at a time, shaking them out loosely.



### 4. Close the door.

Please check the laundry does not get caught between the door and filter.

### 5. Turn the programme selector dial to the required programme.

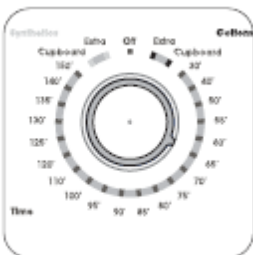

The light Start/Pause starts to flash.

The selector dial is divided into following sections:

- Cottons
- Synthetics
- Time

Allows you to select electronically controlled or time controlled drying.

Turn the dial to the required programme or time.

Electronically controlled drying (automatic)

The appliance runs these programmes with the help of probes which detect the degree of dampness of the laundry.

Simply select the programme according to the type of laundry and degree of drying required.

At the end of the programme the selector dial must be turned to position O, to switch the machine off.

### 6. Selecting additional functions

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button.

### 7. Select Delicate



Pressing this button allows drying to be performed at a lower temperature, for delicate items.

 
The corresponding pilot light comes on. This option can also be used for time controlled drying.

DELICATE is only suitable for use with loads of up to 3kg!

When the programme has finished the pilot lights End is on.

### 8. Select the Textile

Press the Textile button repeatedly, to select the desired option. The relevant light will light up.

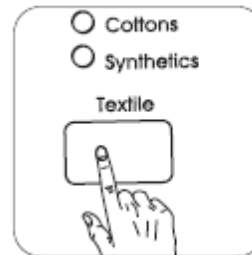

You can select 2 different options:

**Cotton Cycle:** to be used for cotton,


When the programme has finished the pilot lights End is on.

**Synthetics** to be used for synthetic or delicate items.

When the programme has finished the pilot lights End is on.

## 9. Select the Start/Pause

 Press this button to start the dryer after having selected the programme and the options.

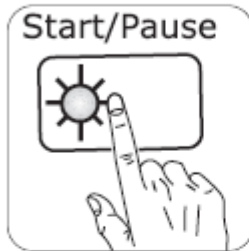

The relevant light will stop flashing. If the programme selector dial is turned to another position, when the machine is running, the buzzer will sound and the programme phase indicator lights will flash.

The drum turns alternately in both directions during drying.

All drying programmes end with a 10 minute cooling phase (light Cooling is on).

You may remove the laundry after this phase.

The lights Empty Tank and Filter illuminate and the buzzer sounds.

If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted.

This button must be depressed also after a power failure and after having reinserted the water reservoir, if it has been emptied in the middle of a programme after lighting up of the light Empty Tank.

In both cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.

## 10. Indicator lights



These lights indicate the following functions:

### "Drying" light

This light indicates that the appliance is in the drying phase.

### "Cooling" light

This light indicates that the appliance is in the cooling phase. At the end of drying, there is a 10 minute cooling phase to cool the laundry.

### "End of programme" light

This light is on at the end of the cooling phase, during the anti-creasing phase and at the end of the programme.

### "Filter cleaning" light

This light illuminates at the end of the programme to remind you that the filters must be cleaned.

### "Water reservoir full" light

This light comes on at the end of the programme to remind you that the water reservoir must be emptied out. If this light illuminates during a programme this means that the water reservoir is full. The buzzer sounds, the

programme stops, the light of the Start/Pause button flashes.

### "Condenser cleaning" light

It comes on every 80 cycles to remind you that the condenser must be cleaned.

## 11. At the end of the programme

All drying programmes end with a 10 minute cooling phase.

You may remove the laundry after this phase. The lights Filter and Empty Tank, illuminate.

If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration: 30 minutes maximum). If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase.

The Lights **Filter** and **The Empty Tank** remain lit and the buzzer sounds for 2 minutes.

Turn the programme selector dial to "Off" to

switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty.

After each use

 
- Clean the filters.
- Empty the water reservoir.

Turn the programme selector dial to "Off"; all the lights go out. The appliance is switched off.

## Modifying the programme

12. Remove the laundry.

If you open and then close the door before turning the selector dial to "Off" all the lights corresponding to the phases making up the performed programme come on.

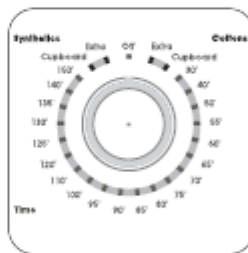

To change a programme which is running, first cancel it by turning the programme selector dial to "Off". Select the new programme and press the Start button.