



Important Safety Information

⚠ WARNING Not for use with aggressive dogs.

Do not use this Product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer.

⚠ CAUTION Safety during on-leash training.

It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash, long enough for him to attempt to chase an object, but short enough for him not to reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase.

 
CAUTION Risk of skin damage.

Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage ranging from redness to pressure ulcers.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible reposition the collar on the pet's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect a lead to the electronic collar; it will cause excessive pressure on the contacts.
- When using a separate collar for a lead, don't put pressure on the electronic collar.
- Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.

These steps will help keep your pet safe and comfortable. Millions of pets are comfortable while they wear stainless steel contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions.

Components

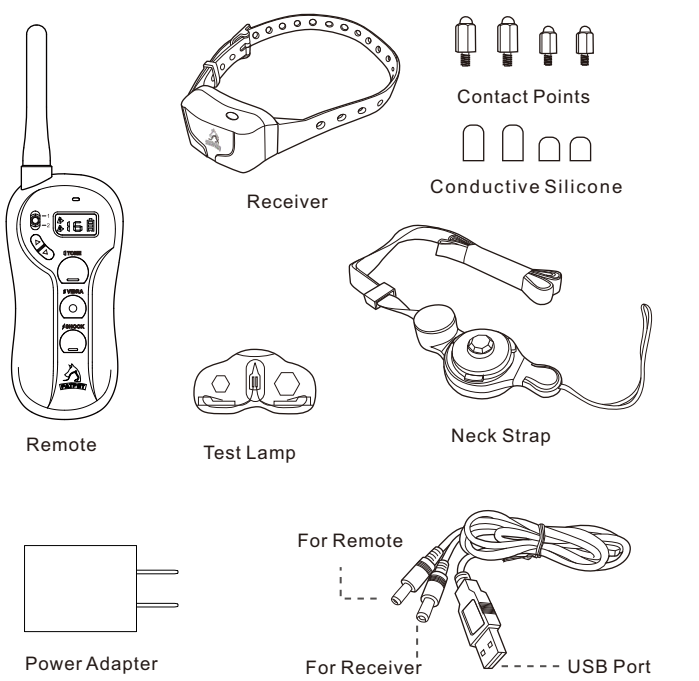



Other Items You May Need

- Scissors

Main Features


- 1000 Yards Remote Range
- User Expandable to a Two-dog System
- 3 Tone, Vibration, and Shock Commands
- 16 Adjustable Progressive Intensity Levels for Shock
- White Backlit LCD Indicating Intensity Level and Battery
- 2-hour Rapid Charging Lithium Polymer Battery
- 100% Waterproof Receiver
- Innovative Blind Operation with Touch Distinguishing Mode Buttons

  Overview

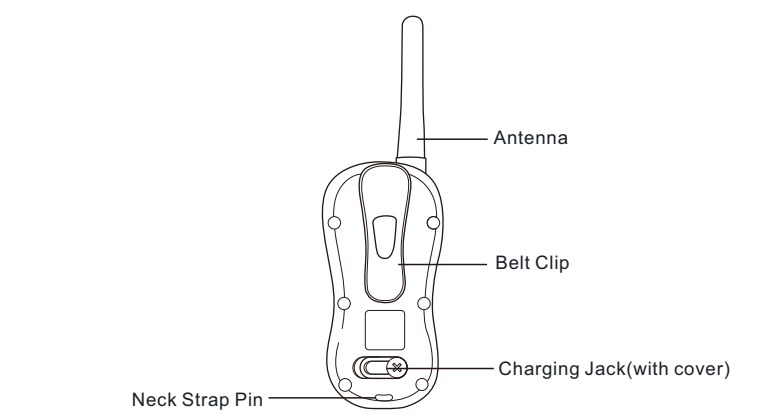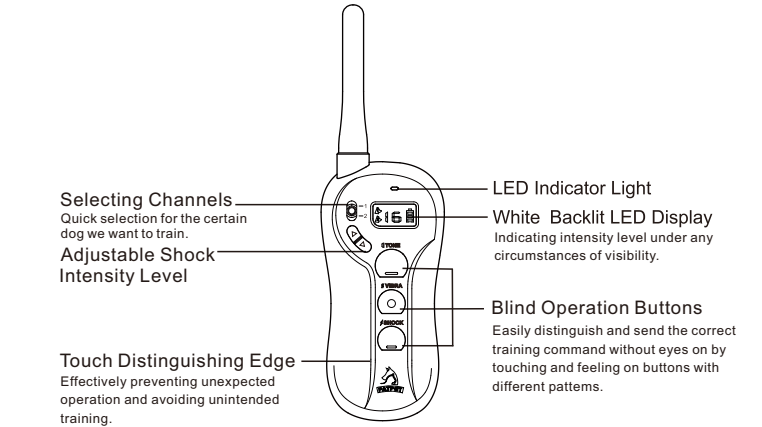

Remote

 Overview

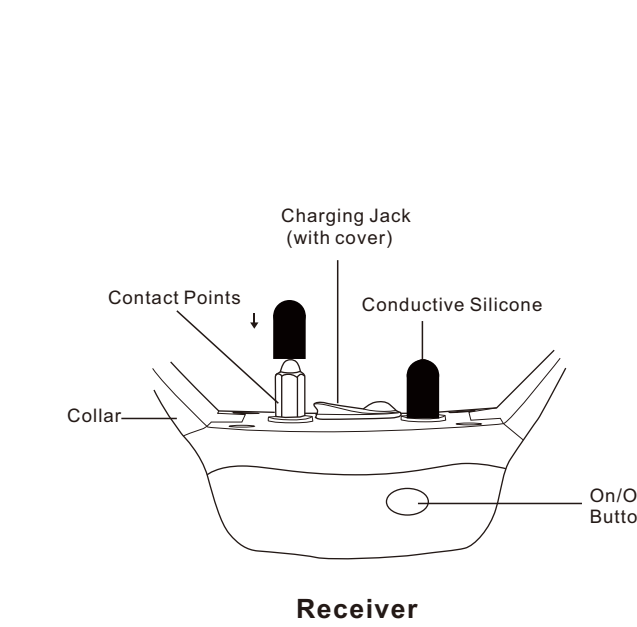

Receiver

Setting Up the Product

Before you can use the Dog Training Collar, you must set up the product following the steps below:

1. Prepare the Remote: install the antenna and turn the Remote on.
2. Charge the Remote and the Receiver.
3. Prepare the Receiver: install contact points, conductive silicone, and turn the Receiver on.
4. Function test: Test function of buttons before putting it on the dog.
5. Use the Test Lamp to test shock function or use as a screw driver.
6. Pair the Remote and the Receiver, pair them when the product loses its code or pair a second collar.

Step 1 Charging the battery

- The unit uses Lithium-Polymer batteries.
1. Charge the unit before using the unit for the first time.
 2. Do not charge the batteries near any flammable substances.
 3. Fully charge the batteries if the unit is to be stored without use for a period of 3 months or more.

The unit need to be charged under any of the below situations:

1. The indicator light on the collar is emitting a red color and flashes rapidly.
2. The 3 bar indicator on the Remote LCD shows just 1 bar.
3. The indicator light on the Remote or Receiver will not come on.
4. The indicator light on the Remote or Receiver comes on momentarily when any of the Mode Buttons are pressed.

 
Battery Charging Procedure.

NOTE: The unit has a partial charge when it leaves our facility, upon receipt of the collar, be sure to give it a 4-hour initial charge before the first use.

1. Lift the rubber covers protecting the Remote and Receiver Charging Jack.
2. Connect the charger connectors to the Remote and Receiver Charging Jack, as shown below.
3. Plug the charger into a standard wall outlet.

4. Connect the USB port to the Charging Adapter.
5. Charge the unit for 4 hours for the first charge. Recharges take only 2-3 hours.
6. When charging is completed, remove the charger connector, and replace their rubber covers .

Note: The Battery Indicator on the Remote will scroll and the indicator light will be steady red while charging; The Battery Indicator will become steady, and the LED Indicator Light will flash when fully charged. The indicator light on the Receiver will be steady red while charging and green when fully charged.

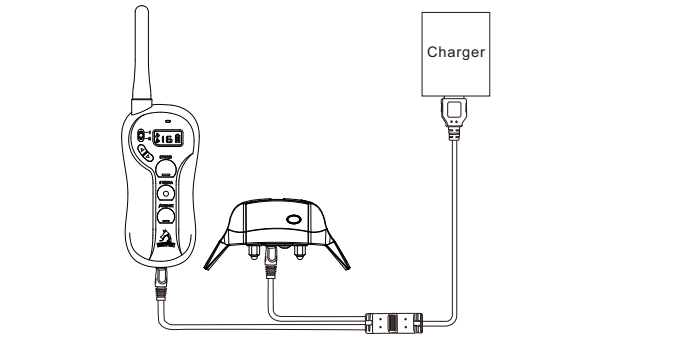


Step 2 Prepare the Remote

1. Install the antenna tightly to the corresponding position of the Remote tightly.
2. Press Tone/Vibra/Shock button on the Remote. The white backlight on the display stays on for approximately 5 seconds after a button press. After that if not button is pressed within 25 seconds, the white backlight will shut off first, the display will shut off and the Remote will go into battery conservation mode .
3. Pressing Tone/Vibra/Shock button will turn the display back on.




9

 10

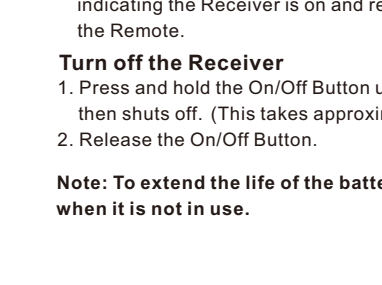


9

 10

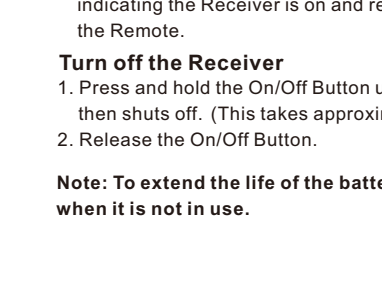


9

 10

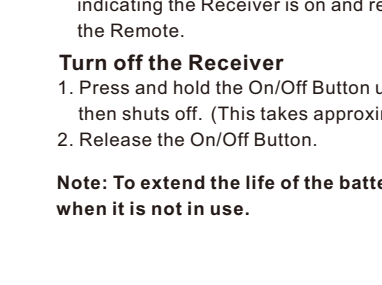


9

 10

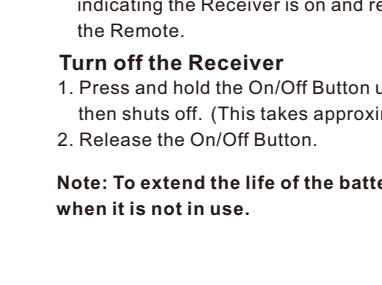


9

 10

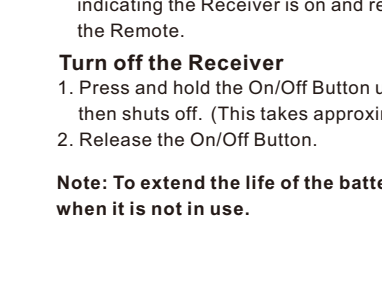


9

 10

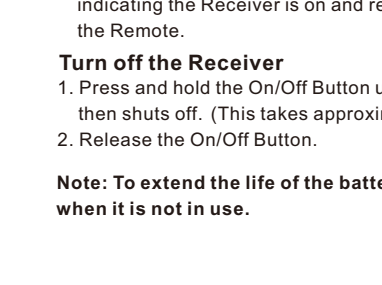


9

 10

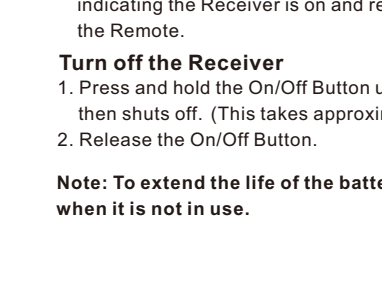


9

 10

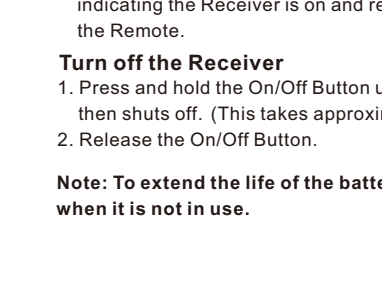


9

 10

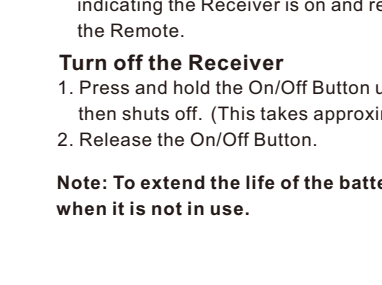


9

 10

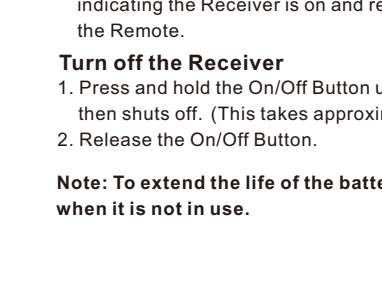


9

 10

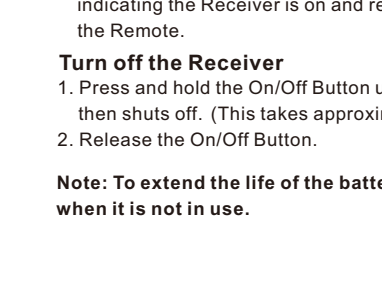


9

 10

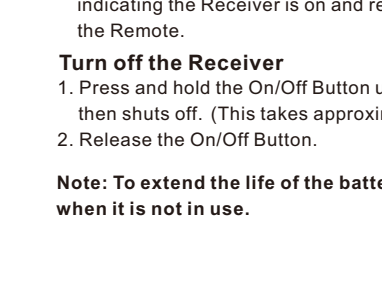


9

 10

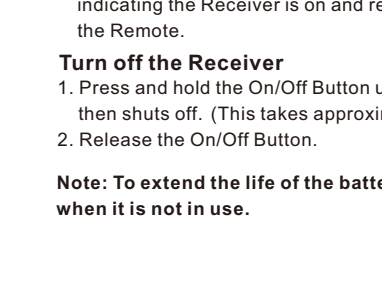


9

 10

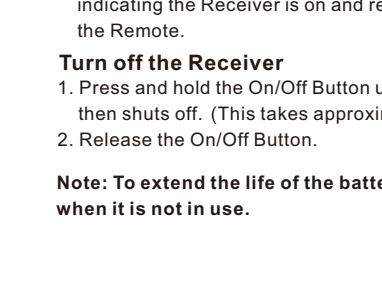


9

 10

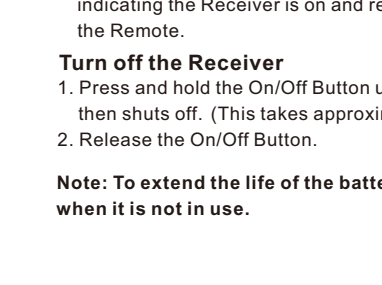


9

 10

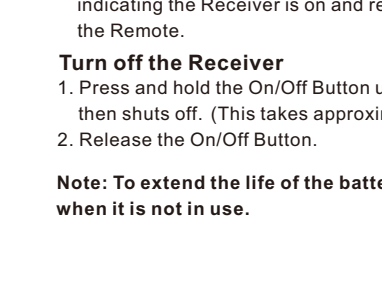


9

 10

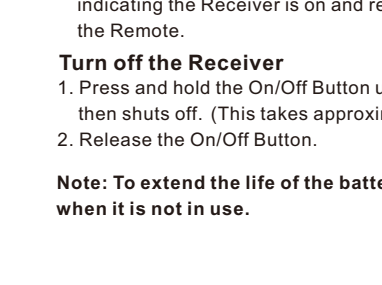


9

 10

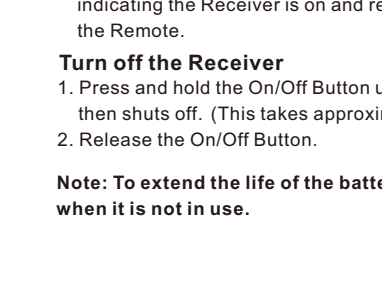


9

 10

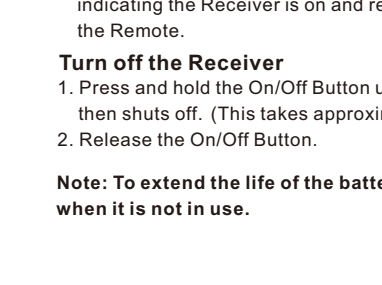


9

 10

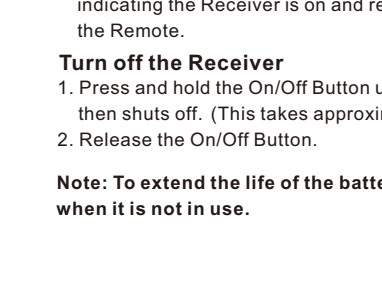


9

 10

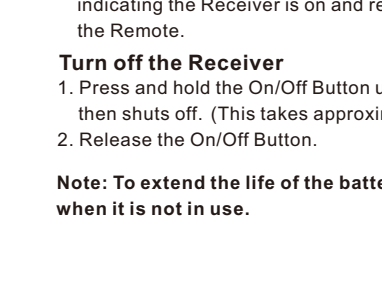


9

 10

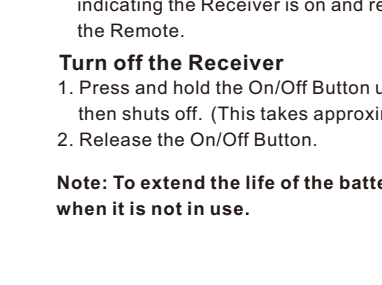


9

 10

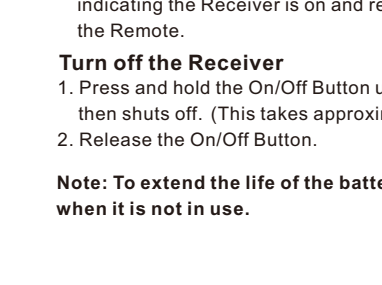


9

 10

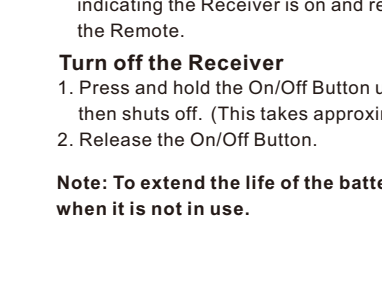


9

 10

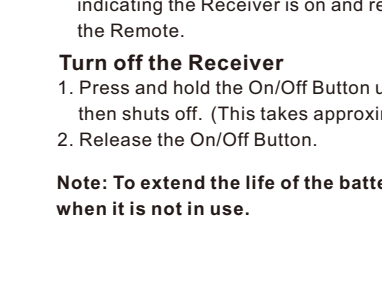


9

 10

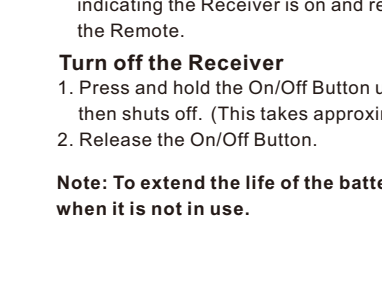


9

 10

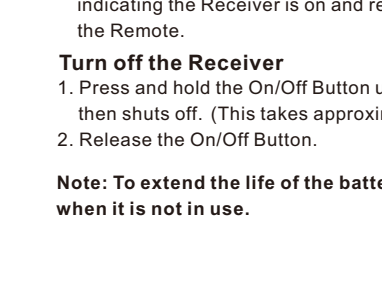


9

 10

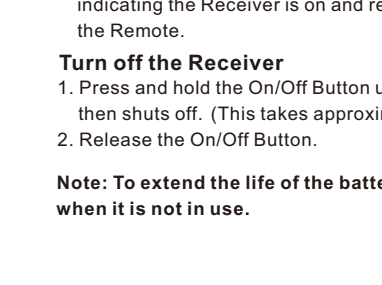


9

 10

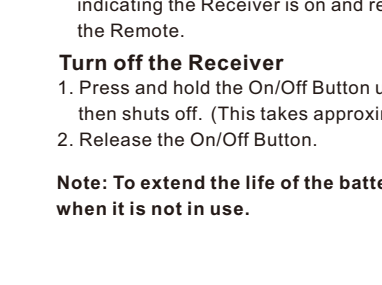


9

 10

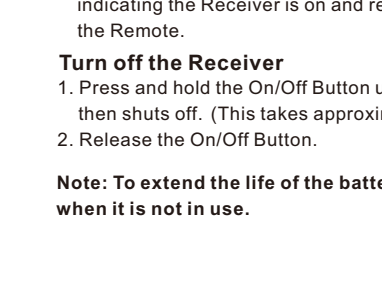


9

 10

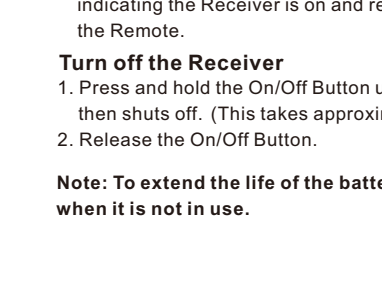


9

 10

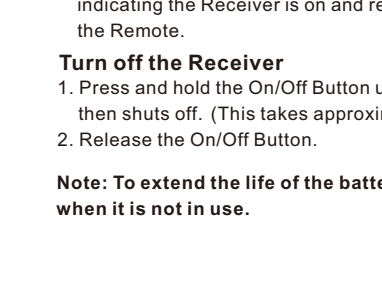


9

 10

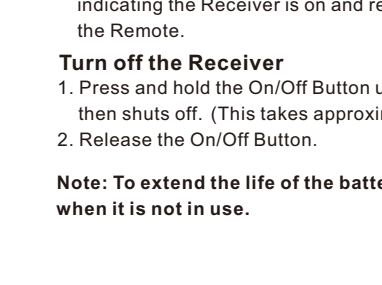


9

 10

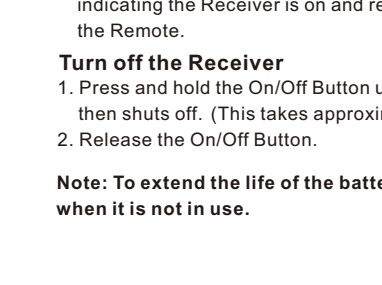


9

 10

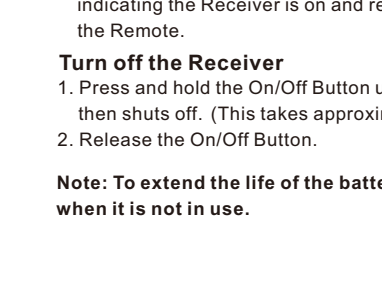


9

 10

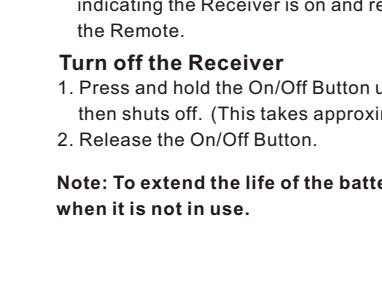


9

 10

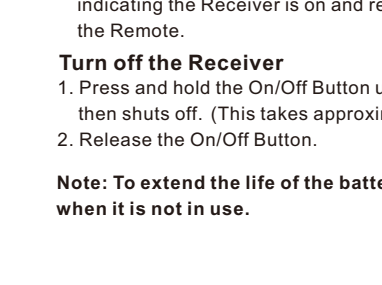


9

 10

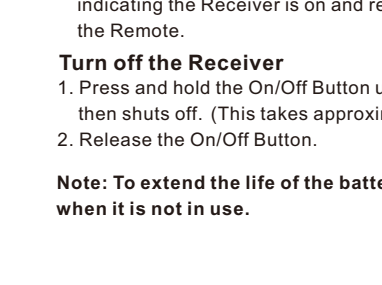


9

 10

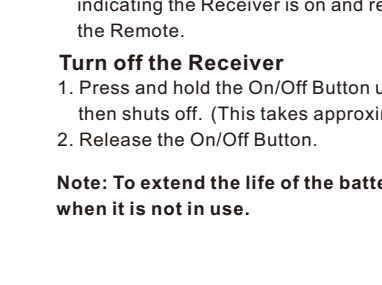


9

 10

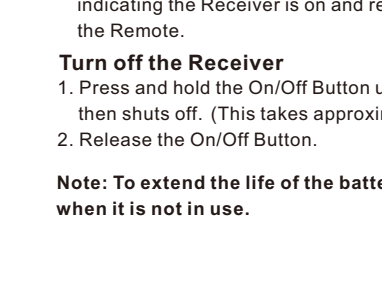


9

 10

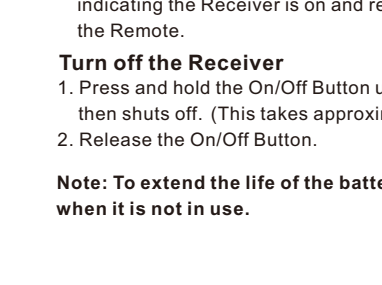


9

 10

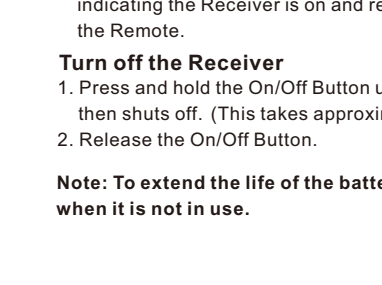


9

 10

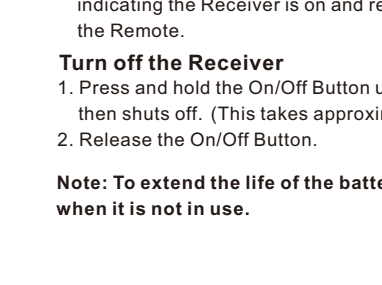


9

 10

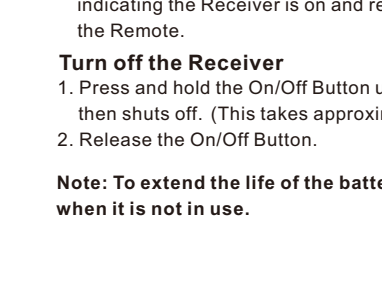


9

 10

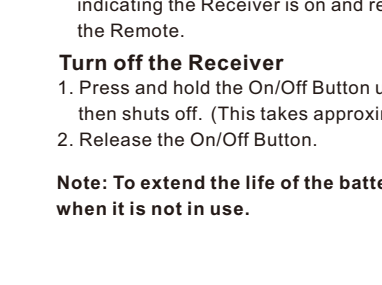


9

 10

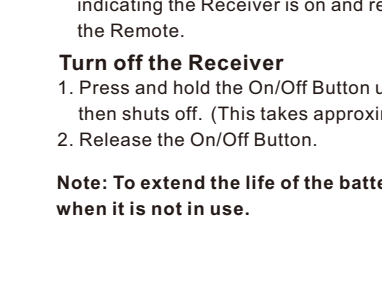


9

 10

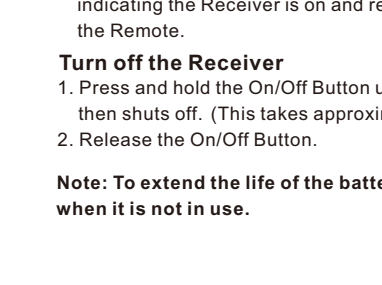


9

 10

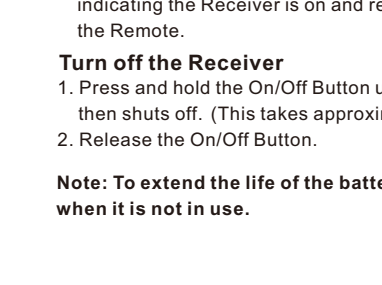


9

 10

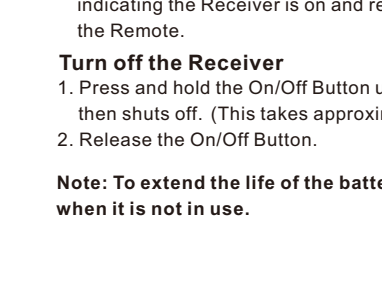


9

 10

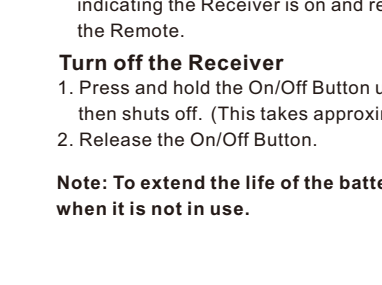


9

 10

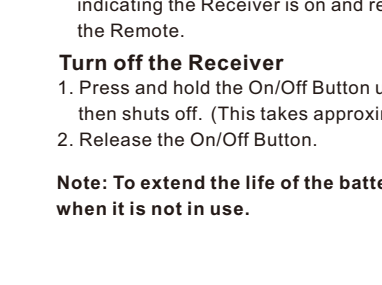


9

 10

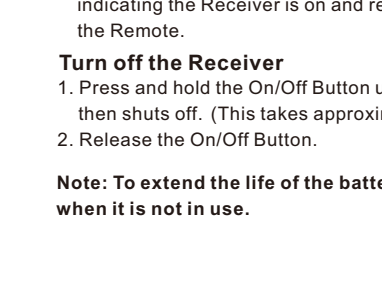


9

 10

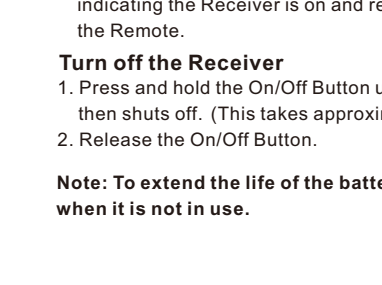


9

 10

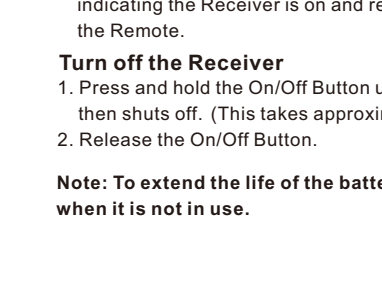


9

 10

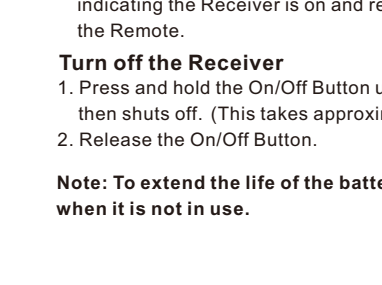


9

 10

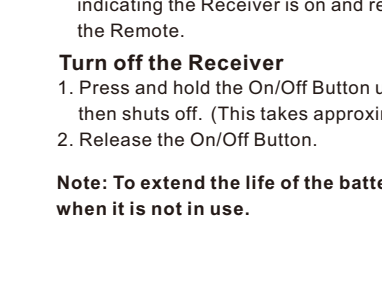


9

 10

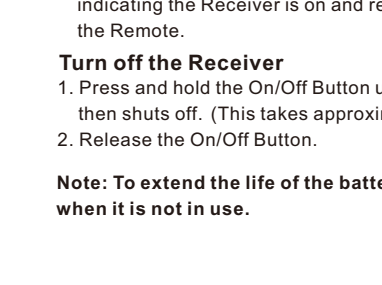


9

 10

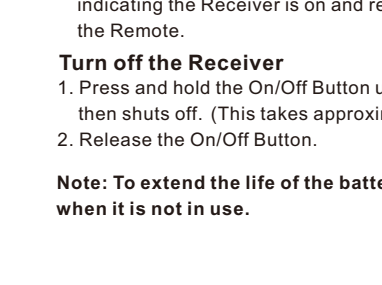


9

 10

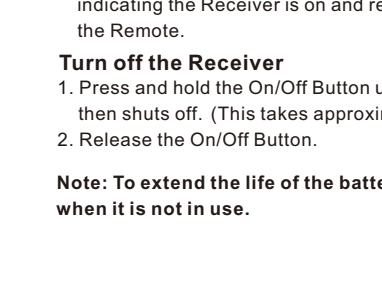


9

 10

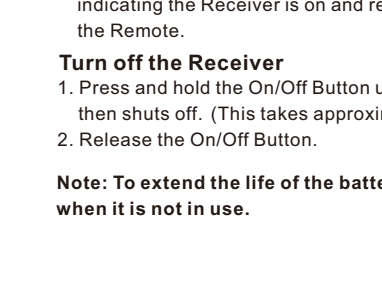


9

 10

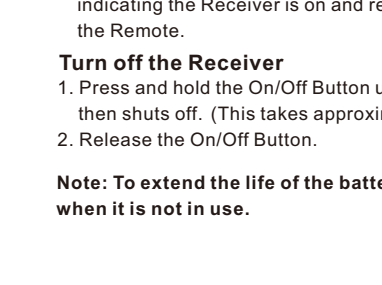


9

 10

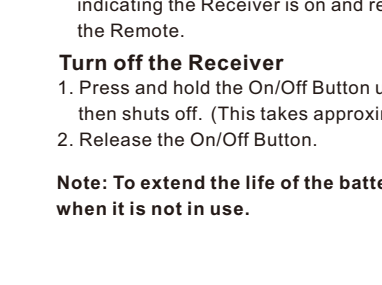


9

 10

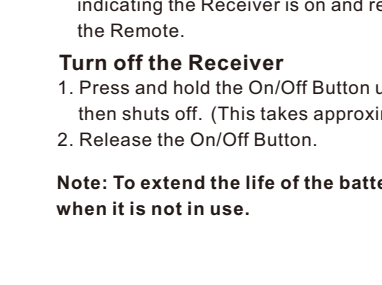


9

 10

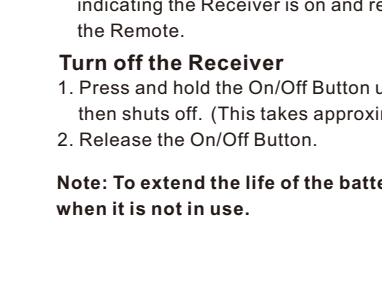


9

 10

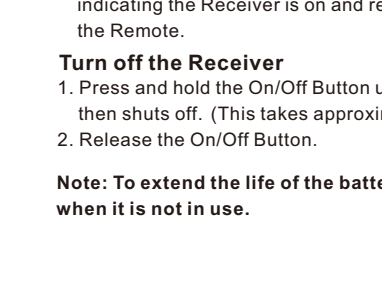


9

 10

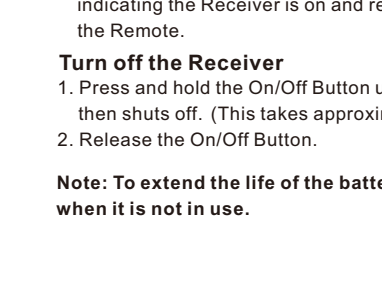


9

 10

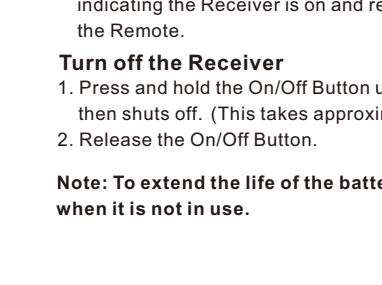


9

 10

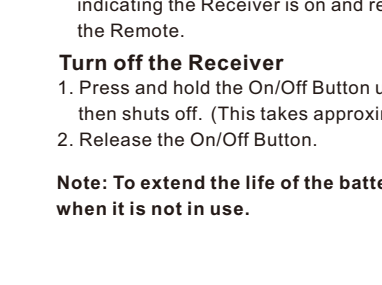


9

 10

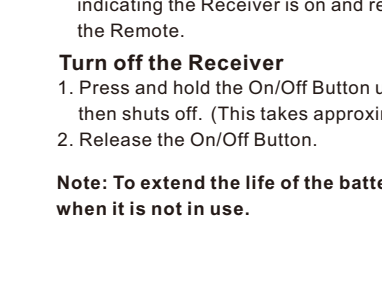


9

 10

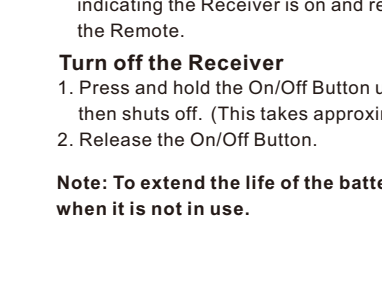


9

 10

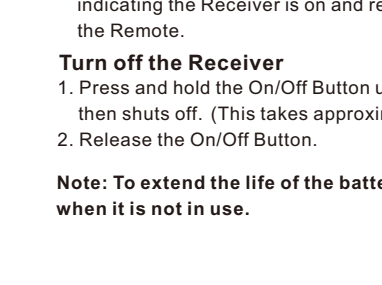


9

 10

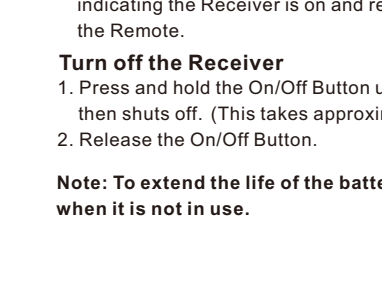


9

 10

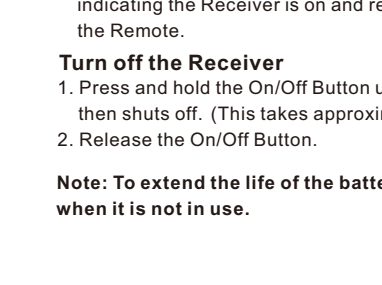


9

 10

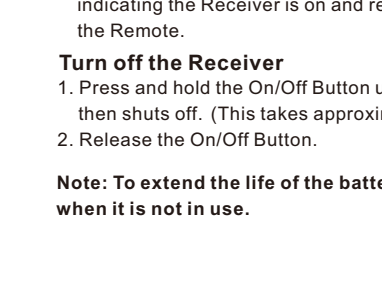


9

 10

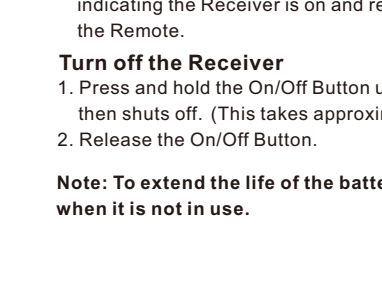


9

 10

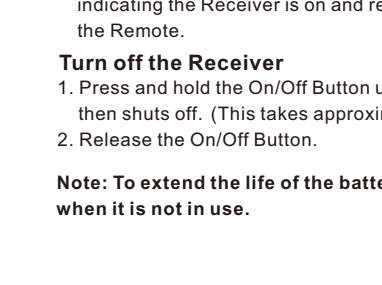


9

 10

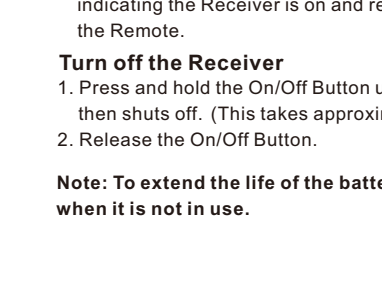


9

 10

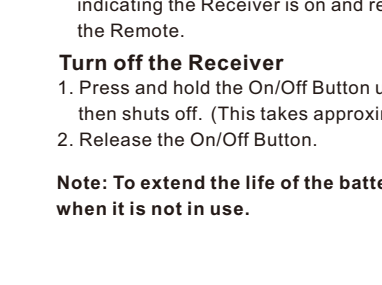


9

 10

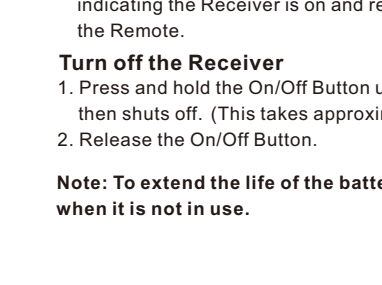


9

 10

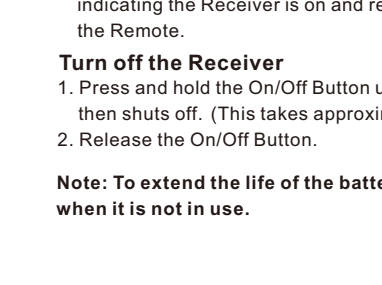


9

 10

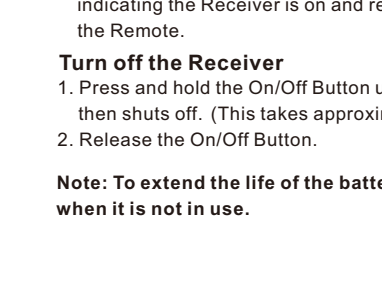


9

 10

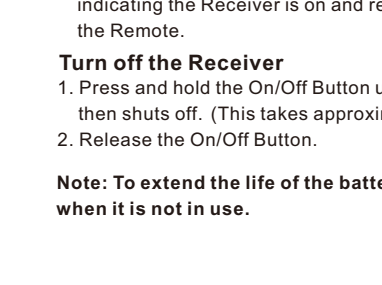


9

 10

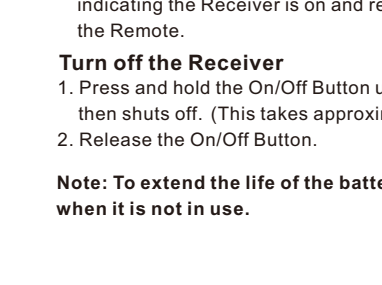


9

 10

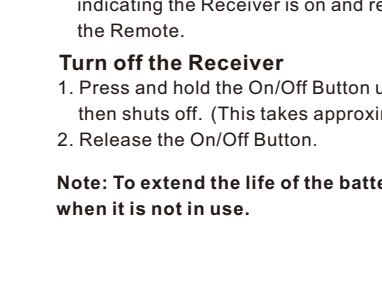


9

 10

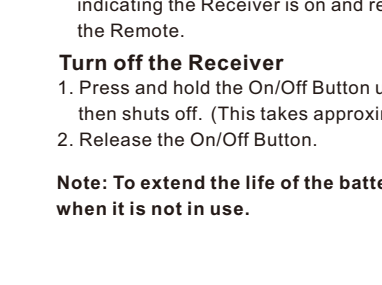


9

 10

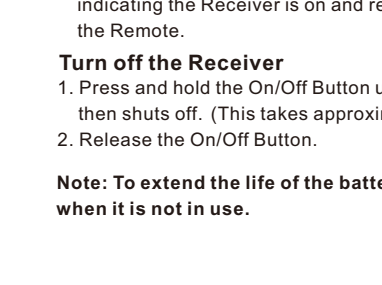


9

 10

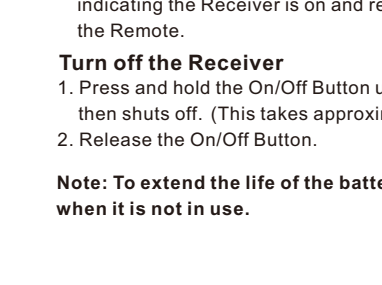


9

 10

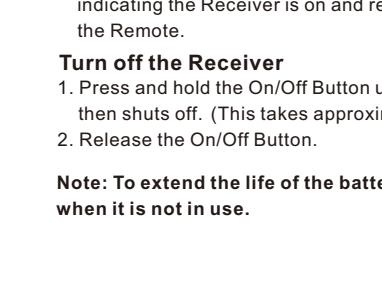


9

 10

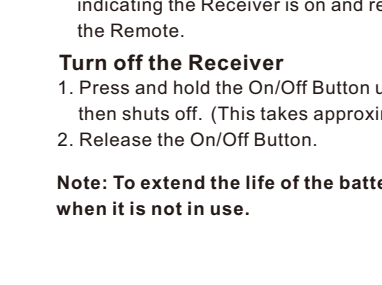


9

 10

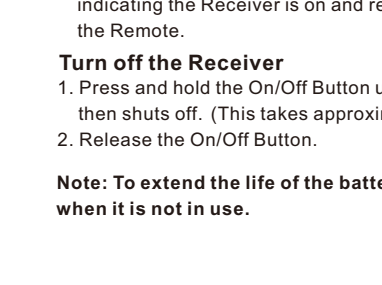


9

 10

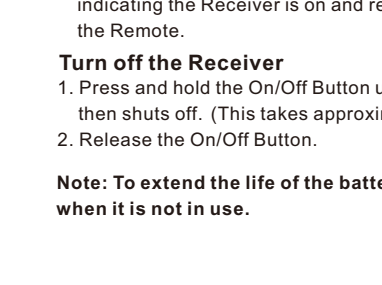


9

 10

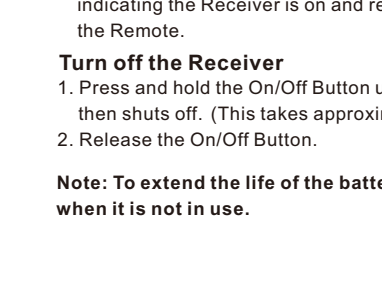


9

 10

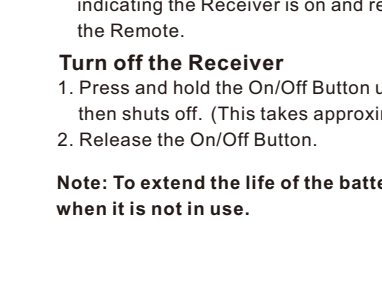


9

 10

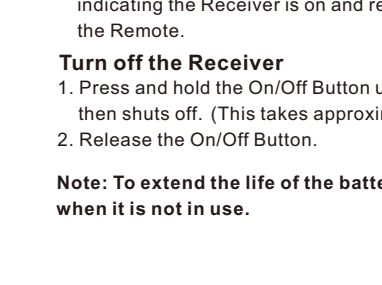


9

 10

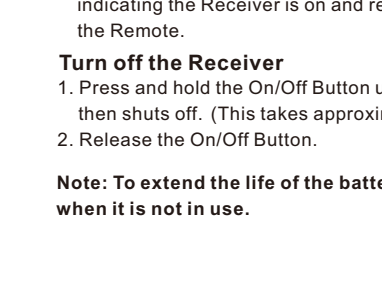


9

 10

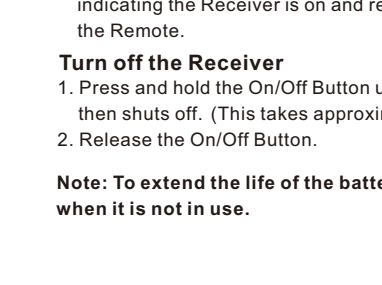


9

 10

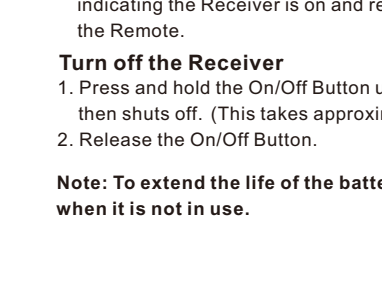


9

 10

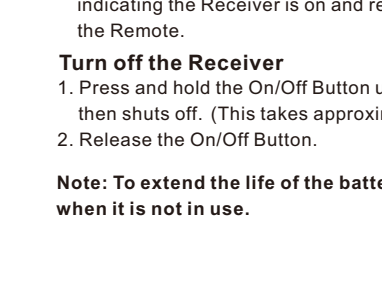


9

 10

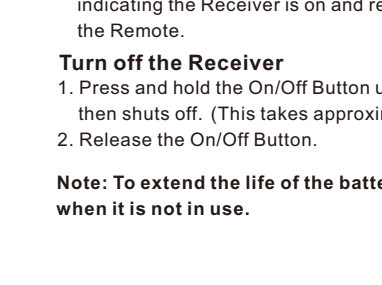


9

 10

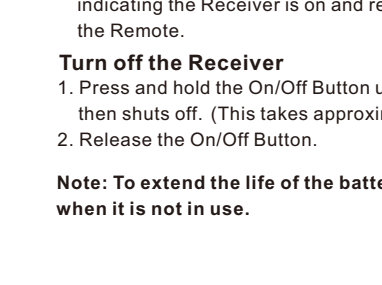


9

 10

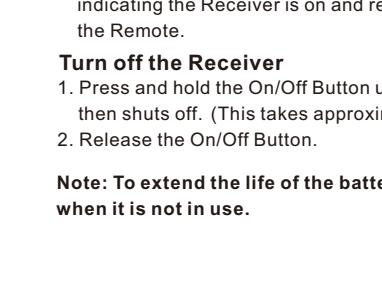


9

 10

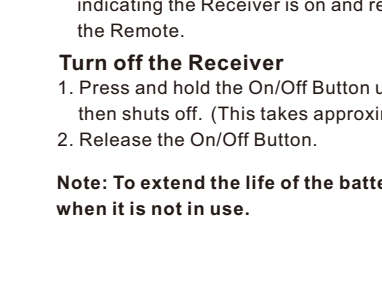


9

 10

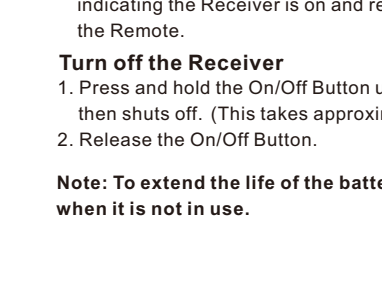

9

 10

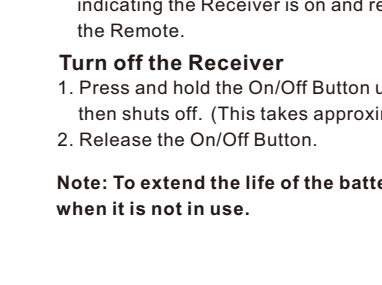

9

10


Receiver Indicator Light – Function and Response

Receiver Function	Green LED Response
Power on	Flashes once
Normal operation - Good battery	1 flash every 5 seconds
Training tone	On length of TONE button press
In pairing position	Flashes once every second within 25 seconds
Pairing Complete	Flashes rapidly for five times
Charging Complete	On length of the charger connected

Receiver Function	Red LED Response
Power off	On for 3 seconds
Normal operation - Low battery	Flashes rapidly
Vibration/Shock	On length of VIBRA/SHOCK button press
Charging	On length of charging within 2-3 hours

To maximize the distance

 The unit has a 1000 Yards range. The range may vary with the way the Remote is held. Hold the Remote away from your body to receive the greatest range. For maximum signal strength, keep the device properly charged.

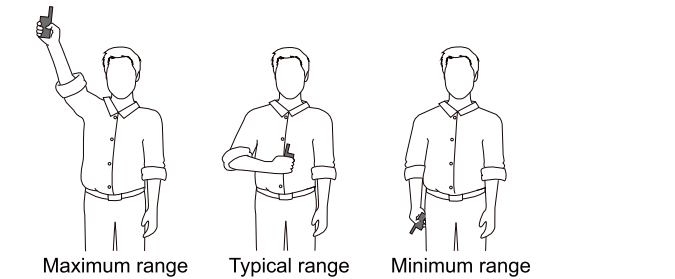

NOTE: Avoid touching the antenna or the range may decrease substantially.