



Obsidian™ Speed Plus 20,100mAh USB-C® Power Bank



P/N 39749

User's Manual



SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately turn it off and allow it to fully dry before reapplying power.
- Do not expose this device to excessive vibration, extreme force, shock, or fluctuations in temperature or humidity.
- This device contains a Lithium-ion battery. Dispose of this device only in accordance with local, state, or federal regulations for electronic waste.
- Charge the battery before first use and at least once every three months to keep it fresh and capable of holding the full charge.
- Do not use if the case is damaged and/or liquid is leaking from the battery.



PACKAGE CONTENTS


Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x 20,100mAh USB-C® Power Bank

1x USB Type-A to Type-C® Cable

1x User's Manual

PRODUCT OVERVIEW

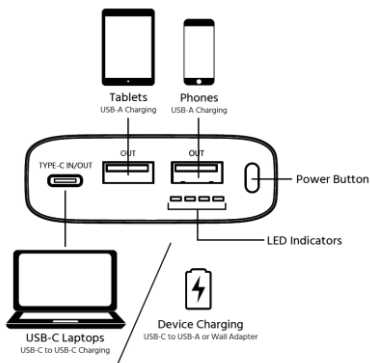

CHARGING

Press the **Power** button on the Power Bank to turn it on. One or more of the **LED Indicators** will illuminate to indicate the current charge level. If only a single indicator illuminates, the charge level is low and the Power Bank should be recharged.

	25% Charged
	50% Charged
	75% Charged
	100% Charged

To charge the Power Bank, plug one end of the included USB cable into the **Type-C® In/Out** port on the Power Bank, then plug the other end into a USB power source, such as a computer or wall charger. The **LED Indicators** will begin blinking to indicate that charging is in progress and the number of indicators that illuminate indicates the current charge level. When charging is complete, all 4 **LED Indicators** will be illuminated.

ONLINE SUPPORT

Monoprice is pleased to provide free online support. For order related issues, contact the Customer Service department through the Live Chat link on our website www.monoprice.com or via email at support@monoprice.com



For technical issues, contact the Technical Support department through the online chat button on our website www.monoprice.com or by sending an email to tech@monoprice.com

Check the website for support times and links.

SPECIFICATIONS

Model	39749
Battery Type	Lithium-ion
Capacity	20,100mAh  72.36Wh
Type-C® Input Power	5V  3A, 9V  2A, 12V  2A, 15V  2A, 20V  1.5A
Type-A Output Power	1 Port: 5V  3A, 9V  2A, 12V  1.5A 2 Ports: 5V  3.4A
Type-C Output Power	5V  3A, 9V  3A, 12V  3A, 15V  3A, 20V  2.25A
Dimensions	7.5" x 2.6" x 0.9" (189 x 66 x 23 mm)



REGULATORY COMPLIANCE

Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice for Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Monoprice™, Obsidian™, and all Monoprice logos are trademarks of Monoprice Inc.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum, Inc.

