

Sanctuary

HOME & OFFICE FIRE SAFE

HOME & OFFICE FIRE SAFES | INSTRUCTION MANUAL

IMPORTANT:

Please read this information and follow all safety rules carefully before operating your safe. Failure to do so will void your warranty.

TABLE OF CONTENTS

IMPORTANT INFORMATION 2

1. REGISTRATION 3

2. UNDERSTANDING YOUR SAFE 4

3. UNBOXING 4

4. INSPECTION 4

5. OPENING YOUR SAFE 5

6. E-LOCK BATTERY INSTALLATION 6

7. E-LOCK SECURITY CODE SET UP 6

8. UNLOCKING YOUR SAFE 7

9 LOW BATTERY WARNING 8

10. E-LOCK QUIET MODE 8

11. LOCKED OUT OF YOUR SAFE 8

12. PROPER PLACEMENT AND MOVING OF SAFE 9

13. SECURING YOUR SAFE 10

14. LOADING YOUR SAFE 11

15. KEEPING YOUR SAFE DRY 11

16. MAINTAINING HINGES AND INTERNAL MECHANISMS 11

THIS MANUAL SERVICES THE FOLLOWING STYLE NUMBERS

SA-PS1D



DISCLAIMER - READ BEFORE SAFE SETUP

PLEASE READ THIS INFORMATION CAREFULLY BEFORE OPERATING YOUR SANCTUARY SAFE.

DO NOT LOCK THIS MANUAL OR THE BACKUP KEYS IN YOUR SAFE.

- Thank you for choosing a Sanctuary safe to protect your valuables. We are committed to securing, organizing and protecting your most important documents, valuables and keepsakes.
- If you experience problems or challenges with your safe, please contact us. Many issues can be quickly resolved without the product being returned.

Contact Customer Service at cs@saproducts.com or (888) 792-4264

SAFETY

- Be sure to keep backup keys stored in a safe place away from unauthorized users

WEAPON STORAGE

- If you choose to utilize this safe to store a firearm always follow proper firearm and local laws when storing a firearm.
- SA Consumer Products strongly recommends that you do not store loaded firearms.
- Always follow the firearm safety rules set out by the firearm's manufacturer.
- A Sanctuary safe or any other firearm storage device cannot take the place of other safety procedures including advising children of the dangers of firearms.
- SA Consumer Products and its distributors of the Sanctuary safes do not recommend, suggest, advise, promote, or otherwise condone the ownership or use of firearms. We believe the decision to own or use a firearm is a serious decision that should only be made by an adult who has carefully considered the risks and benefits of such a decision.



1. REGISTRATION

Please ensure you register your safe by visiting our website. Locate the “contact” button on the top header on the home page. Select registration from the drop down menu.

www.saproducts.com

By registering your Sanctuary safe we will be able to expedite and address any problems or challenges you may have which would otherwise require a notary letter and proof of payment.

REGISTRATION INFORMATION

The information you record onto this page will be required in the event you cannot access the contents of your Sanctuary safe. Please fill out all the required information below and retain for your records and safe keeping.

PLEASE HAVE THIS INFORMATION READY PRIOR TO CALLING FOR TECHNICAL ASSISTANCE AT:

Contact Customer Service at cs@saproducts.com or (888) 792-4264

PURCHASE DATE:

PURCHASE PRICE (BEFORE TAX):

MODEL NUMBER:

SERIAL NUMBER:


RETAILER NAME:

KEY NUMBER (IF APPLICABLE):



2. UNDERSTANDING YOUR SAFE

SA-PS1D

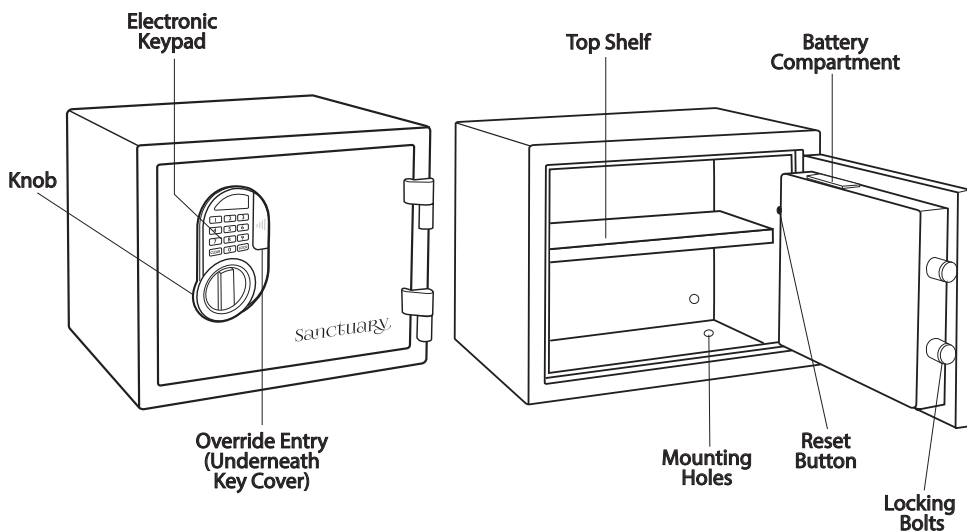

3. UNBOXING

WARNING: SAFES ARE HEAVY AND CAN BE UNSTABLE ON UNEVEN SURFACES. PLEASE ENSURE EXTRA CAUTION WHEN DEALING WITH OR MOVING UNSECURED SAFES.

- Remove the packaging. Carefully remove the box, ensuring not to damage the safe and/or injure yourself.


4. INSPECTION

- Make sure to inspect your safe for shipping damage before accepting delivery. If you find any damage, please contact the delivery company (or carrier) immediately.
- Any damage not noted upon delivery must be reported within fifteen (15) days or there will be no recourse. Any noted damage at the time of delivery must be resolved with the delivery company and/or retailer. Shipping damage is not warrantable by SA Consumer Products.

5. OPENING YOUR SAFE

1. Locate the override key attached to the product packaging. Remove the backup key cover carefully by placing a flat end screw driver into the slot and pry it upwards.

Step 1

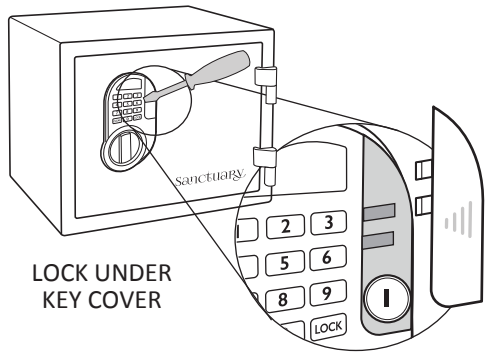


2. Turn the key clockwise from 12 to 3 o'clock to unlock your safe.

Step 2



3. Turn the knob on the door clockwise to grant access to your safe.

Step 3

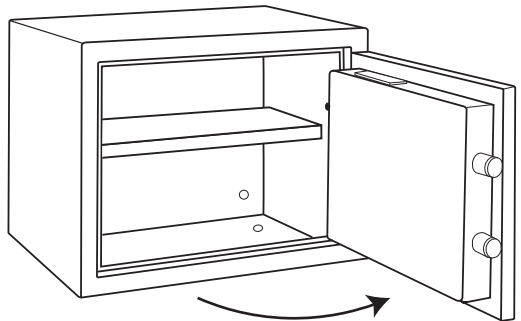


Warning: Do not store your back-up keys inside of the safe.

6. E-LOCK BATTERY INSTALLATION

WARNING: The batteries must be inserted with the correct polarity. Exhausted batteries must be removed from the product and discarded safely. Do not mix old and new batteries. Do not mix alkaline or standard (carbon – zinc) batteries. Do not use rechargeable (nickel – cadmium) batteries.


1. Locate the battery compartment on the top of the door panel. Insert the batteries in the proper orientation and order. Keypad will beep when batteries are successfully installed. Replace battery cover.

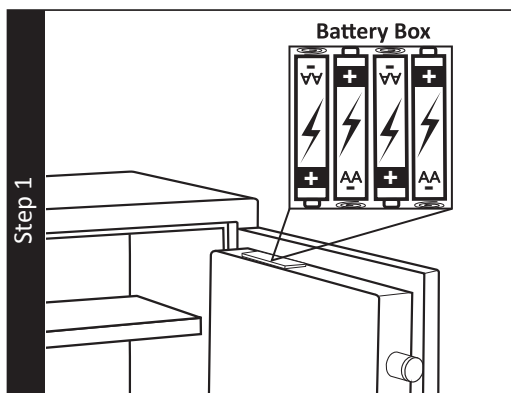


7. E-LOCK SECURITY CODE SETUP

Important: It is necessary to re-program your safe with a new security code you have personally selected to provide maximum household security. Be careful, in choosing your new security code, you'll want to be sure that you can operate the unit quickly without making an error.

1. Locate and remove the red cap covering the reset button on the inside of the door panel. Push the button to begin the process of setting your own unique entry code. There will be one beep and one green light flash.

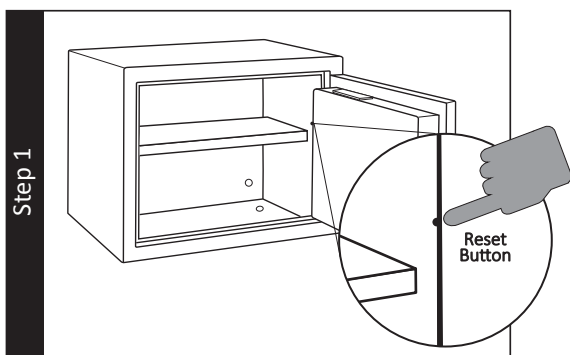


2. Input your new 3-8 digit code in 3 seconds, each input will result in 1 beep and 1 green light flash.

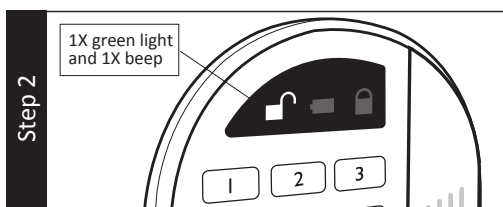


7. E-LOCK SECURITY CODE SETUP (continued)

3. Press "LOCK" to confirm. There will be 2 beeps with a flashing green light. It means the new code was successful.

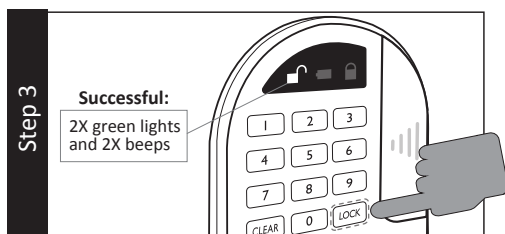


4. If the red light flashes twice and beeps, the code failed. Press the reset button again and repeat the code programming sequence.

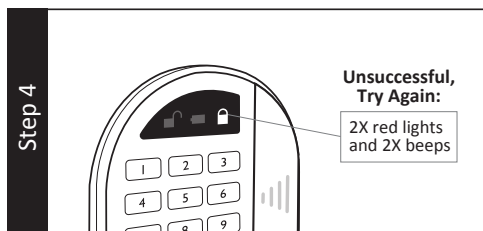


8. UNLOCKING YOUR SAFE

1. Press your new code (3-8 digits), each input results in a green light flash and one beep.

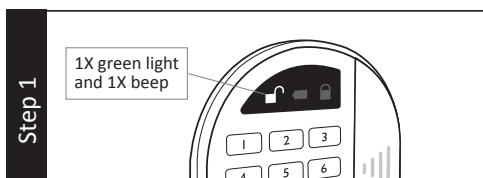

2. Press "LOCK" to confirm, there will be 2 beeps and the green light flashes twice. This means the operation is correct. Turn the knob clockwise to open the door.

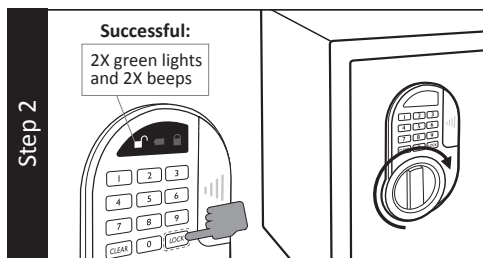

3. If the red light flashes 3 times with 3 beeps, the operation has failed. Please enter your code again.



8. UNLOCKING YOUR SAFE (Continued)


Note: If 3 invalid code attempts are made in succession, this will cause 5 beeps while the red light flashes 5 times. The user will be locked out for 60 seconds. You can still use your backup key at anytime to open the safe.

If invalid code is entered again, you will hear 5 beeps while the red light flashes 5 times and the user will be locked out for 5 minutes.


9. LOW BATTERY WARNING

This E-Lock is equipped to alert you when the batteries are low by illuminating the yellow light (center) on the keypad

Always test the batteries when installing or replacing. If the yellow light comes on when a button is pressed you know the batteries are not fully charged.

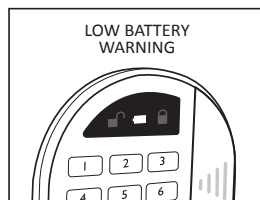

10. E-LOCK QUIET MODE

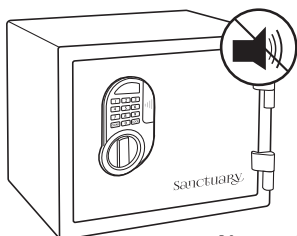

By activating the E-lock quiet mode, the safe will no longer make audible sounds when interacting with safe, allowing for silent access.

You can mute/unmute the keypad by entering the "CLEAR" button with 1 green light flash.

- Note:**
1. In the factory settings, the sound has been turned on.
 2. During the self-locking, no operation is available.

11. LOCKED OUT OF YOUR SAFE

In the event you have forgotten the security code your primary action will be to use your backup keys in order to gain access to your safe and follow the E-Lock Security Setup Code instructions, starting at step 2 of activating the reset button.

Note: Factory pass code is "1-5-9-LOCK"

If you have lost your backup keys, you will need to contact customer service at the number below. Proof of purchase is required to replacement keys.

Customer Service - (888) 792-4264

12. PROPER PLACEMENT AND MOVING OF SAFE

WARNING: SAFES ARE VERY HEAVY AND AWKWARD TO HANDLE. PLEASE USE THE UTMOST CARE IN MOVING THE SAFE. UTILIZING A TRAINED PROFESSIONAL WITH PROPER MOVING EQUIPMENT IS HIGHLY RECOMMENDED.

1. To maximize burglary protection and stability, securing the safe to the floor is recommended.
2. SA Consumer Products recommends that you store your safe in a closet, office, basement, bedroom or any other location that is convenient for you but out of direct line of sight from prying eyes.

HELPFUL: TO DETERMINE WHETHER YOUR SAFE WILL MAKE IT THROUGH DOORWAYS, STAIRS OR CORNERS TAKE THE EMPTY SAFE BOX AND SEE IF IT WILL FIT ALL THE WAY THROUGH TO ITS FINAL LOCATION.

1. The safe should be installed adjacent to a side wall with minimal space on either side of the safe. Wherever possible, the safe should be flat against the wall and floor. Remove the baseboard and/or wall trim if necessary.
2. Always ensure the safe is in an isolated and dry area. Never place the safe in direct contact with a wet floor. When installing your safe on a concrete floor, use of a moisture/protective barrier is highly recommended. Failure to do so, or exposing the safe to chemicals or other adverse environments, may void the warranty.
3. If your safe seems unlevel, you may need to shim the bottom of the safe to prevent the door from swinging open too quickly, or closing on itself.




13. SECURING YOUR SAFE

WARNING: YOUR SAFE IS DESIGNED TO SUPPORT ITSELF WHEN THE DOOR IS OPENED. HOWEVER, CAUTION SHOULD BE USED TO AVOID TIPPING. WHILE SECURING YOUR SAFE BE SURE TO HAVE A SECOND PERSON HOLD AND STABILIZE THE SAFE TO KEEP IT FROM TIPPING, CAUSING INJURY, AND/OR DAMAGE TO THE SAFE AND SURROUNDING STRUCTURES. FAILURE TO DO SO WILL COMPROMISE THE SAFETY, SECURITY AND WARRANTY OF THE SAFE.

TOOLS NEEDED TO BOLT SAFE TO A CONCRETE SURFACE

- DRILL / HAMMER DRILL
- DRILL BIT – 3/16" (for installing into concrete with provided hardware)
- WRENCH- 7/16 " (10MM) SOCKET
- HAMMER

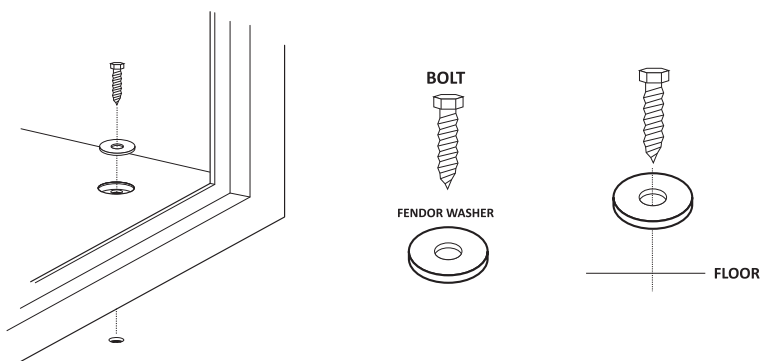

1. Use the hardware provided or consult your hardware retailer for fastening hardware for your particular mounting surface.
2. Open your safe door to provide access to the factory drilled bolt down holes.
3. To secure your safe to the floor it will first be necessary to drill pilot holes in the floor surface.
4. Drill the appropriate diameter and depth of pilot holes based on the type of hardware being used and the type of floor surface. For the hardware provided (concrete floor installation) we recommend using a hammer drill and 3/16" concrete drill bit to drill the four corresponding holes in the concrete floor.
5. Secure the safe by threading the 4 provided anchor bolts through the factory drilled mounting holes (2 on the back and 2 on the floor). Secure and ratchet down tight.

14. LOADING YOUR SAFE

1. Store documents or heat sensitive items in the bottom of the safe for greatest protection against fire damage.
2. Store ammunition separately from valuables.
3. Do not put anything in your safe that will put pressure against the door when it is closed.
4. When loading guns into your safe please take extra caution.

15. KEEPING YOUR SAFE DRY

We recommend placing a moisture/protective barrier between your safe and concrete floor to prevent any moisture, mildew and rust damage to the safe. Installing your safe in a place with climate control (heat in the winter and cooling in the summer) is highly recommended. In areas of high humidity or frequent temperature fluctuations (garages) it is recommend to take appropriate precautions to ward against moisture damage. We strongly encourage the use of an internal dehumidifier and/or desiccants to protect your contents from rust or mildew. Internal dehumidifiers should not be in direct contact with the side or back walls.

16. MAINTAINING HINGES AND INTERNAL MECHANISMS

The hinges and internal locking mechanism are permanently lubricated, thus needing no maintenance. Opening the door panel of your safe may void your warranty. Always consult our customer service experts prior to doing so.



THREE YEAR WARRANTY

SA Consumer Products, Inc. will repair or replace, at their sole discretion, any Sports Afield Safe damaged by fire, forced entry, forced attack for the lifetime of the original owner.

SA Consumer Products, Inc. will repair or replace, at their sole discretion, any Sports Afield Safe with defective parts, paint or lock for three years of the the original owner purchase date.

If SA Consumer Products, Inc. deems a replacement safe is to be sent, they will pay the freight costs to ship the replacement safe to the original owner.

This three year warranty is limited to the safe and expressly excludes any loss associated with the contents of the safe.

SA Consumer Products, Inc. reserves the right to receive full evidence of your misfortune, such as a police report and/or homeowners statement of coverage. This warranty is not valid outside of the United States and Canada.

Proof of registration and copy of sales receipt must be on file at the time of claim. Visit our website at www.saproducts.com to register your safe.

Lifetime warranty only applies to the original owner of the safe.

SA Consumer Products, Inc. shall only be responsible and liable when the safe is used in compliance with the directions specified in your new Sports Afield Safe Owner's Manual.

SA Consumer Products, Inc. requires that specific guidelines be followed for repair. The safe will be repaired in-home if possible (to include parts and labor); however, if factory replacement is necessary (at SA Consumer Products, Inc.'s sole discretion), the replacement will be shipped freight prepaid, curbside delivery.

This warranty is inclusive and is in lieu of any and all other warranties, express or implied. Specifically excluded are the warranties of merchantability and fitness for a particular purpose. This warranty is limited to the safe itself and/or its value and does not include consequential damages of any kind including, but not limited to, the contents in and of the safe.