

Karaoke²

MICRO STAR[®]



**MODE D'EMPLOI
INSTRUCTION MANUAL
MANUAL DE INSTRUCCIONES
BEDIENUNGSANLEITUNG**

www.lexibook.com

LEXIBOOK[®]

K8010



SAFETY INSTRUCTIONS



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



ENGLISH

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE :

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of "uninsulated dangerous" voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION :

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- No naked flames, such as lighted candles, should be placed on the apparatus.

SURGE PROTECTORS :

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

IMPORTANT SAFETY INSTRUCTIONS**PLEASE READ BEFORE OPERATING THIS EQUIPMENT.**

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water or moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool. No objects containing water, such as vases, should be placed on the unit.
6. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning only.
7. Do not block slots or openings. These are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. The openings should never be blocked by newspaper, tablecloths, curtains, etc.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments or accessories specified by the manufacturer.
12. Only use with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. Use caution when moving a cart/microphone speaker combination to avoid injury from the apparatus tipping over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as damage to the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus; and/or the apparatus has been exposed to rain or moisture and does

not operate normally, or has been dropped.

15. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
16. Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. Use only power source as indicated.
17. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.
18. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. Use replacement parts as specified by the manufacturer.
20. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
21. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on apparatus.
22. To be completely disconnect from the power input, the main plug shall be disconnected from the mains, as the disconnect device is the plug.
23. It should be easily accessed during intended use.
24. Minimum distances 10 cm around the apparatus for sufficient ventilations.
25. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
26. No naked flame sources such as lighted candles should be placed on the apparatus.
27. Attention should be drawn to the environmental aspects of battery disposal.
28. Use the apparatus in moderate climates.
29. Excessive sound pressure from earphones and headphones can cause hearing loss.
30. "Maximum output voltage: $\leq 150 \text{ mV}$ ".
31. The mains switch is used as disconnect device and to completely disconnect the apparatus from mains supply, the mains switch must be switched to "OFF" position and the mains switch of apparatus should not be obstructed OR should be easily accessed during intended use.

Caution: An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connections.

CONTENTS OF THE PACKAGING

When unpacking, ensure that the following elements are included:

- 1 x Karaoke Micro Star® 2
- 1 x amp/speaker
- 1 x microphone
- 1 x line-in cable
- 1 x AC cable
- 1 x stand
- 1 x multimedia player holder
- 2 x microphone holders
- 1 x suction cup
- 1 x instruction manual

WARNING: All packaging materials, such as tape, plastic sheets, wire ties and tags are not part of this product and should be discarded.

POWER SOURCES

The Karaoke Micro Star® 2 operates on AC 230V ~ 50Hz.

AC operation

1. Check that the unit is switched off.
2. Plug the AC polarized line cord (included) into a convenient AC 230V ~ 50 Hz power outlet.

Note :

The AC plug supplied with this unit is polarized to help minimize the possibility of electric shock. If the AC plug does not fit into a non-polarized AC power outlet, do not attempt to file or cut the blade. Have a qualified electrician replace the obsolete outlet. The socket-outlet shall be installed near the equipment and shall be easily accessible.

WARNING : Malfunction or loss of memory may be caused by strong frequency interference or electrostatic discharge. Should any abnormal function occur, unplug the AC cable from the mains socket and plug it back in.

DOWNLOADING SONGS

Before using the Karaoke Micro Star® 2, download songs in karaoke format from the internet onto your multimedia player (not included). Please refer to your multimedia player's manual for instructions.


This system works with any multimedia player that has a phone jack, including

MP3 and MP4 players, mobile phones and tablet computers, iPod®*, iPad®* and iPhone®*...

Note : Please only use websites that legally allow downloads of songs.


* iPod®, iPad® and iPhone® are registered trademarks of Apple Computer Inc.

PRODUCT PRESENTATION

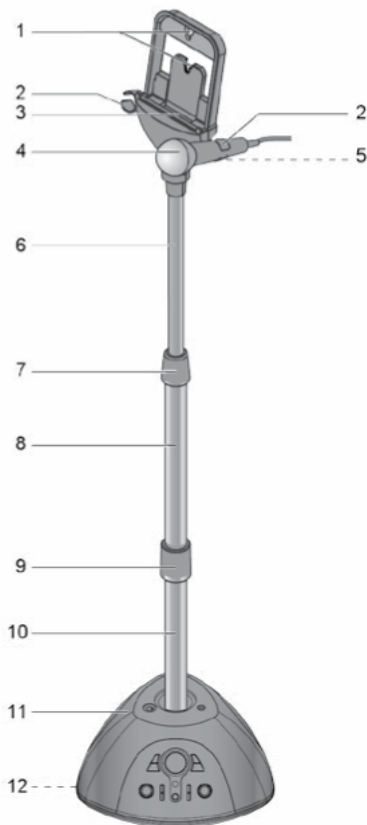


TOP

1. Suction cup mounting slot
2. Microphone holder
3. Multimedia player holder
4. Microphone
5. Microphone ON/OFF switch (on microphone handle)
6. Top stand bar
7. Top stand connector/ adjustment knob
8. Middle stand bar
9. Connector
10. Lower stand bar
11. Amp
12. Bracket seal

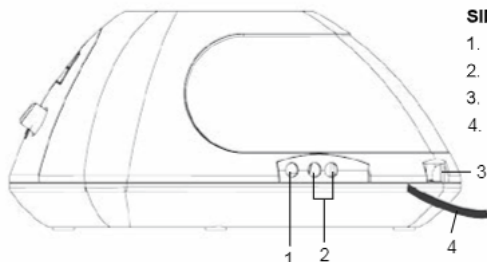

SIDE OF AMP

 1. Mic 2 jack
2. RCA/Audio input jacks
3. Power ON/OFF
4. AC cable

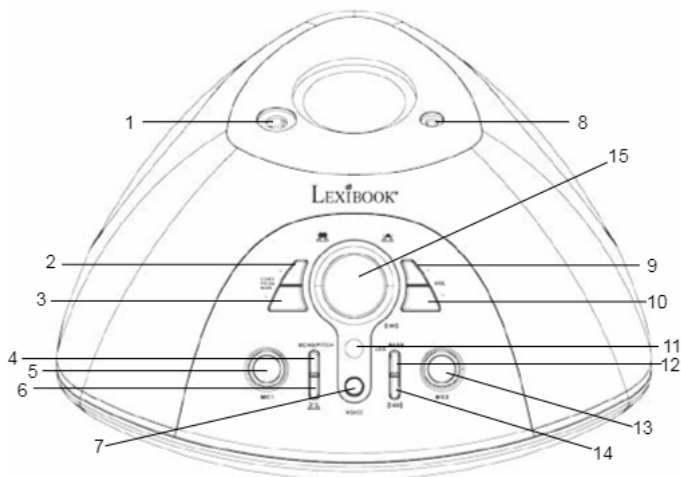


AMP

- | | | |
|-------------------------------|--------------------------|----------------|
| 1. Mic 1 jack | 8. Media-In jack | 15. LCD screen |
| 2. Echo/Pitch/Bass up | 9. Volume + button | |
| 3. Echo/Pitch/Bass down | 10. Volume - button | |
| 4. Echo/Pitch button | 11. LED Indicator | |
| 5. Mic 1 Volume control | 12. Bass button | |
| 6. Male/Female Voice | 13. Mic 2 Volume control | |
| 7. Voice button / Standby OFF | 14. 3D button | |


ASSEMBLY

 1

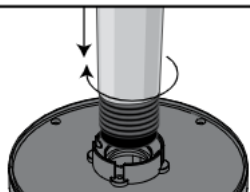


Screw the lower stand bar into the base and rotate clockwise until secure.

 2

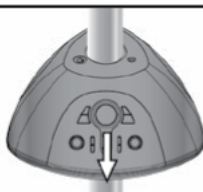


Slide the amp down over the lower stand bar.

3

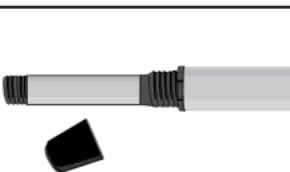


Unscrew the top stand connector from the upper and middle stand bars.

4

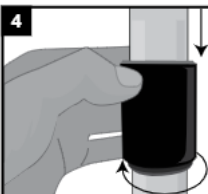


Lower the top stand connector and rotate clockwise to tighten.

5

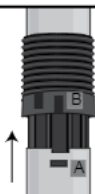


Unscrew the stand connector then insert the middle stand bar into the lower stand bar, aligning the A and B tabs, as shown above.

6

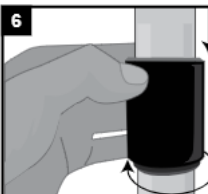


Lower the stand connector and rotate clockwise to secure.

7

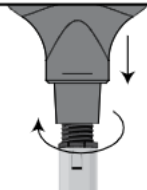


Insert the multimedia player holder onto the top stand bar and rotate clockwise until secure.

8

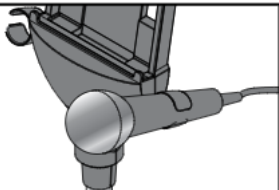


Insert the microphone into the microphone holder. To tilt the microphone, rotate the adjustment knob clockwise or rotate counter-clockwise.

9

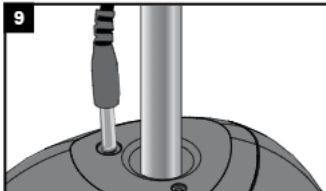

Insert the microphone 6.3mm plug into the Mic 1 jack on the top of the amp.

10

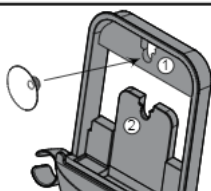

We recommend that you use the suction cup to secure your audio/video player on the base. Insert the suction cup (included) into slot (1) or (2) depending on the size of your player. Install your player in the receptacle provided for that purpose. Firmly press the suction cup against your player. The cup must adhere to the back of your player.

Note: The suction cup adheres to most smooth surfaces.

CONNECTIONS


USING A MULTIMEDIA PLAYER

1




Install your multimedia player into the holder and the Line-in cable (included) at the rear of the unit, as shown above. Connect the Line-in cable into the 3.5mm jack plug of your multimedia player.

2

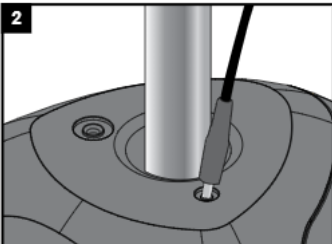

Connect the Line-in cable from the LINE OUT of your multimedia player to the 3.5mm Media-in jack on top of the amp. This will enable you to hear sound from your player through the Karaoke Micro Star® 2's speakers.


USING A SECOND MICROPHONE

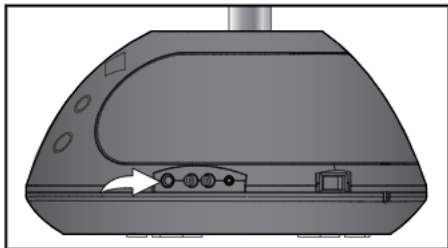


To use a second microphone, insert the mic into the holder. Insert the microphone plug into the Mic 2 jack on the side of the amp.

CONNECTING AN EXTERNAL UNIT

To connect an external unit such as an electronic instrument: guitar, keyboard... or a CDG player (not included) to the Karaoke Micro Star® 2, simply connect an RCA/Audio cable (not included) from the RCA/Audio input jack to the AUX OUT jack on the external unit. This will enable you to broadcast sound from this external unit through the Karaoke Micro Star® 2's speakers. Please ensure both units are switched on. Use the master volume control to adjust the sound level.

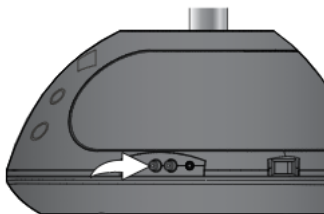**Notes :**


- Please refer to the external unit's owner manual before connecting.
- Make sure the power is off and both units are unplugged before connecting an external unit.
- The Line-in cable cannot be connected at the same time as the RCA/Audio-in cable.

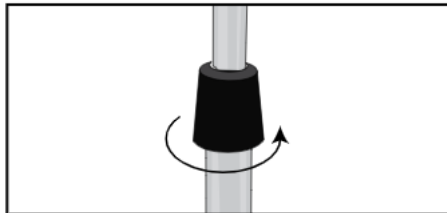STAND ADJUSTMENT

To raise or lower the top stand bar, rotate the connector/adjustment knob anti-clockwise to loosen and slide the top stand bar up or down. Rotate clockwise to secure.

USING THE KARAOKE MICRO STAR® 2

1

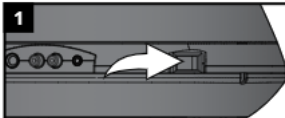


Make any desired connections shown on pages 24 and 25, then press the power button to turn the unit on. The LED indicator will light up.

2




Adjust the Mic 1 volume as desired.

3

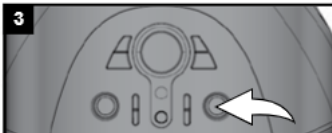


If using a second microphone, adjust the Mic 2 volume as desired.

4

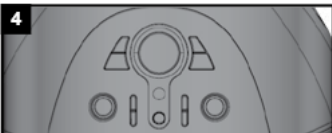


Use the master volume controls to adjust the overall volume of all the connected units and mics. Press the power on/off button to turn the unit off.

5

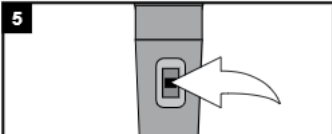


To turn the microphone on slide the On/Off switch up ("On" position). To turn the microphone off, slide the On/Off switch down ("Off" position).

6

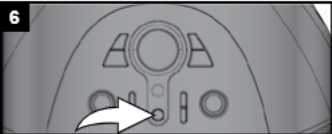


If using an external unit or a multimedia player that plays music with vocals and is connected to the speakers by the RCA/ Audio in Jack or by the Line-in Jack, press the auto vocal button. This will attenuate the vocals on the disc while you sing. (The vocals automatically start when you stop singing.)

7

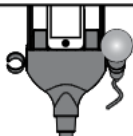

Turn on the multimedia player and/or the external unit, and sing or talk into the microphone. You will hear both your own voice and the music or sound from the player.

8

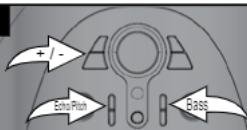


Echo/Pitch/Bass control:

Press the Echo/Pitch or Bass buttons to enter the corresponding mode. Then press the Echo/Pitch/Bass + and - buttons to adjust the level of each setting. The LCD screen will display the levels selected: Echo and Bass (from 0 to 5), Pitch (from -5 to +5).

Note:

- Echo mode can only be selected if a microphone is plugged into the unit.
- to enter Echo mode, press the Echo/Pitch button once, to enter Pitch mode, press it once more.


9

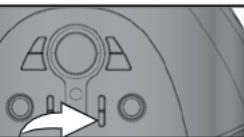

3D/Chorus effect:

Press the 3D/Chorus button to turn on this mode. A small bar in front of the 3D marking will appear on the LCD display.

10

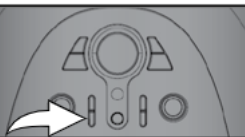

Robotic effect:

Press the Robot button to enter the male/female robotic voice effect. Press it once to select the the male robotic effect (LCD display: a small bar appears in front of the male robot), press once more to select the female robotic effect (LCD display: a small bar appears in front of the female robot), press once again to exit the robotic effect (LCD display: no bar)

Standby Mode

After this product remains inactive for more than 15 minutes, the unit will switch to the standby mode (the LCD display will switch off and the red LED will switch on).

Please press the "VOICE" button to resume working. The red LED will then switch off and the LCD screen will resume working, showing the last information displayed.

TROUBLESHOOTING GUIDE

SYMPTOM	CAUSE	SOLUTION
Squealing through the speakers	Microphone feedback.	Keep the microphone as far away from the speakers as the microphone cable allows or reduce the volume until the noise stops. If using a commercial CD or MP3, make sure the balance control is set to the centre position so you can hear both vocal and music tracks equally.
No sound from speakers	Master volume control is set to minimum.	Use the master volume control + to increase the overall volume.
	Power is off.	Turn power button on and LCD display will switch on.
	Standby mode is on	Press the "VOICE" button to resume working.
I can't hear myself singing	Microphone is not plugged in.	Plug microphone into Mic 1 or Mic 2 jack.
	Volume is too low.	Turn Mic 1 or Mic 2 volume control up.
No sound from multimedia player	Cable is not connected correctly.	Check the Line-in cable is connected from the multimedia player's line-out jack to the Media-in jack.

SPECIFICATIONS

General

Power supply.....	AC 230V ~ 50Hz
Power consumption.....	25W
Speaker	8 Ohms
Output power.....	2 x 8W RMS
Dimensions.....	13 (W) x 48 (H) inches

Specifications are subject to change without notice.

MAINTENANCE

To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning. The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use a soft, clean cloth moistened with plain, lukewarm water to clean the exterior of the unit. Use caution when cleaning and wiping the plastic parts. Mild soap and a damp cloth may be used on the front panel.

WARRANTY

This product is covered by our 2-year warranty. For any claim under the warranty or after sale service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any careless action implemented on this item (such as dismantling, exposition to heat and humidity, etc.). It is recommended to keep the packaging for any further reference.

In a bid to keep improving our services, we could implement modification on the colours and the details of the product shown on the packaging.

NOTE: Please keep this instruction manual, it contains important information.

Reference: K8010

Designed and developed in Europe – Made in China

©LEXIBOOK®

United Kingdom & Ireland

For after-sales service, please contact our teams: 0808 1003015

www.lexibook.com



This product is not a toy.



Environmental Protection

Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).

