

AUTOMATIC SHUT-OFF

To conserve battery power, the scale automatically shuts off if left unused for approximately one minute. To turn the scale off, manually press and hold the ON/TARE button for two seconds.

CLEANING AND MAINTENANCE INSTRUCTIONS

Treating your scale with care will ensure proper use and years of excellent service. Wipe down the scale surface and touchpad buttons with a damp cloth. Do not put any water or dishwashing soap directly over the electronic parts of the scale as this may cause the scale to malfunction or weigh ingredients improperly.

ESSENTIAL PRECAUTIONS

- 1. Do not immerse in water or place under running tap water.**
- 2. Do not put hot objects on scale.**
- 3. Do not use abrasive cleaners.**
- 4. Do not store anything on scale.**

LIMITED WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your sales slip and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a receipt, the warranty period shall be 120 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 120-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

KITCHEN SCALE CNF130

Use & Care Guide



©2017 Conair Corporation. East Windsor, NJ 08520, Glendale, AZ 85307. Made in China.
©2017 Weight Watchers International Inc. All rights reserved. Weight Watchers is the registered trademark of Weight Watchers International Inc. and used under license.

IB-14831

CONAIR®

KITCHEN SCALE INSTRUCTION MANUAL

Weighing is the quickest and most accurate way to measure most dry and solid ingredients, such as sugar, flour and shortening, for consistently reliable results. With your new Conair Kitchen Scale, weighing is simple and easy. Designed to meet all your household measuring needs, your scale will provide precise, consistent weighing of cooking/baking ingredients for the best results. Use your scale to weigh food portions specified in your dieting guides. You can even weigh oversized letters and packages to ensure you have the right amount of postage.

The Conair Kitchen Scale is compact, light and convenient to store. Operation and cleanup are fast and easy. It weighs in 0.1 ounce increments up to a maximum of 11 pounds. This scale converts from ounces to grams at the touch of a button and weighs in gram increments up to a maximum of 5 kilograms.

INSTALLING THE BATTERY

Your scale includes a CR2032 battery. Gently pull the battery isolator underneath the scale. If the display does not light up, open the battery and make sure the battery tab has been removed completely. The battery compartment is situated underneath the scale.

NOTE: When “Lo” appears on the display screen, the batteries must be replaced.

 
 
 
NOTE: There is a clear label on the display of the scale that should be removed before first use.

WEIGHING ITEMS

1. Place the scale on a level, hard surface.
- 2a. Choose whether you want to weigh directly on the platform with a plate or bowl (not included).
- 2b. If weighing with a bowl, place the bowl on the scale before you turn the scale on.
3. Press the ON/TARE button to turn the scale on. “8888” first appears on the display followed by “0”, indicating the scale is ready for use.
4. Place the object/food item to be weighed on the platform or in the bowl and read the weight on the LCD screen.

NOTES: If the scale does not detect any load on the platform, or there is no change in weight, the scale will turn off after 1 minute. Press the “ON/TARE” button to turn the scale off manually.

If the weight on the platform is over 1 lb or over 1 kg, the scale will show the weight in pounds and ounces (lb: oz) or kg, rather than just in ounces or grams. Do not touch any parts of the scale with your hands while weighing is in progress. The scale is very sensitive and may pick up extra readings.



CHANGING MODES

To change from metric (kg/g) to imperial (lbs/oz/oz) mode at any time during use, press the UNIT button once.

TARE FUNCTION: WEIGHING WITH A BOWL

You may want to weigh ingredients in a bowl or other container. The tare option offsets the weight of the bowl so that you are only weighing the ingredient. If you remove the bowl from the scale, a minus weight (weight of bowl) appears in the display.

1. Place a bowl on the scale platform.
2. Press the ON/TARE button on the front panel. At first “8888” will appear. Wait until “0.0” appears on the display screen.
3. To tare, press and hold the ON/TARE button for two seconds. “0.0” will appear. Place the ingredient into the bowl. The weight of the added ingredient appears.

ADD AND WEIGH FEATURE

If you want to reach a desired weight (i.e., 300g flour) – you can use the add and weigh procedure.

1. Place your scale on a stable, level surface.
2. Press the ON/TARE button. Wait until “0.0” appears on the display.
3. Place an empty bowl to hold the ingredients on the scale.
4. Zero out the weight of the empty bowl by pressing and holding the ON/TARE button for 2 seconds. Wait until “0.0” appears on the scale. This will ensure that the weight of the empty bowl is subtracted from the total weight of the bowl and ingredients.
5. You are now ready to weigh your first ingredient. Place the ingredient into the bowl until the desired weight appears on the display.
6. You are now ready to weigh the next ingredient(s). Place additional ingredient in the bowl until the desired weight appears on the display.

NOTE: If you want to view the weight of individual ingredients as they are added to the bowl, then tare each time you add a new ingredient.

