

Technical specifications

Dimensions	5 ⅛" (13cm) diameter x 2 ¾" (7cm) height
Weight	Approx. 1.6 lbs (725 g)
Shell material	Cast resin and natural sand
Inner body material	High-grade acoustics fabric
Bluetooth	Version 5.0
Speaker configuration	1 x 45mm full-range driver and 1 passive radiator
Amplifier	20W class-D amplifier
Frequency range	60-20,000 Hz
True Stereo Pairing (TWS)	Available between two Teno
Microphone	Noise-cancelling microphone for great clarity
Power	5W (0.1W for standby)
Battery type	Rechargeable lithium ion
Battery capacity	4000 mAh
Speaker battery life	Up to 8 hours at 50% volume
Light battery life	Up to 4 hours at 100% brightness
Charging	5V/2A via USB-C charger (included)
Charge time	5.5 hours
Battery indicator	White (while charging)/Green (fully charged)
Light source/brightness	High-output LED/250 lumen
Light temperature	2700k (soft warm white)
Brightness levels	25/50/75/100%
Recommended room size	5-20 m²; 50-200 ft², small social gatherings, in the office and mid-sized rooms around the home

For further product information and warranty, visit hellolumio.com/pages/my-teno, or contact us at info@hellolumio.com.




teno
start guide



Instructions

Your Teno is controlled via touch. Separate two halves slightly to turn on light. Fully separate to turn on speaker. Teno's Bluetooth connection is automatically discoverable from your device when you fully open Teno and hear the chime sound.

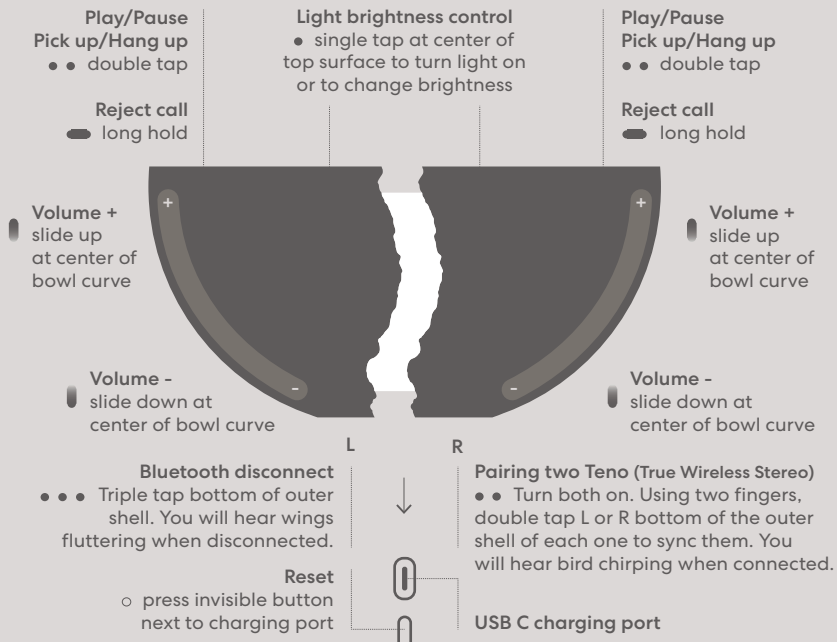

Tips

Sound indicators

<i>Chime</i>	Speaker on/off
<i>Bird chirping</i>	Bluetooth/TWS connected to device
<i>Wings fluttering</i>	Bluetooth disconnected
<i>Water drops</i>	Low battery

Light

Tap the **center** top surface to activate the dimmer. There are four levels of brightness to choose from.

Volume

Slide two fingers up and down along the curve at the **center** of the bowl to adjust volume.

Speaker

Tap the **center** top surface closer to the edge to receive or end a call.

Reset

Closing and re-opening Teno will resolve most issues. If that doesn't work, hard re-set the system by pressing the reset button.

Bluetooth disconnect

If you don't see "Teno" on your phone, ensure that Teno is not connected to another device. Disconnect first. If connection problems continue, try closing and re-opening Teno.

Maintenance and care

For fabric, wipe dust off the surfaces using a dry, soft cloth. Do not use liquid or aerosol cleaners. To remove stains or dirt, we recommend using melamine sponge cleaner (also known as magic eraser) or a soft, damp cloth and a solution of water and mild detergent, such as washing-up liquid. For outer shell, gently wipe the shell using a soft, dry cloth. Use a brush with soft bristles for dust removal in grooves or crack areas. Do not spray water or cleaner directly onto the surface.

Scan me

Point your camera at this QR code for a Teno instructional video.

