



68L MOTION SENSOR BIN

(STAINLESS STEEL)

OVMNSNBSSA




SAFETY & WARNINGS

- This product is designed for indoor use only. Do not use it outdoors.
- Do not allow children to sit on the bin.
- Do not expose the bin to direct sunlight. Doing so may cause the product to deform or fade.
- Do not move the bin when there are contents inside it.
- Lift the garbage bag out gently to avoid breaking the bag.
- This product is designed for household use. It is not suitable in a commercial environment.
- Do not throw this bin away along with your household garbage. Please recycle responsibly.


OVERVIEW

Control Panel

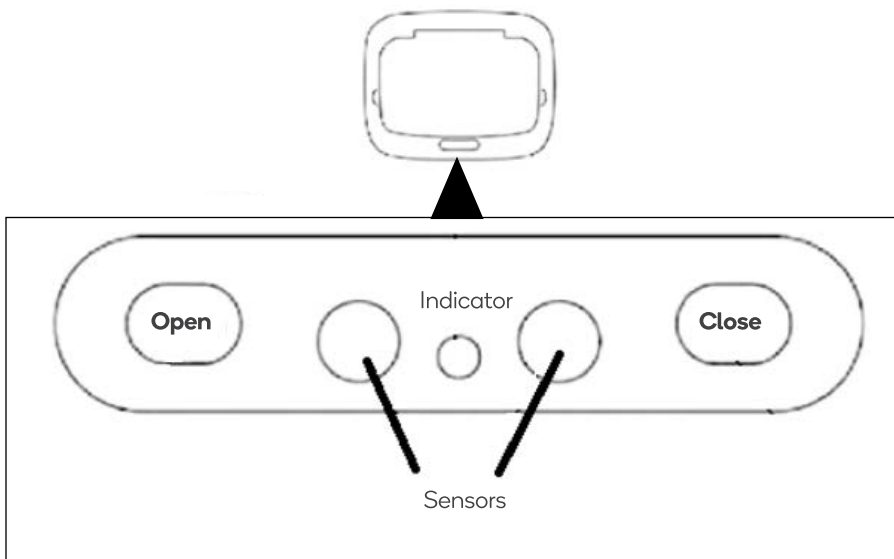


OPERATION

1. Ensure that the switch situated at the back of the lid is in the OFF position.
2. Open the battery compartment located inside the lid and place 4x AA batteries into the compartment.

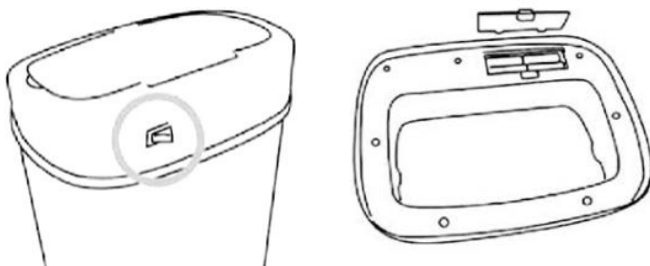

3. Place a plastic bin liner in the bin (if required), then replace the lid.

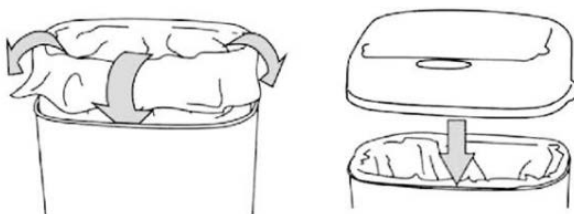

4. Press the switch to turn the bin ON. The red indicator will light up for 3 seconds. When the indicator blinks, the bin is operational.
5. If the bin is not working, turn off the switch, take the batteries out and gently clean the springs in the battery compartment. Put the batteries back in and repeat step 4.
6. To automatically open the bin, place your hand or the object you want to throw away approximately 10cm above the sensors. The lid will close automatically after 3 seconds.
7. The bin can be used in manual mode as well. To activate manual mode, press the open button located to the left of the sensors. This mode is recommended to empty the bin or in case of repeated use.

8. To close the lid, press the close switch located to the right of the optic sensor. The bin will then be in automatic mode again.

Note: For a daily use of around 20 times, the batteries will need to be changed approximately every 6 months. To change the batteries, switch off the bin and change all 4 batteries at once and then repeat step 4.

Indicator Light Description:

- Red, blinking (every 3 seconds): Normal operation
- Green: Automatic opening of the lid
- Red: Automatic closing of the lid
- Green, blinking (every 3 seconds): Manual opening of the lid
- Yellow, blinking (every 3 seconds): Low batteries

CLEANING & CARE

- Do not wash the bin's exterior with excess water in order to preserve the electronic components.
- Do not push the bin's lid closed when it is open.
- Take used batteries out of the compartment to avoid them leaking and damaging the electronic components.
- Avoid exposure to direct sunlight on the sensor.
- If the unit is not in use for extended periods, ensure the batteries are removed from the Unit.

NOTES

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com