


※ Features

- 1.Resettable design, LED indicators around the edge of the unit
- 2.Press the outside plate to enable the output function
- 3.The outside plate will show the status (Green or Red)
- 4.Reset key with non-slip design
- 5.Input power range from DC12-24V to connect with all types of fire alarm system.
- 6.Built-in buzzer status can be set as silent, intermittent or continuous.
The volume is adjustable.
- 7.Easy to assemble, outer case has no screws, 3 sets of output points to connect other equipment, flush or surface mount installations.

※ Accessories

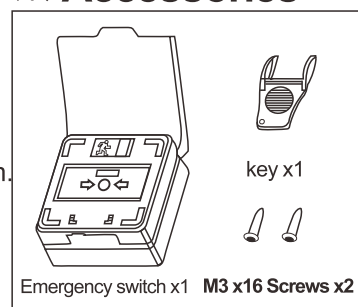


※ Specifications

Item	Model	Parameters		Note
Power supply	DC 12V~DC 24V		×	±5 %
Operation current	DC 12V/18mA(Standby)/75mA(Operation)		×	±5 %
	DC 24V/11mA(Standby)/41mA(Operation)		×	±5 %
Buzzer	Set as silent, intermittent, or continuous		×	
Indicator	Dual-colour (red and green). Red indicator to set blinking , off or on.		×	
Output	N.O. N.C.& COM.Output (Maximum load of 125V/3A)			
Weight	192g			
Dimensions	90mm(L)x93mm(W)x64mm(H)			
Material	ABS,PC(transparent part)			


【Standby】

Status display:Green

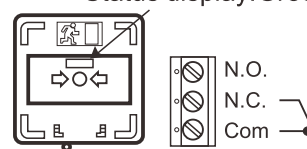


【Operation】


Status display:Red

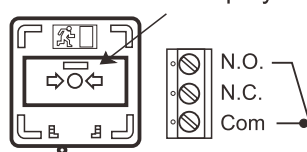

※ Connections

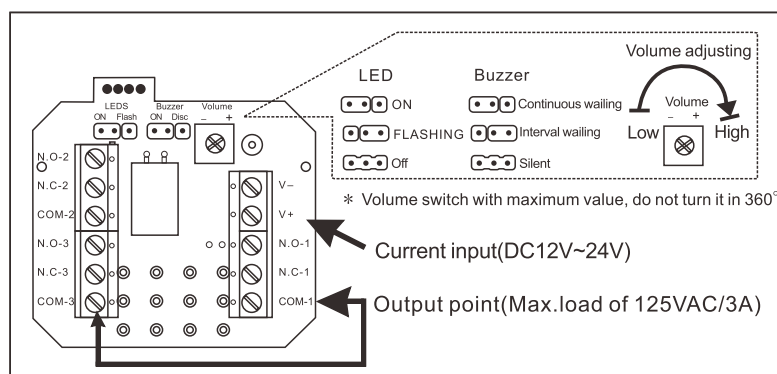


※ Wiring Diagram

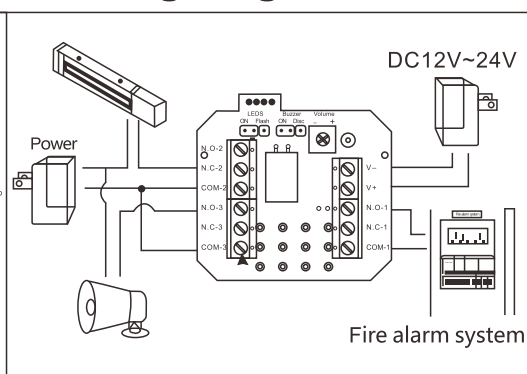

※ Attention before installation


⚠ Please depress the outside plate to make sure the indicator flag turns red before opening the front and middle covers to prevent the spring from popping out.

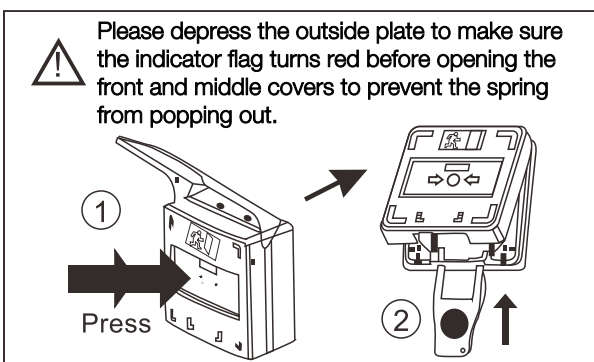

1 Press


2

▲ Fixing Holes for flush mount installation are set at 60mm

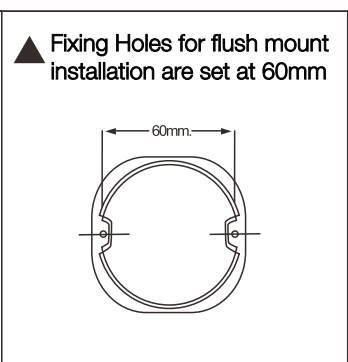

60mm

▲ Terminal opening is restricted as shown below

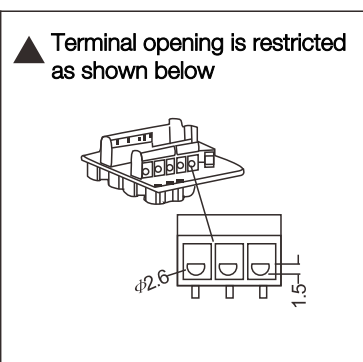


φ2.6

※ Installation


Surface Mount Installation

Installation steps

Completed

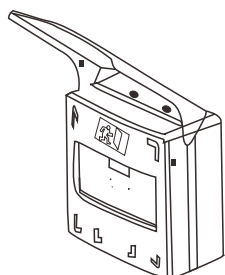


1.

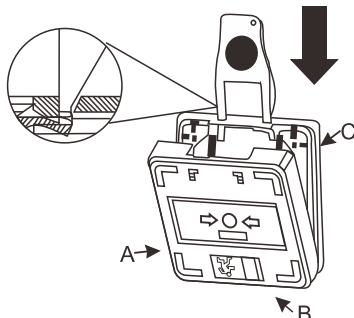


Use the key supplied to disassemble B and C fixings

2.

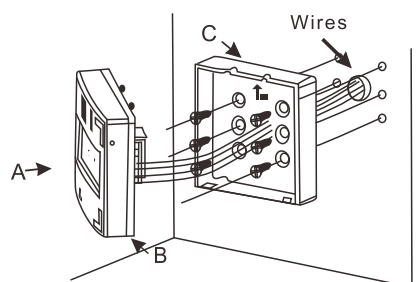


Fix bottom cover C and connect the wires

3.

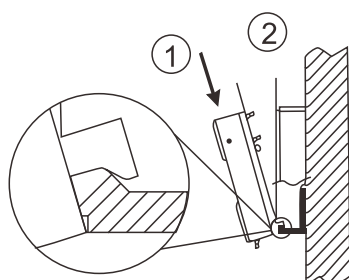

Fix the unit as shown in the diagram above

4.

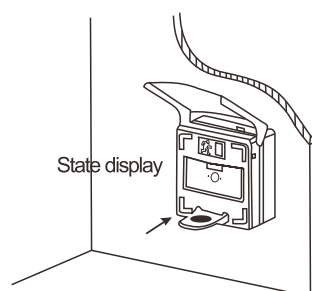


Insert the key into the key hole. Pull the key out when the flag turns green to complete the setting


Flush Mount Installation

Installation steps

Lateral view

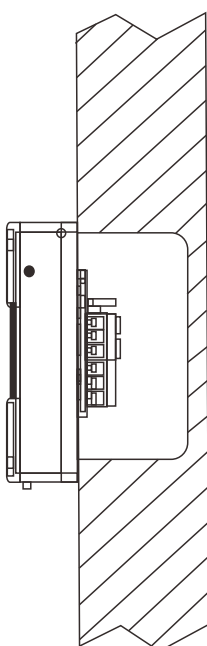


1.

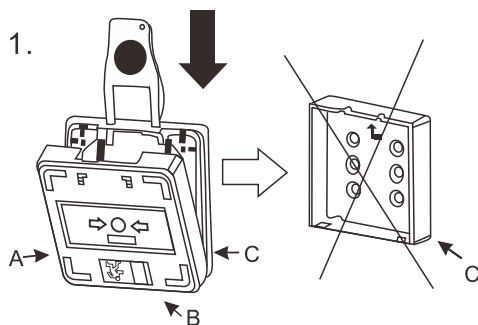

Use the key supplied to disassemble B and C fixings

No bottom C cover is required for flush mounting fixings


2.

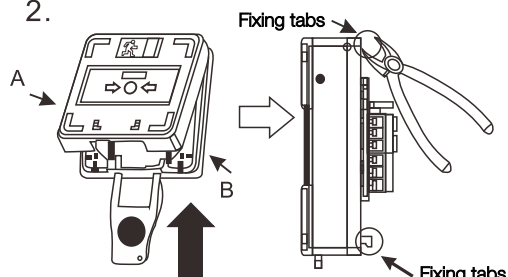

Use the key supplied to disassemble A and B fixings


Remove the fixing tabs not required for flush mounting

3.

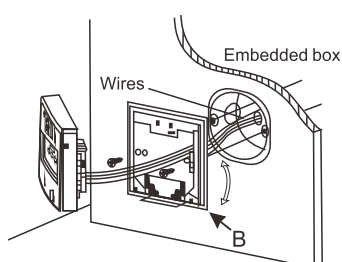


Fix the middle cover B and connect the wires.

4.

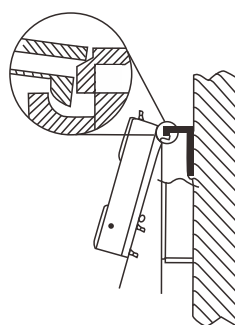

Fix the unit as shown in the diagram above

5.

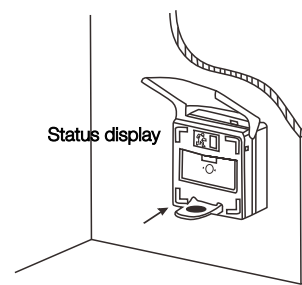

Insert the key into the key hole. Pull the key out when the flag turns green to complete the setting