

PowerPoint

Side By Side Fridge Freezer

Instructions for use Model:
P9689MDSS
& P9689MDBL

Please read these instructions before using your appliance.

Thank you for choosing a PowerPoint appliance.

Please take some time to read this manual before using your appliance, to ensure you know how to safely operate the controls and functions.

Carefully follow all unpacking and installation instructions.

If you have any questions or concerns, please call our customer service on Dublin 01-4505327 or online at www.powerpointappliances.ie

1. SAFETY WARNINGS

1.1 Warning.....	4
1.2 Meaning of safety warning symbols.....	5
1.3 Electricity related warnings.....	6
1.4 Warnings for using.....	6
1.5 Warnings for placement.....	7
1.6 Warnings for energy.....	7
1.7 Warnings for disposal.....	8

2. PROPER USE OF REFRIGERATORS

2.1 Placement.....	9
2.2 Levelling feet.....	10
2.3 Levelling door.....	10
2.4 Changing the Light.....	11
2.5 Starting to use.....	11
2.6 Energy saving tips.....	11

3. STRUCTURE AND FUNCTIONS

3.1 Key components.....	12
3.2 Functions.....	13

4. MAINTENANCE AND CARE OF THE APPLIANCE

4.1 Overall cleaning.....	15
4.2 Cleaning of door tray.....	15
4.3 Cleaning of Glass shelf.....	16
4.4 Defrosting.....	16
4.5 Out of operation.....	16

5. TROUBLESHOOTING

5. Troubleshooting:.....	17-18
--------------------------	-------

6. WARRANTY

6.1 Registering Your 2 Year Guarantee.....	19
6.2 One Year Guarantee.....	19
6.3 Exclusions.....	19

7. CONTACT DETAILS

7 Contact details.....	20
------------------------	----

1. SAFETY WARNINGS

1.1 Warning:

Risk of fire/flammable materials



- THIS appliance is intended to be used in a domestic environment.
- THIS appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.)
- CHILDREN should be supervised to ensure that they do not play with the appliance.
- IF the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- DO not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- THE appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- WARNING: Please dispose of the refrigerator according to local regulators for it use flammable blowing gas and refrigerant.
- WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.
- WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- DO not use extension cords or ungrounded adapters.
- THE refrigerator must be disconnected from the source of electrical supply before attempting the installation.
- Refrigerant and cyclopentane foaming material used for the appliance are flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.

1. SAFETY WARNINGS

- To avoid food contamination, please respect the following instructions:
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- FOR a freestanding appliance: this refrigerating appliance is not intended to be used as a built-in appliance.
- ANY replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.

1.2 Meaning of safety warning symbols



This is a prohibition symbol. Any incomppliance with instructions marked with this symbol may result in damage to the product or endanger the personal safety of the user.



This is a warning symbol. It is required to operate in strict observance of instructions marked with this symbol; or otherwise, damage to the product or personal injury may be caused.

 


This is a cautioning symbol. Instructions marked with this symbol require special caution. Insufficient caution may result in slight or moderate injury, or damage to the product.


This manual contains important safety information and should read fully and kept safely for future reference.

1. SAFETY WARNINGS

1.3 Electricity related warnings

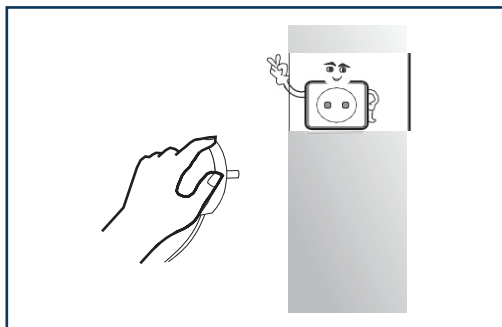

 
- Do not pull the power cord when pulling the power plug of the refrigerator. please firmly grasp the plug and pull out it from the socket directly.
- To ensure safe use, do not damage the power cord or use the power cord when it is damaged or worn

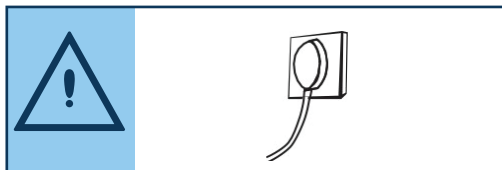

- Please use a dedicated power socket and the power socket shall not be shared with other electrical appliances. The power cord should be firmly contacted with the socket or else fires might be caused.
- Please ensure that the grounding electrode of the power socket is equipped




 - In the event of a gas leak do not unplug electrical appliances in case of causing a spark.

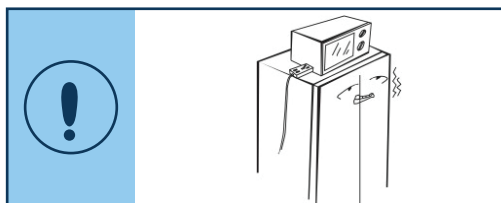


- Do not use electrical appliances on the top of the appliance. Unless they are of the type recommended by the manufacturer.

 1.4 Warnings for using

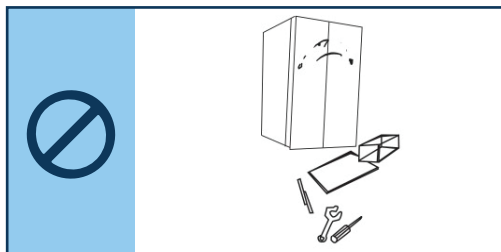

 - Do not arbitrarily disassemble or reconstruct the refrigerator, nor damage the refrigerant circuit; maintenance of the appliance must be conducted by a specialist.
- Damaged power cord must be replaced by the Powerpoint's service agent. Please contact us in the event of cord damage.

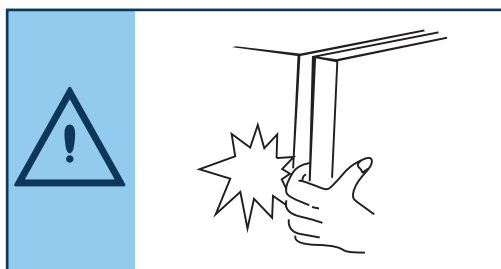


- The gaps between refrigerator doors and between doors and refrigerator body are small, do not to put your hand in these areas to prevent from squeezing the finger. Please be gentle when close the refrigerator door to avoid knocking over products inside.
- Do not pick foods or containers with wet hands in the freezing chamber when the refrigerator is running, especially metal containers in order to avoid frostbite.

1. SAFETY WARNINGS



 - Do not allow any child to get into or climb the refrigerator; otherwise, suffocation or serious injury from toppling may be caused.

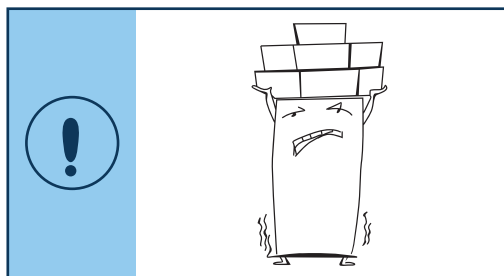

- Do not place heavy objects on the top of the refrigerator considering that objects may fall when closing or opening the door, and accidental injuries might be caused.

 
1.5 Warnings for placement



- Do not put flammable, explosive, volatile or highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- Do not place flammable items near the refrigerator to avoid fires.



- The refrigerator is intended for household use, such as storage of foods; it shall not be used for other purposes, such as storage of blood, drugs or biological products, etc.

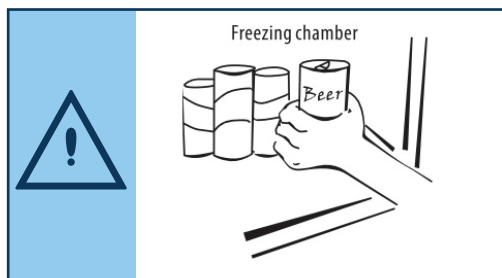

- Do not store beer, beverage or other fluid contained in bottles or enclosed containers in the freezing chamber of the refrigerator; otherwise, the bottles or enclosed containers may crack due to freezing to cause damages.

1.6 Warnings for energy

- Refrigerating appliances might not operate consistently (possibility of defrosting of contents or temperature becoming too warm in the frozen food compartment) when sited for an extended period of time below the cold end of the range of temperatures for which the refrigerating appliance is designed.
- Effervescent drinks should not be stored in the food freezer compartments or cabinets or in low-temperature compartments or cabinets, some products such as water ices should not be consumed too cold;
- Do not exceed the storage time(s) recommended by the food manufacturers for any kind of food and particularly for commercially quick-frozen food in food-freezer and frozen-food storage compartments or cabinets.

1. SAFETY WARNINGS

- Prevent an undue rise in the temperature of the frozen food while defrosting the refrigerating appliance.
- A rise in temperature of the frozen food during manual defrosting, maintenance or cleaning could shorten the storage life.



1.7 Warnings for disposal



Refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.



When the refrigerator is scraped, disassemble the doors, and remove gasket of door and shelves: put the doors and shelves in a proper place, so as to prevent trapping of any child.)

 
Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.




2. PROPER USE OF REFRIGERATORS

2.1 Placement

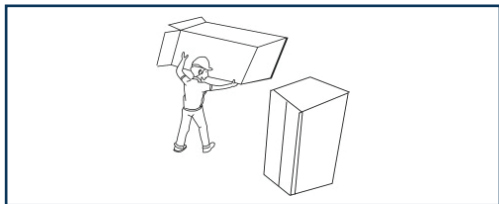


 Before use, remove all packing materials, including bottom cushions, foam pads and tapes inside of the refrigerator; Tear off the protective film on the doors and the refrigerator body.

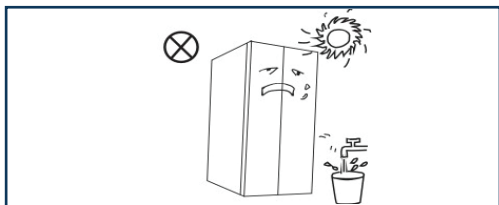


Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or watery places to prevent rust or reduction of insulating effect.

 
Do not spray or wash the refrigerator; do not put the refrigerator in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the refrigerator.

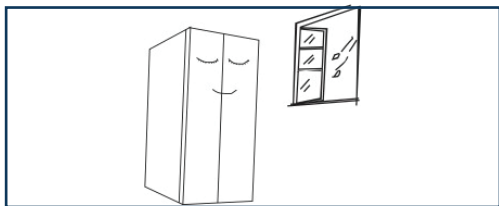

 The refrigerator is placed in a well-ventilated indoor place; the ground shall be flat, and sturdy (rotate left or right to adjust the wheel for levelling if unstable).

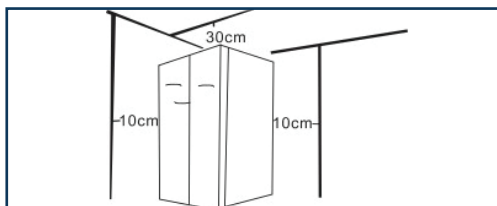

 The top space of the refrigerator shall be greater than 30cm, and the refrigerator should be placed against a wall with a free distance more than 10cm to facilitate heat dissipation.

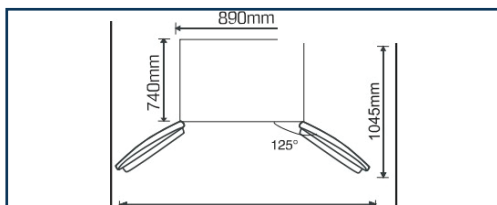

Spare enough space for convenient opening of the doors and drawers.

The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor


2. PROPER USE OF REFRIGERATORS

2.2 Levelling feet

1 Precautions before operation:

Before operation of accessories, ensure that the refrigerator is disconnected from power. Before adjusting the levelling feet, precautions shall be taken to prevent any personal injury.

2 Diagram of the levelling feet

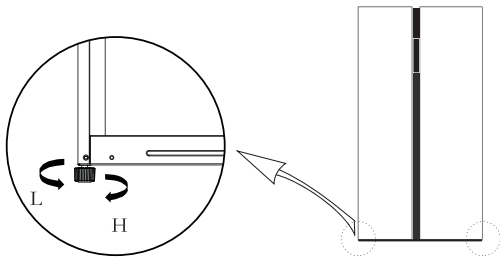 

(The picture above is only for reference. The actual configuration will depend on the physical product supplied).

3 Adjusting procedures:


- Turn the feet clockwise to raise the refrigerator.
- Turn the feet counterclockwise to lower the refrigerator.
- Adjust the right and left feet based on the procedures above to a horizontal level.

2.3 Levelling door

1 Precautions before operation:

Before operation of accessories, ensure that the refrigerator is disconnected from power. Before adjusting the door, precautions shall be taken to prevent any personal injury.

2 Schematic diagram of levelling the door body

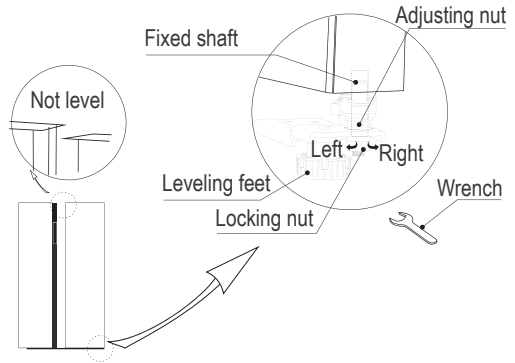 

(The picture above is only for reference. The actual configuration will depend on the model supplied).

- When the fridge door is low:

Open the door, use a wrench to loosen the locking nut and to rotate the adjusting nut anti-clockwise to raise the height of the door. Once the doors are aligned, then tighten the locking nut by rotating it anti-clockwise..

- When the fridge door is high:

Open the door, use a wrench to rotate the adjusting nut clockwise to lower the height of the door. Once the doors are aligned, then tighten the locking nut by rotating it anti-clockwise.

List of tools provided by the user



M10

 
 
 
 
wrench

2. PROPER USE OF REFRIGERATORS


2.4 Changing the Light

Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.

Light source in this product is replaceable only by qualified engineers.

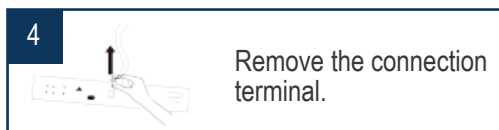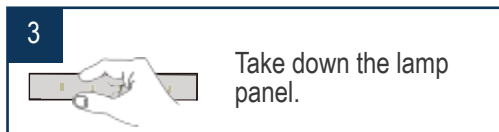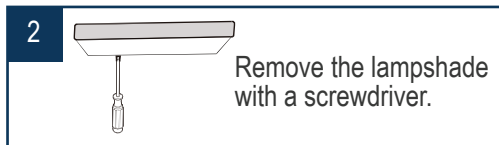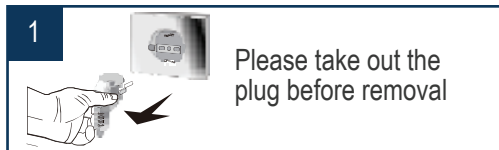

 2.5 Starting to use

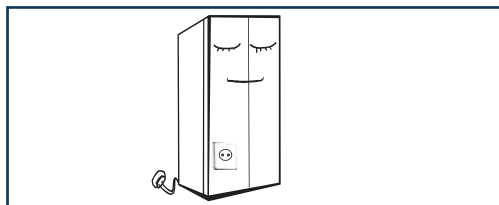

- After transportation, please let the product stay for more than 2 hours before turning on the power, otherwise it will lead to a decrease in cooling capacity or damage to the product.
- Before putting any fresh or frozen food, the refrigerator shall have run for 2-3 hours, or for above 4 hours in summer when the ambient temperature is high.

 
- Please pull out the plug in case of power failure or cleaning. Do not connect the appliance to power supply within five minutes to prevent damages to the compressor due to surging.

2.6 Energy saving tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extend searches. Remove as many items as needed at one time, and close the door as soon as possible.

3. STRUCTURE AND FUNCTIONS

3.1 Key components

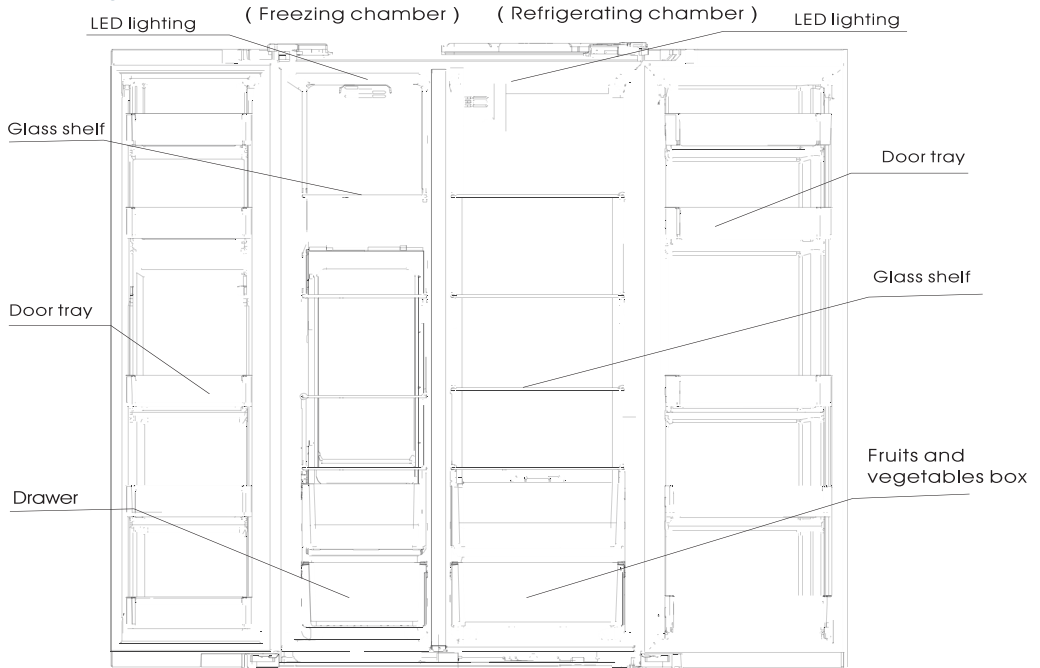

(The picture above is only for reference. The actual configuration will depend on the physical version supplied)

Refrigerating chamber

The Refrigerating Chamber is suitable for storage of a variety of fruits, vegetables, beverages and other food consumed in the short term. Suggested storage time 3 days to 5 days.

- Cooked foods shall not be put in the refrigerating chamber until cooled to room temperature.
- Foods are recommended to be sealed up before putting into the refrigerator.
- The glass shelves can be adjusted up or down for a proper storage space and easy use.

Freezing chamber

 
- The low temperature freezing chamber may keep food fresh for a long time and it is mainly used to store frozen foods and making ice.
- The freezing chamber is suitable for storage of meat, fish and other foods not to be consumed in short term.
- Chunks of meat are preferably to be divided into small pieces for quick freezing and easy access. Please note food shall be consumed within the shelf time.
- The temperature should be set to “quick freeze”, when you want to refrigerate foods quickly.

Drawers, food boxes, shelves, etc. placed according to the position in the picture above are the most energy efficient.

Note: Storage of too much food during operation after the initial connection to power may adversely affect the freezing effect of the refrigerator. Foods stored should not block the air outlet; or otherwise, the freezing effect will also be adversely affected.

3. STRUCTURE AND FUNCTIONS

3.2 Functions

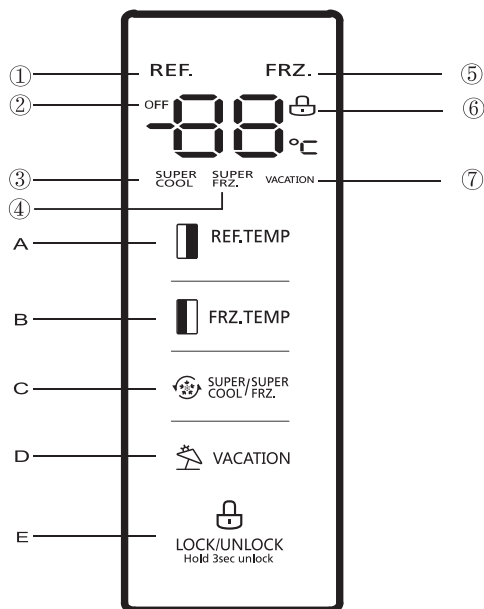

Display

- 1 - Refrigerating compartment temperature
- 2 - OFF icon
- 3 - Super cool icon
- 4 - Super freeze icon
- 5 - Freezer compartment temperature
- 6 - Lock /unlock icon
- 7 - Vacation icon

Button operation

- A - Refrigerating compartment temperature adjustment
- B - Freezer compartment temperature adjustment
- C - Mode function
- D - Vacation setting
- E - Lock/unlock control

Button operation

1 Lock /unlock

In the unlocked state, long press the lock button  for 3 seconds, enter the lock state, When the lock icon disappears,, it means the display panel is locked, at this time, button operation cannot be adjusted;
In the locked state, long press the lock button  for 3 seconds, enter the unlocked state, The icon  go out, it means the display panel is unlocked, at this time, button operation can be resumed;

2 Vacation mode

Press the button:  VACATION to enter the vacation mode. Icon  lights up, the vacation mode will start after locking, press "FRZ. TEMP "or" REF.TEMP". Can exit vacation mode.

3 Super cool mode

Press the button   to enter the Super cool mode. Icon  lights up, the Super cool mode will start after locking, exit quick cooling automatically after 150 minutes by default or press "REF.TEMP key to exit the super cool mode. Quick cool exits for 2.5h.

4 Super freeze mode

Press the button   to enter the Super freeze mode. Icon  lights up, the Super freeze mode will start after locking. Exit the quick-freezing mode by default or press "FRZ. TEMP key to exit the super freeze mode. Quick freeze exits for 26h.

5 Temperature setting of refrigerating chamber

Press temperature adjusting button of the refrigerating chamber  REF.TEMP ,refrigerating chamber region will make flashing indication. Then press the button  REF.TEMP again to set the temperature, and you will hear one beep. Setting scope is between 2°C and 8°C. Every time you press the button, the temperature will change 1°C . After adjusting, the digital tube will keep flashing for 5 seconds. New temperature setting will come into effect after locking.

3. STRUCTURE AND FUNCTIONS

6 Temperature setting of freezing chamber
Press temperature adjusting button of the freezing chamber,  FRZ.TEMP. freezing chamber region will make flashing indication. Then press  FRZ.TEMP. the button again to set the temperature, and will hear one beep. Setting scope is between -16 °C and -24 °C. Every time you press the button, the temperature will change 1 °C. After adjusting, the digital tube will keep flashing for 5 seconds. new temperature setting will come into effect after locking.
Recommended setting: Refrigerated chamber 4 °C, freezing chamber -18 °C

Note: The quick-freezing function is designed to maintain the nutritional value of the food in the freezer. It can freeze the food in the shortest time. If a large amount of food is frozen at one time, it is recommended that the user turn on the quick-freezing function and put the food in. At this time, the freezing speed of the freezer compartment is increased, which can quickly freeze the food, effectively lock the nutrition of the food, and facilitate storage.

7 Storage upon power failure
In the case of a power failure, the instant working state will be locked and maintained untill power resumes.

8 Opening warning and alarm control
When the refrigerator doors are open, the opening tune will sound. If the door is not closed in two minutes, the buzzer will sound once every second till the door is closed. Press any button to stop the buzzer alarm.


9 Fault indication
The following warnings appearing on the display indicate corresponding faults of the refrigerator. Though the refrigerator may still have cold storage function with the following faults, the user should contact us for maintenance, so as to ensure optimized operation of the appliance.

Fault code	Fault description
E1	Temperature sensor failure of refrigerating chamber
E2	Temperature sensor failure of freezing chamber
E5	Freezing defrost sensor detection circuit error
E6	Communication error
E7	Ambient temperature sensor error

4. MAINTENANCE AND CARE OF THE APPLIANCE


4.1 Overall cleaning

 - Dust behind the refrigerator and on the ground should be cleaned regularly to avoid build up and to improve the cooling effect and energy saving.
- Check the door gasket regularly to make sure there is no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- The interior of the refrigerator should be cleaned regularly to avoid odour.
- Please turn off the power before cleaning interior, remove all foods, drinks, shelves, drawers, etc.
- Use a soft cloth or sponge to clean the inside of the refrigerator, with two tablespoons of baking soda and a basin of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.
- For areas that are difficult to clean in the refrigerator (such as narrow gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin kebab sticks) to ensure no contaminants or bacterial accumulation in these areas.
- Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odours in the interior of the refrigerator or contaminated food.
- Clean the bottle frame, shelves and drawers with a soft cloth dampened with soapy water or diluted detergent. Dry with a soft cloth or dry naturally.
- Wipe the outer surface of the refrigerator with a soft cloth dampened with soapy water, etc., and then wipe dry.

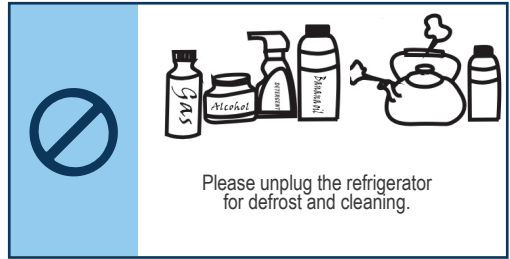

4.2 Cleaning of door tray

 - According to the direction arrow in the figure below, use both hands to squeeze the tray, and push it upward, then you can take it out.

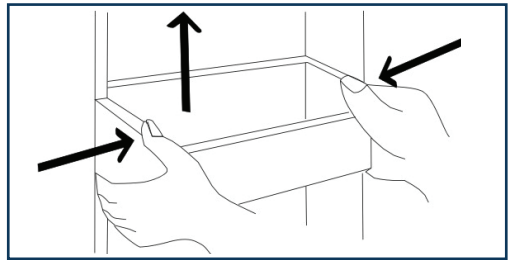

(The picture above is only for reference. The actual configuration will depend on the physical product supplied)

4. MAINTENANCE AND CARE OF THE APPLIANCE

4.3 Cleaning of Glass shelf

- Raise the shelves upward to remove the glass shelf for cleaning.

- Adjust or clean the shelves according to your requirement.

Soft towels or sponges dipped in water and non-corrosive neutral detergents are suggested for cleaning. The freezer should be cleaned with clean water and dry cloth. Open the door for natural drying before the power is turned on.

 
Do not use hard brushes, steel balls, wire brushes, abrasives, such as toothpaste, organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items to clean refrigerator as this may damage the fridge surface and interior.

4.4 Defrosting

- The refrigerator has an automatic defrosting function. Frost formed due to change of season or temperature may also be manually removed by disconnecting the appliance from the power supply or by wiping with a dry towel.

4.5 Out of operation

- Power failure: In case of power failure, even if it is in summer, foods inside the appliance can be kept for several hours; during the power failure, the times of door opening shall be reduced, and no more fresh food shall be put into the appliance.
- Long-time nonuse: The appliance shall be unplugged and then cleaned; then the doors left open to prevent odor.
- Moving: Before the refrigerator is moved, take all objects inside out, fix the glass partitions, vegetable holder, freezing chamber drawers and etc. with tape, and tighten the leveling feet; close the doors and fix them with tape. During moving, the appliance shall not be laid upside down or horizontally or be vibrated; the inclination during movement shall be no more than 45°.

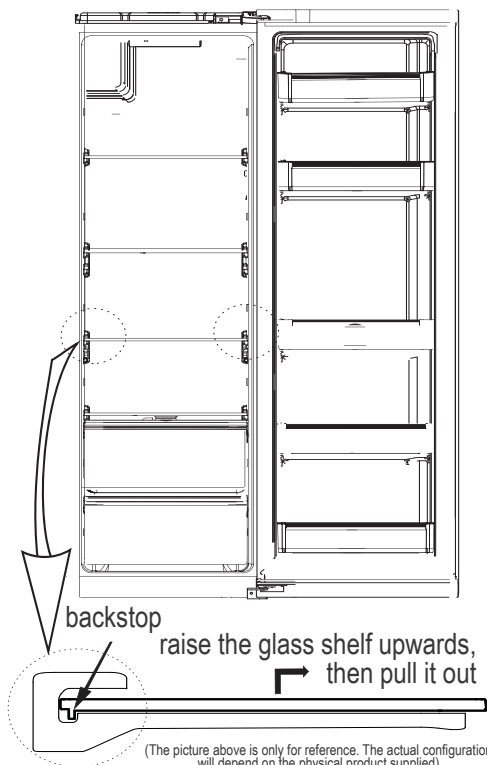

 The appliance shall run continuously once it is started. Generally, the operation of the appliance shall not be interrupted; otherwise, the service life may be impaired.

5. TROUBLESHOOTING

You may try to solve the following simple problems by yourself.

If they cannot be solved, please contact the after-sales department.

Failed operation

- Check whether the appliance is connected to power or whether the plug is fully inserted.
- Check whether the voltage is too low
- Check whether there is a power failure or partial circuits have tripped

Odour

- Odorous foods shall be tightly wrapped
- Check whether there is any rotten food
- Clean the inside of the refrigerator

Long-time operation of the compressor

- Long operation of the refrigerator is normal in summer when the ambient temperature is high
- Having too much food in the appliance at the same time
- Food is not cooled before being put into the appliance
- The doors are opened too frequently

Light fails to get lit

- Check whether the refrigerator is connected to power supply and whether the illuminating light is damaged
- Have the light replaced

Doors cannot be properly closed

- The door is stuck by food packages. Too much food is placed the refrigerator is tilted

Loud Noise

- Check whether the floor is level and whether the refrigerator is placed stably
- Check whether accessories are placed at proper locations

Door seal fails to be tight

- Remove foreign matters on the door seal
- Heat the door seal and then cool it for restoration using a hair drier

Water pan overflows

- There is too much food in the chamber or food stored contains too much water, resulting in heavy defrosting
- The doors are not closed properly, resulting in frosting due to entry of air and increased water due to defrosting

Hot housing

- Heat dissipation of the built-in condenser via the housing, which is normal.
- When housing becomes hot due to high ambient temperature, storage of too much food or shutdown of the compressor is shut down. provide sound ventilation to facilitate heat dissipation

Surface condensation

- Condensation on the exterior surface and door seals of the refrigerator is normal when the ambient humidity is too high. Just wipe the condensate with a clean towel

Abnormal noise

- Buzz: The compressor may produce buzzes during operation and the buzzer are loud particularly upon start or stop. This is normal
- Gurgling noises: Refrigerant flowing inside of the appliance may produce this noise, which is normal

5. TROUBLESHOOTING

Table
Climate e classes

Class	Symbol	Ambient temperature range °C
Extended temperate	SN	+ 10 to + 32
Temperate	N	+ 16 to + 32
Subtropical	ST	+ 16 to + 38
Tropical	T	+ 16 to + 43

- Extended temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C'.
- Temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C'.
- Subtropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C'.
- Tropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C'.

Special for new European standard:

The ordered parts in the following table can be acquired from channel _:

Ordered Part	Provided by	Minimum Time Required for Provision
thermostats	www.powerpointappliances.ie	At least 7 years after the last model is launched on the market
temperature sensors	www.powerpointappliances.ie	At least 7 years after the last model is launched on the market
printed circuit boards	www.powerpointappliances.ie	At least 7 years after the last model is launched on the market
light sources	www.powerpointappliances.ie	At least 7 years after the last model is launched on the market
door handles	www.powerpointappliances.ie	At least 7 years after the last model is launched on the market
door hinges	www.powerpointappliances.ie	At least 7 years after the last model is launched on the market
trays	www.powerpointappliances.ie	At least 7 years after the last model is launched on the market
baskets	www.powerpointappliances.ie	At least 7 years after the last model is launched on the market
door gaskets	www.powerpointappliances.ie	At least 7 years after the last model is launched on the market

- The shortest period for providing after-sales spare parts is 15 working days.
- The model information and model identification in the product database can be obtained by scanning the web link on the QR code (if any) on the product energy efficiency label.

6. WARRANTY

6.1 Registering Your 2 Year Guarantee

Your standard one year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Powerpoint Appliances. If you do not register the product with Shomar Ltd within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us on

<https://www.powerpointappliances.ie/pages/guarantee>

Please note that the 2 year guarantee is only available in Ireland and the UK.

6.2 One Year Guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the model and serial number of the product when contacting Powerpoint appliances.

Subject to the exclusions set out below (see Exclusions), a faulty appliance will be repaired or replaced. If for any reason, this item is replaced during the guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied.

6.3 Exclusions

Powerpoint Appliances shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1) The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2) The appliance has been used on a voltage supply other than that stamped on the products.
- 3) Repairs have been attempted by persons other than our service staff.
- 4) The appliance has been used for hire purposes or non-domestic use.
- 5) The appliance is second hand.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. This guarantee is valid in Ireland and the UK only.

PowerPoint products are intended for household use only. See usage limitations in "safety instructions". Powerpoint Appliances has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

7. CONTACT DETAILS

The After Sales Division for PowerPoint Appliances is located at the offices of the
Brand owner and Distributor – Shomar Ltd,
Unit 9 Western Industrial Estate,
Dublin 12,
Republic Of Ireland.

Helplines (office hours) & Spare Parts contact number is
01-450 5327

or email
service@shomar.ie

or web
www.powerpointappliances.ie

PowerPoint