



UD1805 / UD1805PRO / UD1806 / UD1806PRO
1/18 UDISPORT DESERT RACING BUGGY

OPERATING INSTRUCTIONS

FULL PROPORTIONAL REMOTE CONTROL UDIRACING SERIES

V1.0



*This product is suitable for users over 14 years old.
Please read this instruction manual carefully before use.*

Important Notice

Our company's products are improving all the time, design and specifications are subject to change without notice. All the information in this manual has been carefully checked to ensure accuracy, if any printing errors, our company reserve the final interpretation right.



THANK YOU

- Thank you for choosing this product. The remote control model is designed to be fun to drive and uses high quality parts to improve durability and performance. The instruction manual you are reading is to make the product easier to understand and explain more thoroughly. We hope you enjoy this remote control model car. If you have any problems or need help, please call us and we will try our best to help you. You can also contact us through the following website: www.udirc.com.
- This is a radio control model product, not a toy! which needs regular maintenance to obtain the best performance. If you don't do regular maintenance, it can affect performance. We have all the necessary parts and accessories to ensure that your vehicle maintains its best performance.
- The warning or attention symbol will alert you to potentially dangerous steps. Please read and understand the instructions carefully before proceeding.



WARNING



ATTENTION

Failure to follow these instructions may result in injury to yourself or others. You may also cause property damage or model damage.



WARNING

 
- The model must stop immediately and check for the reasons when it is operating abnormal.
- Keep in mind that people around you may also operate a radio control model.
- The motor is a heating part, please do not touch it.
- If you don't use the model for a long time, please raise the chassis to let the wheels hang in the air.
- Please keep the package or instructions as they contain important information.



- The product contains small and sharp parts. Keep away from children.




- Be sure to read the instruction manual in detail, or ask for the person with experience in operation, and read with the guardian if necessary.

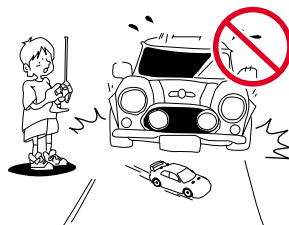


- DO NOT operate in public streets or crowded places to avoid accidents.



 - Cutters, nippers and screwdrivers need careful handling.

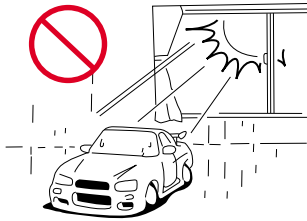

 - DO NOT put the model in high temperature, humidity and direct sunlight.

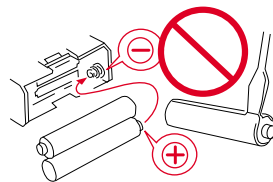

- Please don't reverse contact or disassemble the battery, as this way will cause the battery to explode.



WARNING

Before Operation

- Read the instruction manual in detail, or ask for the person with experience in operation, and read with the guardian if necessary.
- Make sure all screws and nuts are properly tightened.
- The remote control and the vehicle should always use the battery with saturated power to avoid losing control of the model.
- Please make sure that the throttle trigger is in the center position.

During Operation

- First turn on the power of the remote control, and then turn on the power of the model.
- Use this product only in open areas (>4x4m) without pedestrians.
- DO NOT put fingers or any objects inside rotating and moving parts.

After Operation

- First turn off the model power, then turn off the remote control power. And take out the battery.
- Daily maintenance is required after the model is used.



Battery
safety

- Please read and observe all precautions before use. Improper use of battery may cause danger.
- It is normal for the battery to heat up after operation. Please be careful when handling the battery. If the wire is worn, it is easy to short circuit and cause fire.
- Wasted li-ion battery must not be placed with household trash. please contact local environmental or waste agency or the supplier of your model or your nearest li-ion battery recycling center.

- 1) After use, please disconnect the power supply and pull out the plug;
- 2) Remove the battery from the model before charging;
- 3) DO NOT charge the battery when it is bulging or expanding;
- 4) Keep away from damp, corrosive environment and heat source;
- 5) Please charge the battery under adult supervision;
- 6) Pay attention to the polarity of the battery when installing or replacing the battery;
- 7) Different types of batteries or old and new batteries should not be mixed;
- 8) DO NOT short circuit any terminals;
- 9) DO NOT short circuit, decompose or put the battery into fire;
- 10) Please use the attached special charger to charge the battery.

WARNING

Warning: The product should only be used by adults and children over 14 years.

Adult supervision is required for children under 14 years.

Hinweis: Dieses Produkt ist für die Erwachsene und die Kinder ab 14 Jahren.

Die Kinder unter 14 Jahren müssen von Erwachsenen beaufsichtigt werden.

Avertissement: Ce produit est destiné aux adultes et aux enfants de plus de 14 ans.

Les enfants de moins de 14 ans doivent être surveillés par des adultes.

Avvertimento: Questo prodotto è destinato all'uso per i adulti e bambini di età superiore ai 14 anni.

I bambini di età inferiore ai 14 anni devono essere sorvegliati da un adulto.

Advertencia: Este producto es para adultos y niños mayores de 14 años.

Los niños menores de 14 años deben ser supervisados por adultos.

警告: この製品は、大人と14歳以上の子供には使用対象です。

14歳未満の子供は大人の監視が必要です。

اماع 14 نس قوف لافطال او ني غلابل لبق نم طقف جتنملا مادختسا بجي ريذحت

اماع 14 نس نود لافطال بولطم رابلكا فارشا



DANGER!

 
Only suitable
for age 14+

Product maintenance


When not in use, remove the battery from the model and transmitter.




Please remove the sediment and dirt on the car completely and must be kept dry after play.

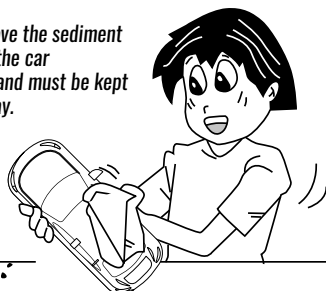

 Apply lubricating oil to external metal parts.

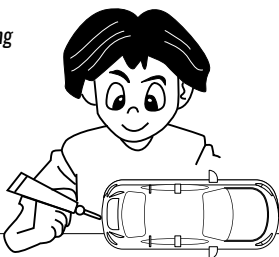

 
Please separate the car and battery when not in use.



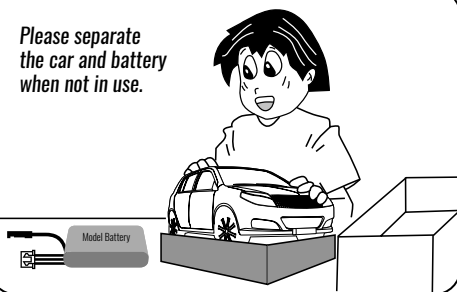


Troubleshooting

Cause	Solution
Remote control car doesn't work	When the battery is low, charger it in time or replace it with new battery.
	Please make sure the wheel or drive shaft is entangled by debris and remove it.
	The motor may have reached the expiration date, replace with the same motor.
	Please keep the car within effective control distance.
	When the battery of the transmitter is low battery, please replace it in time.
	Check whether all parts of the model car are damaged and replace them.
	High temperature protection is triggered when the ESC's temperature is too high, Please pause for 10 minutes before using.
Long frequency matching time	The signal is disturbed, restart the car and the transmitter.
Operation delay	Please make sure there are obstacles or interferences.
The vehicle moves forward (backward) automatically or makes a sound of "en...."	Restart the transmitter
The indicator of the transmitter is not bright	Please make sure the battery is installed correctly or replace it with a new one.
	If the transmitter doesn't work, please replace it with a new one.
The steering of the model car has no force or function	Increase the percentage of steering.
	Please make sure the steering is it include the sundries or some parts damaged.

    
Model Car Summary

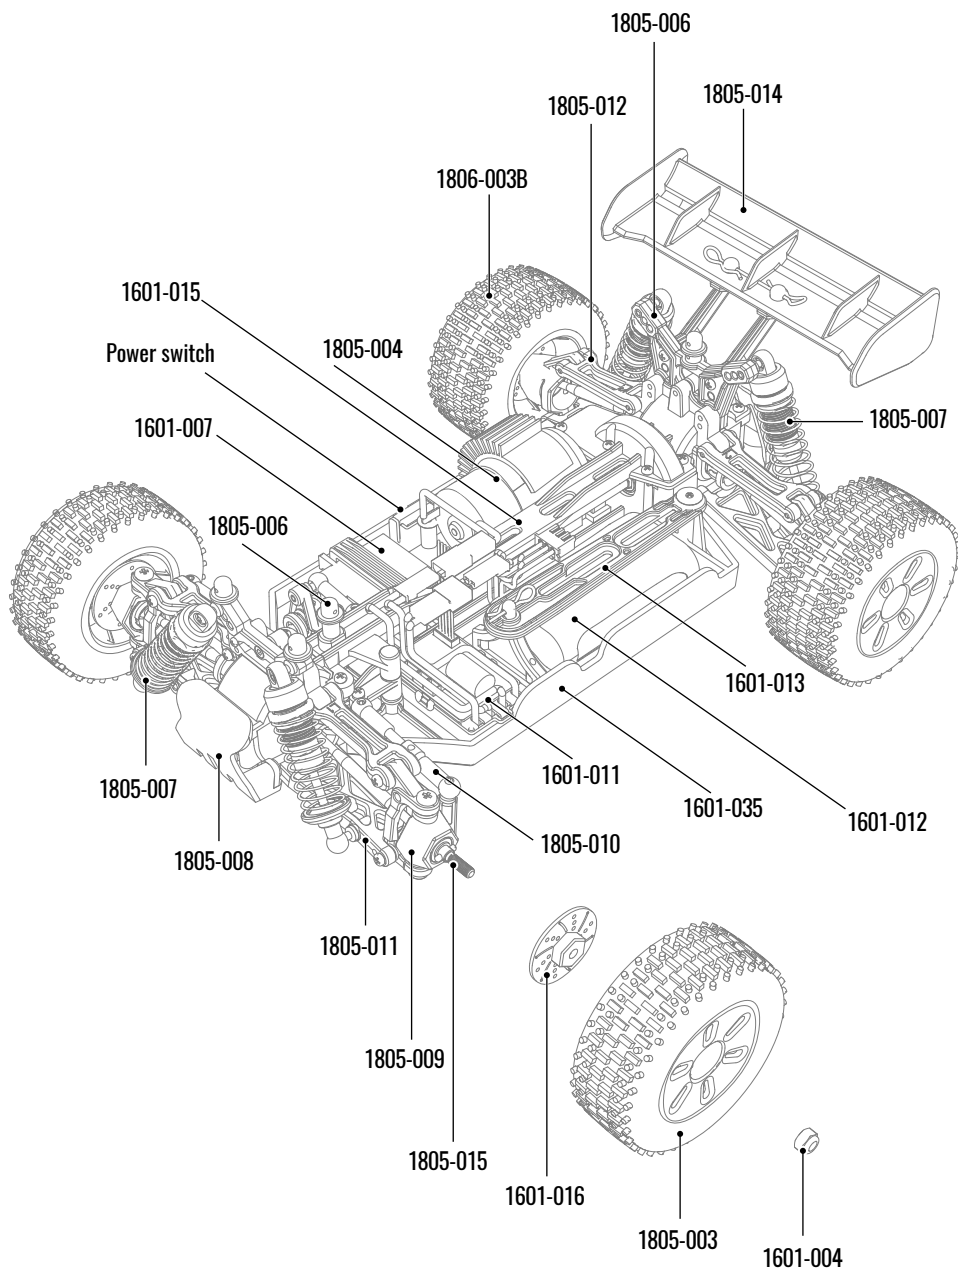

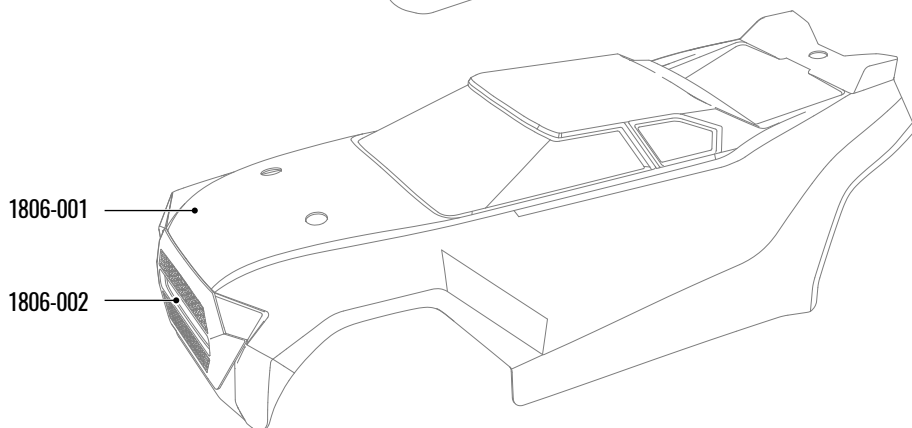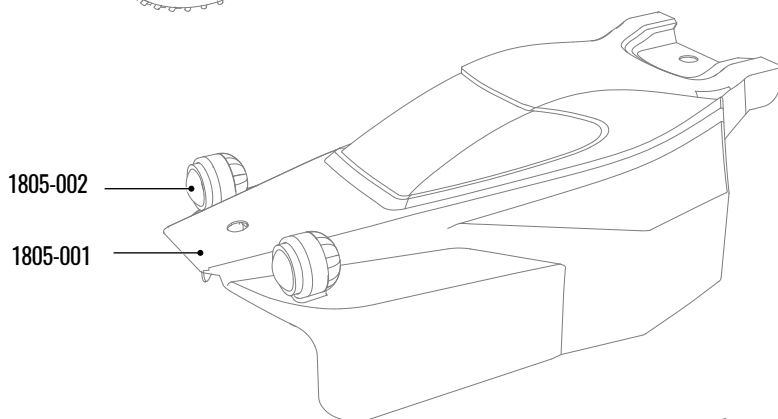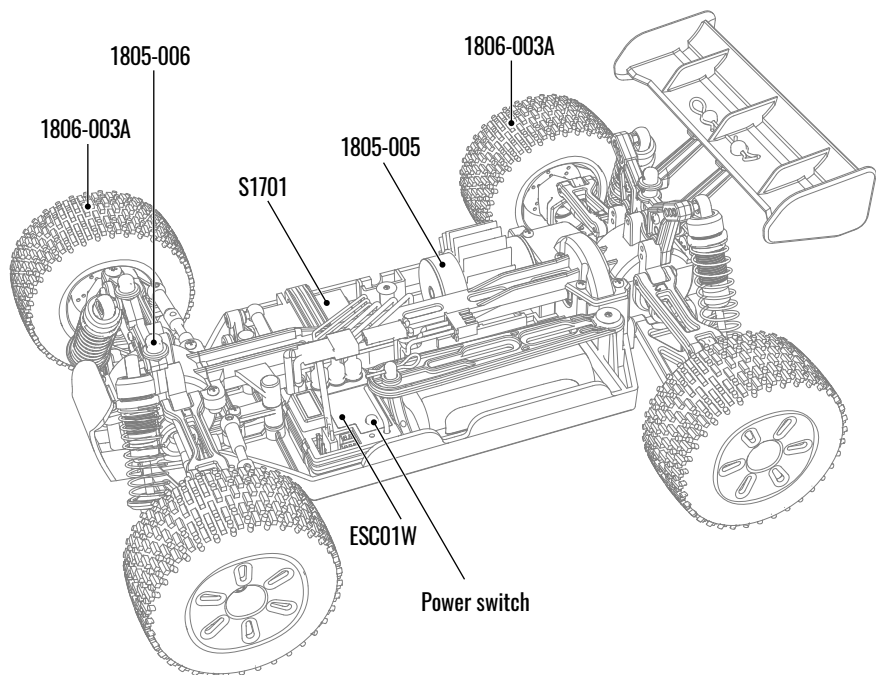


Electronic speed controller

 
1601-011

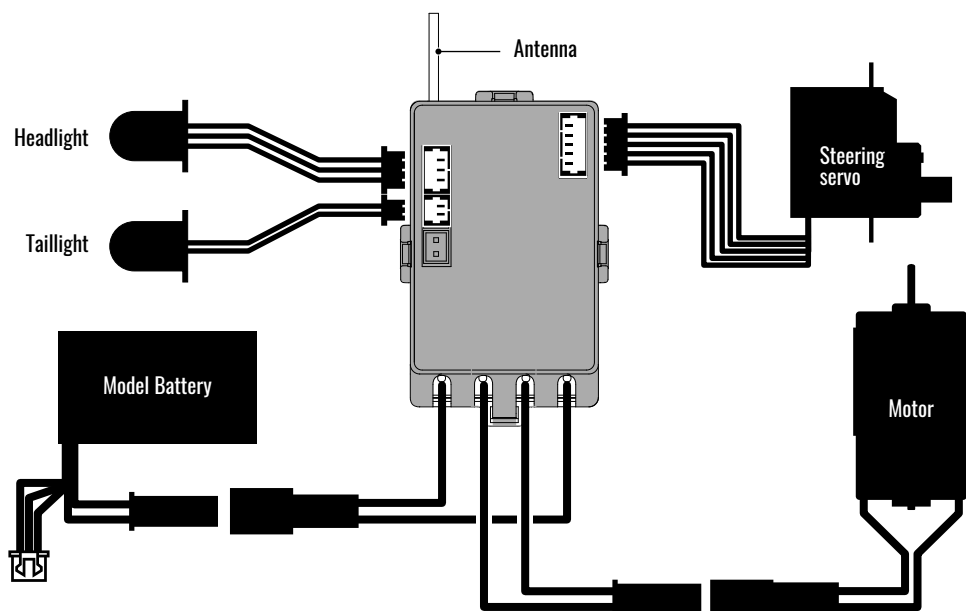

ESC01W


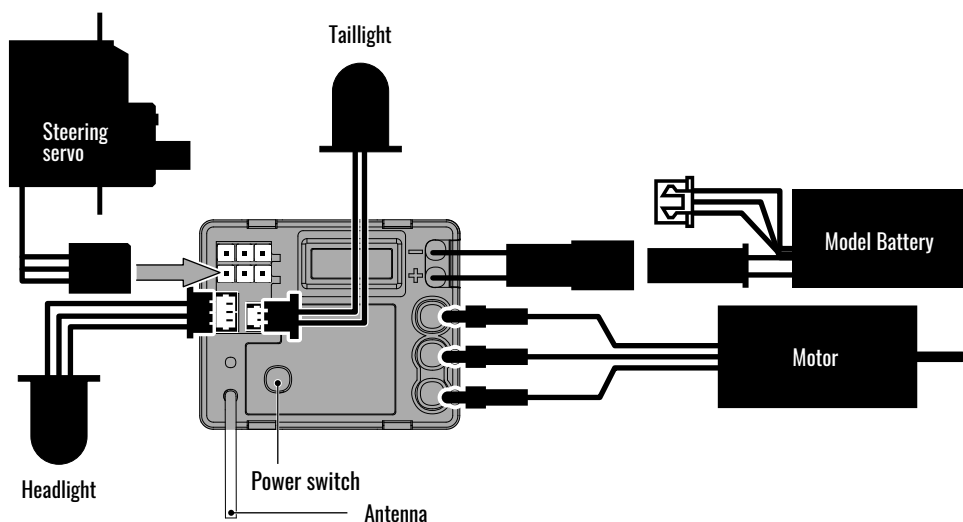 


Preparation of transmitter

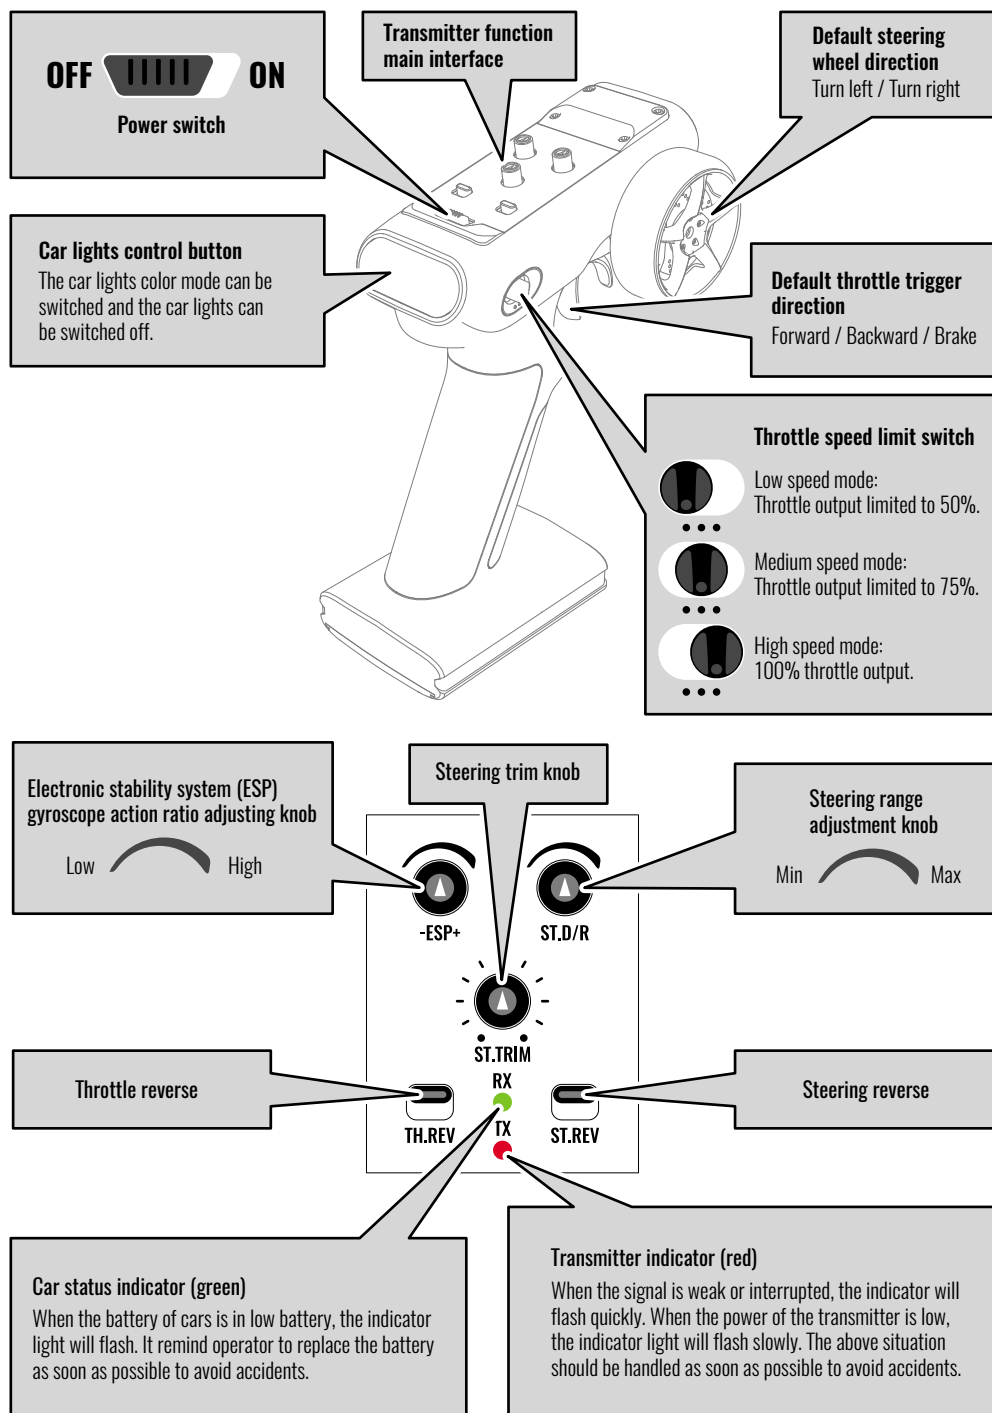 



Adjustment of gyroscope action ratio

  This product has the function of ESP car stability system, which can effectively correct the car attitude and direction when the car skids or loses control. The function and sensitivity of the car gyroscope sensor can be adjusted through the ESP knob of the transmitter.

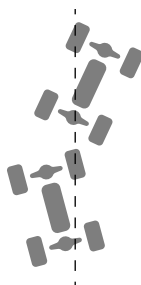


Steering range adjustment

  The steering range adjustment knob can be used to adjust the left and right steering angle of the car.

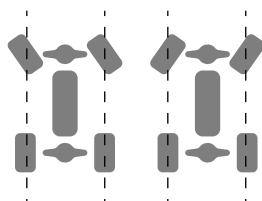

Steering trim

 
When the steering wheel is in the center position, if the car can not drive in a straight line, please use the steering trim knob to adjust and correct the left and right directions of the front wheels.



When the front wheel is left, the knob rotates to the right.




 When the front wheel is right, the knob rotates to the left.



- 1) There is no ESP function when the remote control car retreats.
- 2) When the remote control car is moving forward, it is necessary to pull the throttle trigger backward to reach more than 30% of the stroke before the gyroscope starts to work.
- 3) With the increase of car speed, the gyroscope action ratio also increases synchronously.

 Assembly of the transmitter battery

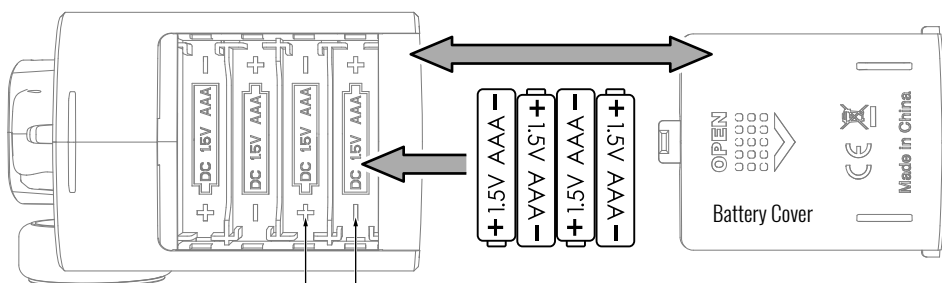


! Note Direction. 1.5V×4 AAA Batteries(not included)

Open battery cover at the bottom of transmitter. Install batteries.
Follow the direction of batteries designated in the inside of the battery box.

Model Battery charging

The battery contains less power when leaving the factory, so it must be charged and saturated before use.

 
Connect the attached charger with the model battery charging input port, and then connect other USB output ports. When charging, the charging indicator is flashing, and the indicator is always on after charging. Do not put the battery in the model when charging. The battery must be cooled before charging.

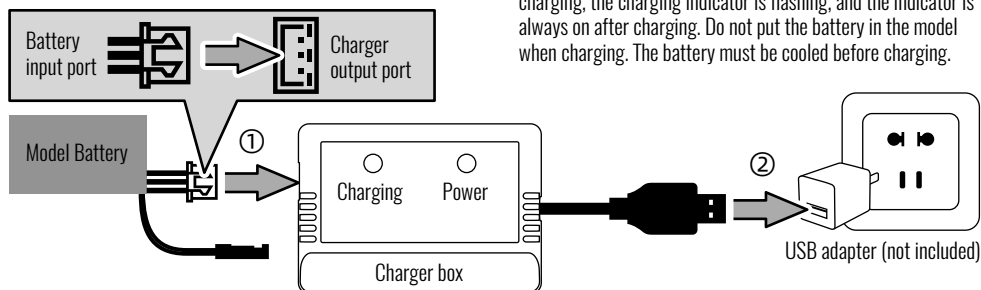


Warning: someone must be watching while charging.

Please use the charging box provided with the product and make sure it is connected properly.

  Assembly of model battery



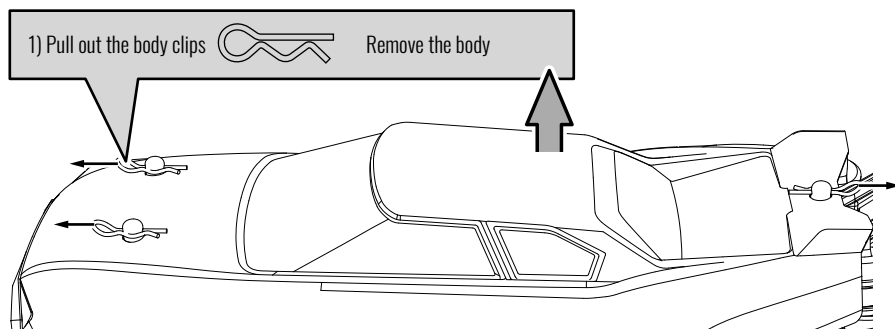


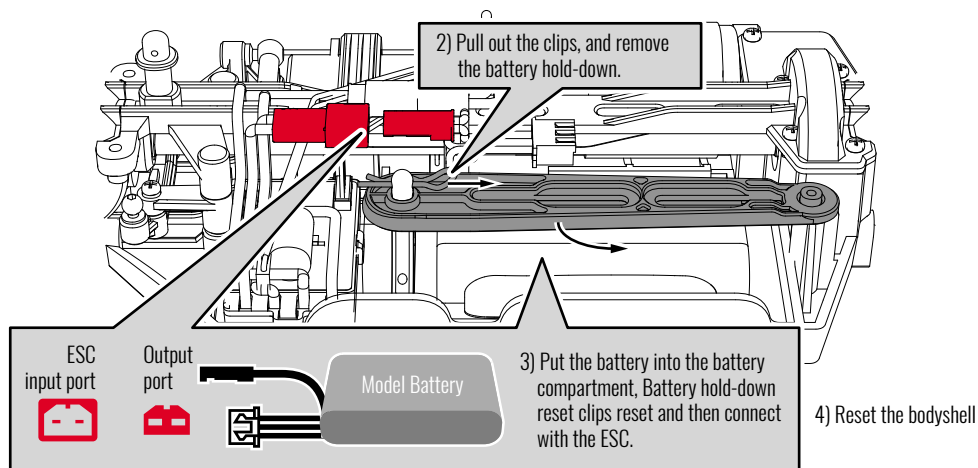



Operational guidance

1>

   Frequency matching

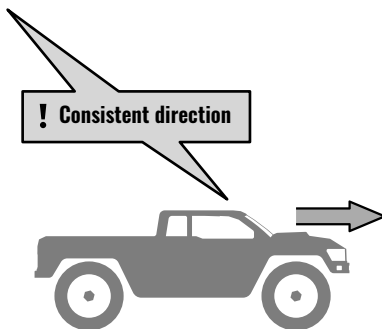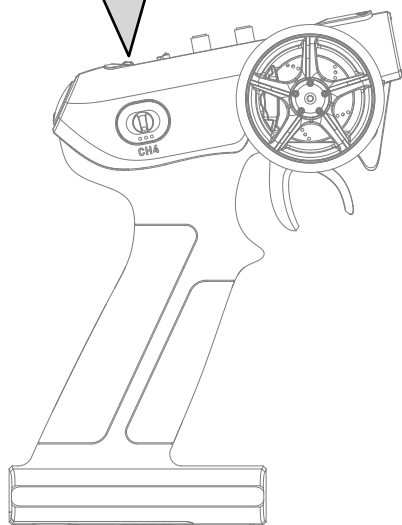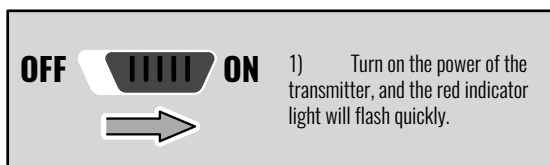


Place the model on level ground

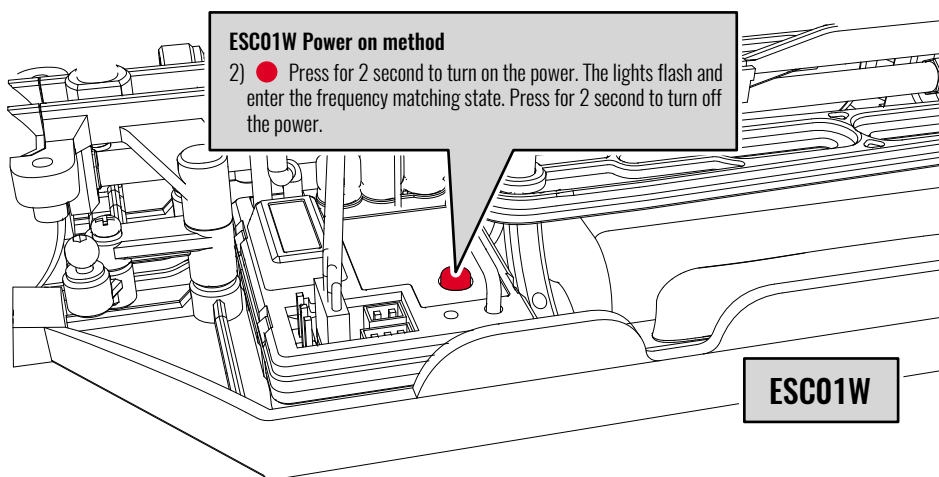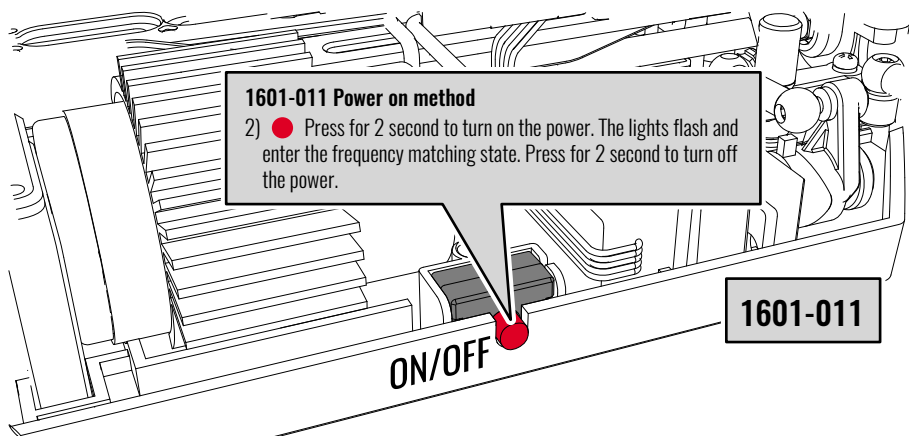  


After the car power is turned on, the transmitter and the car will carry out automatic frequency matching. When the indicator light of the transmitter and the car lights are always on, the frequency matching is successful. In the process of frequency matching, the car lights will flash rapidly. At this time, the gyroscope is being calibrated automatically. Please place the car on the level ground to complete this operation. After calibration, the car lights return to normal.

2>

 
Manipulation method

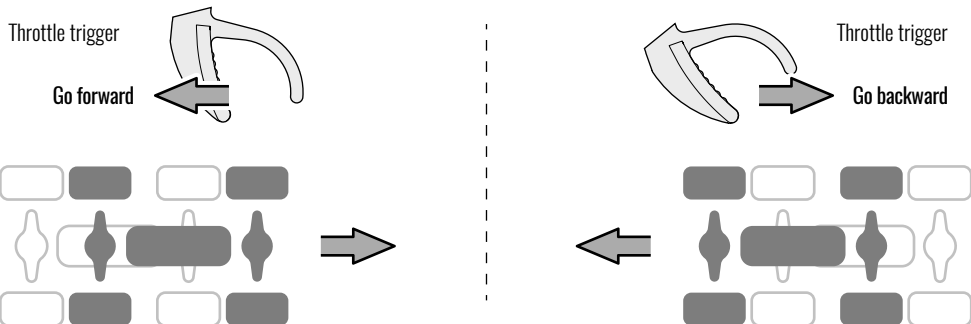


Steering wheel

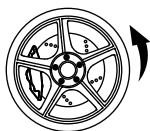 


Turn left

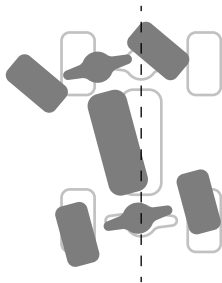 

Steering wheel

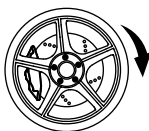 


Turn right

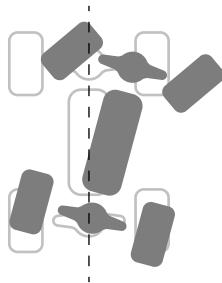 

Turn left and move forward

 
Throttle trigger

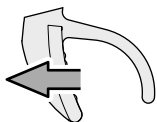


Go forward

+

 Steering wheel

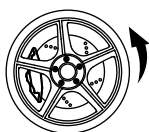


Turn left

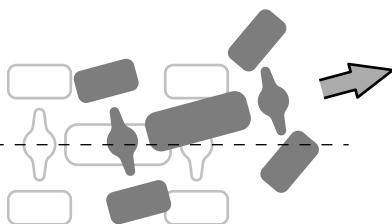 

Turn right and move forward

 
Throttle trigger

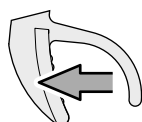


Go forward

+

 Steering wheel

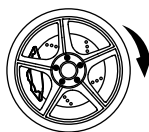


Turn right

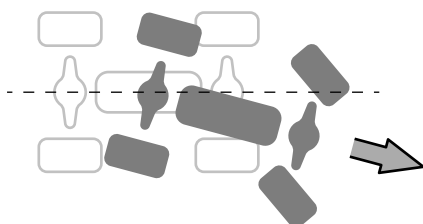 

Turn left and move backward

 
Throttle trigger




Go backward

+

 Steering wheel

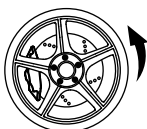


Turn left

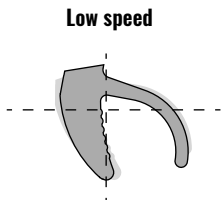 

Pull the throttle trigger back gently and the car will move forward slowly.

 
High speed

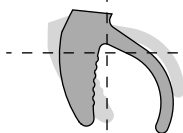

The throttle trigger is pulled to the maximum, and the car moves forward quickly.

Turn right and move backward

 
Throttle trigger




Go backward

+

 Steering wheel

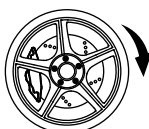

Turn right

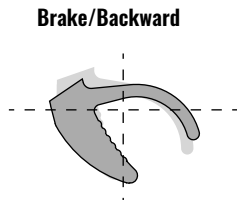 


When the car is moving forward, the throttle trigger is pushed forward and the car stops moving. After the throttle trigger returns to the middle position, it pushes forward again, and the car moves backward.

Parts exploded view

Installation of wheels





 Hexagon nut wrench

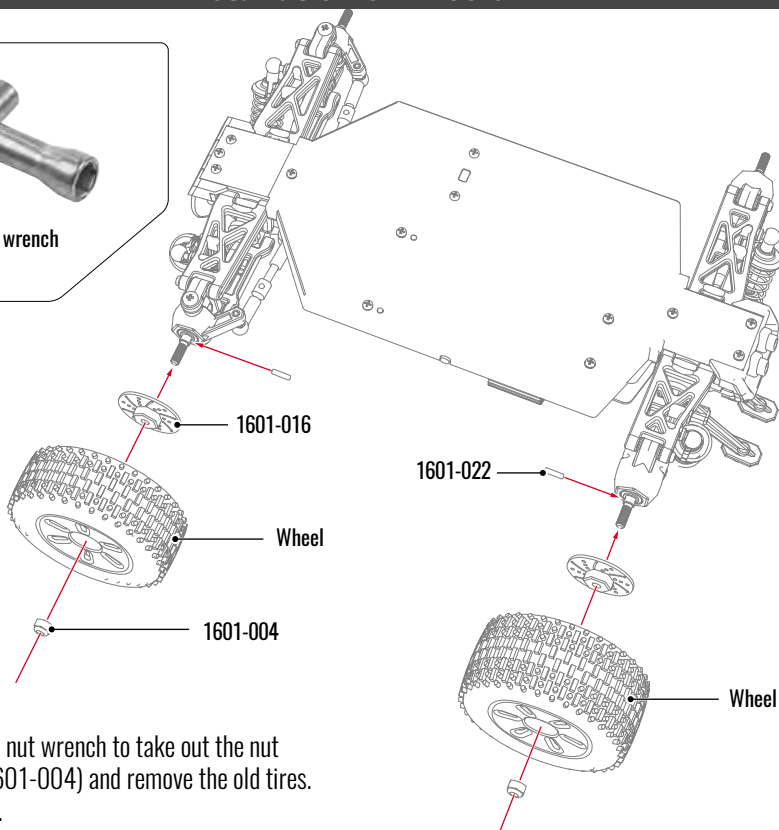


Use the hexagon nut wrench to take out the nut fixing the tire(1601-004) and remove the old tires. Put on new tires.

  
Front and rear shock absorbers

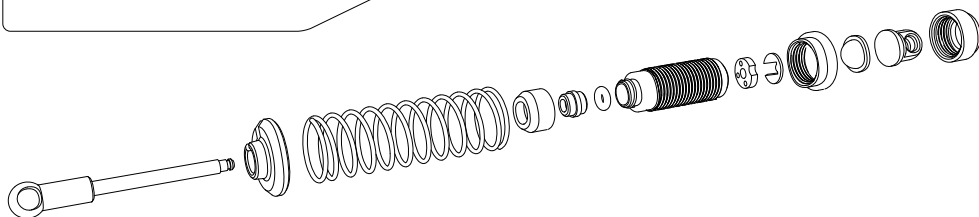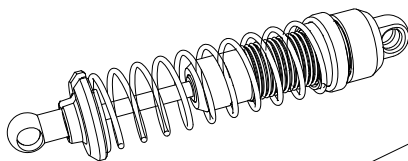


Assembly of front suspension arm

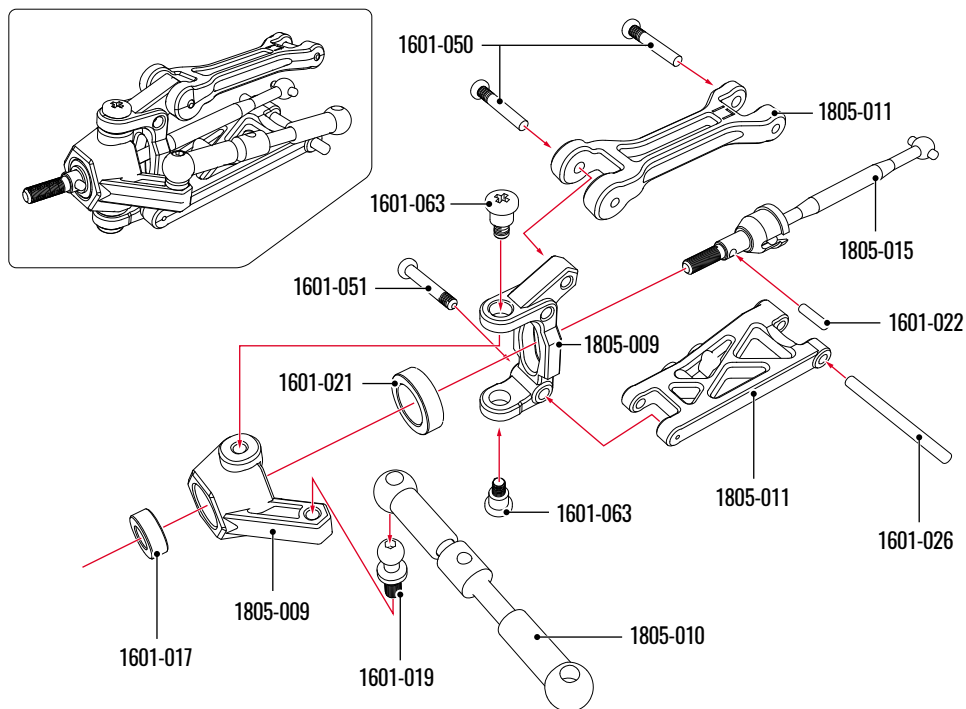 


Assembly of rear suspension arm

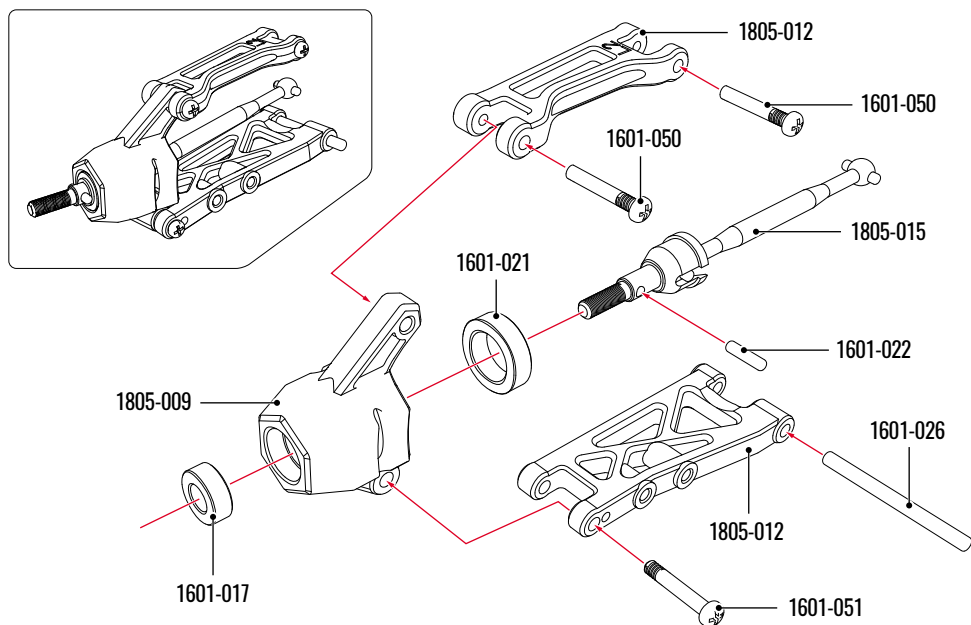 


Assembly of front bumper

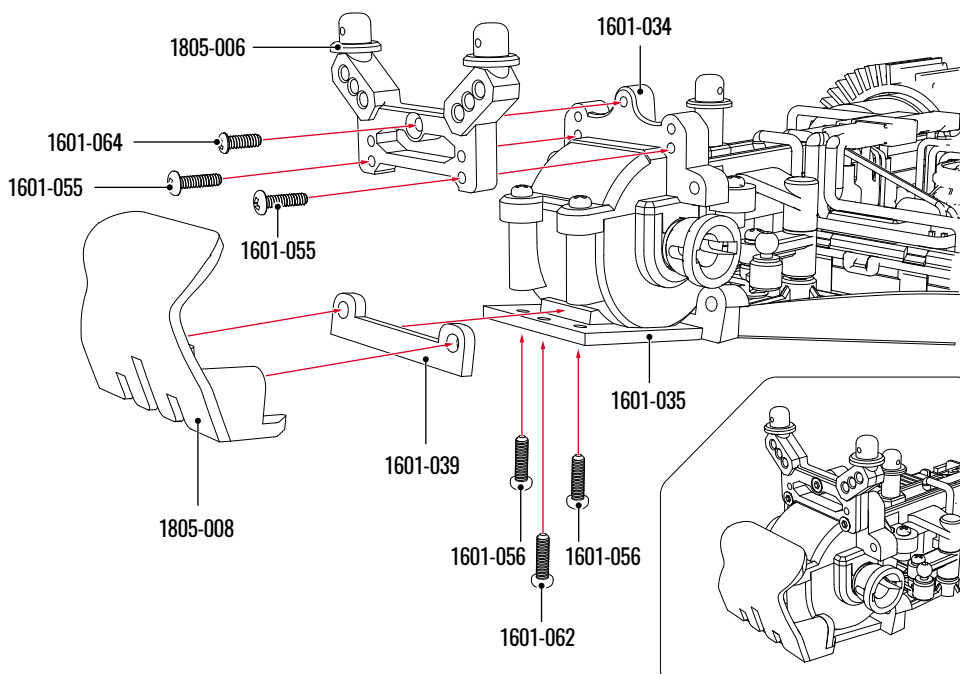 


Assembly of rear bumper

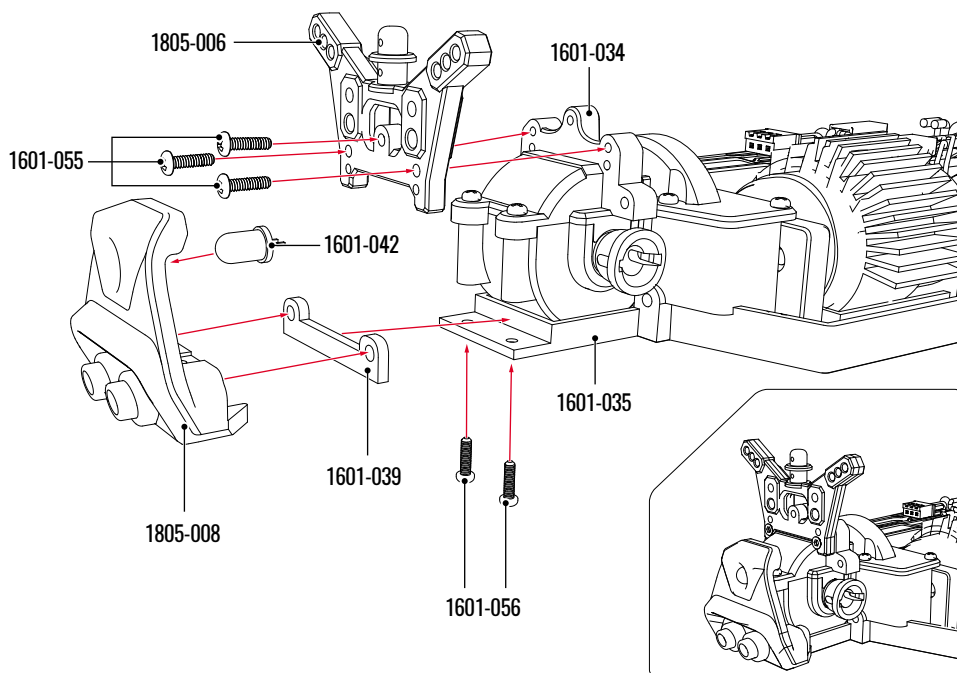 


Assembly of steering servo

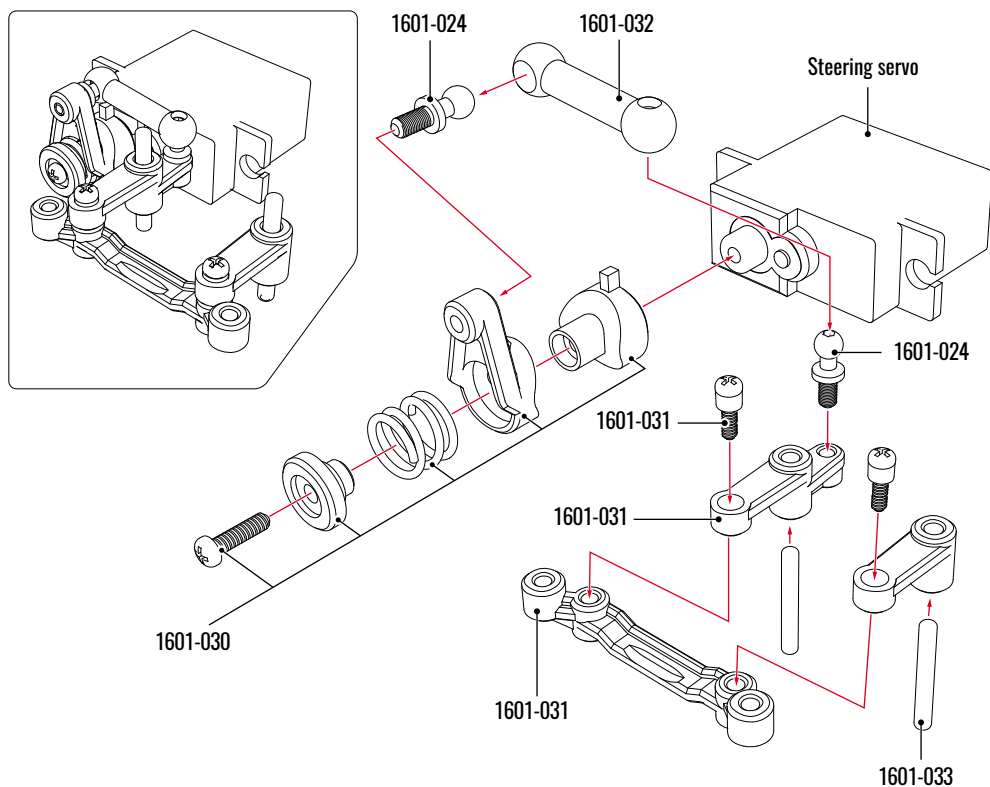 


Assembly of front(rear) differentials

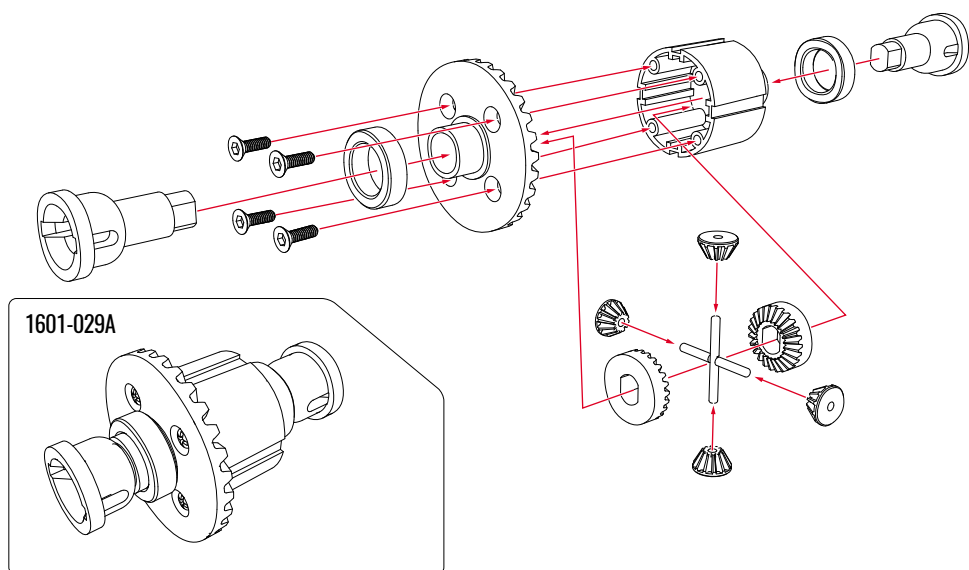 


Rear soplir

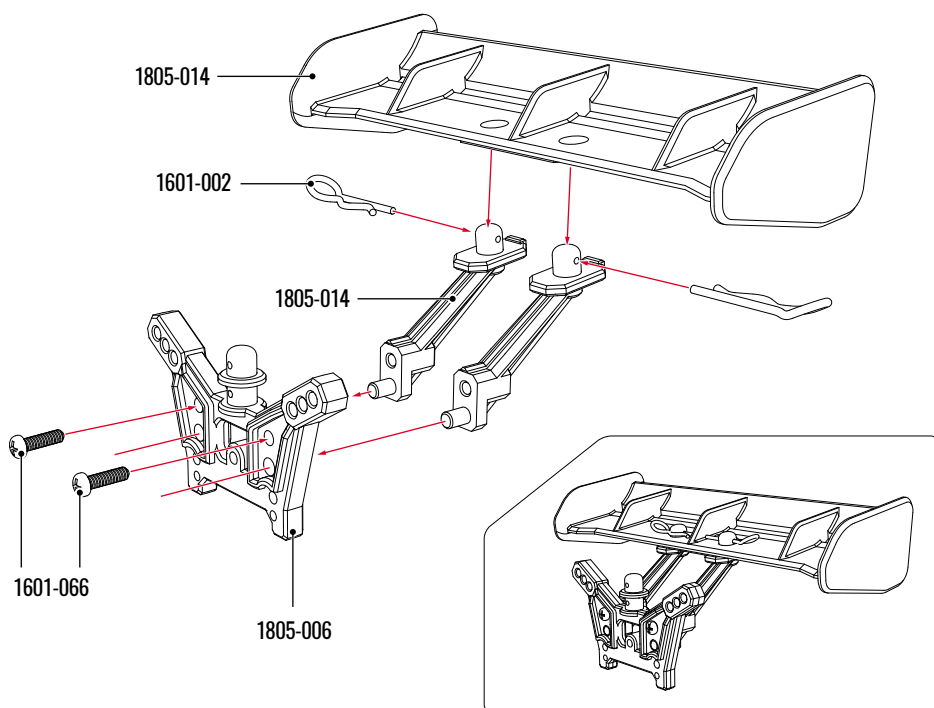 


Upper chassis

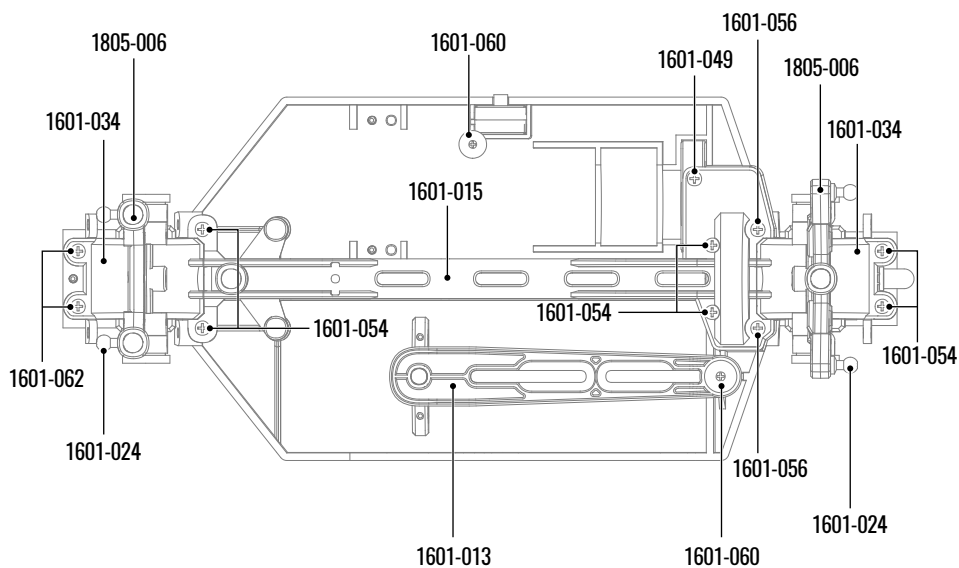 



Main propeller shaft system

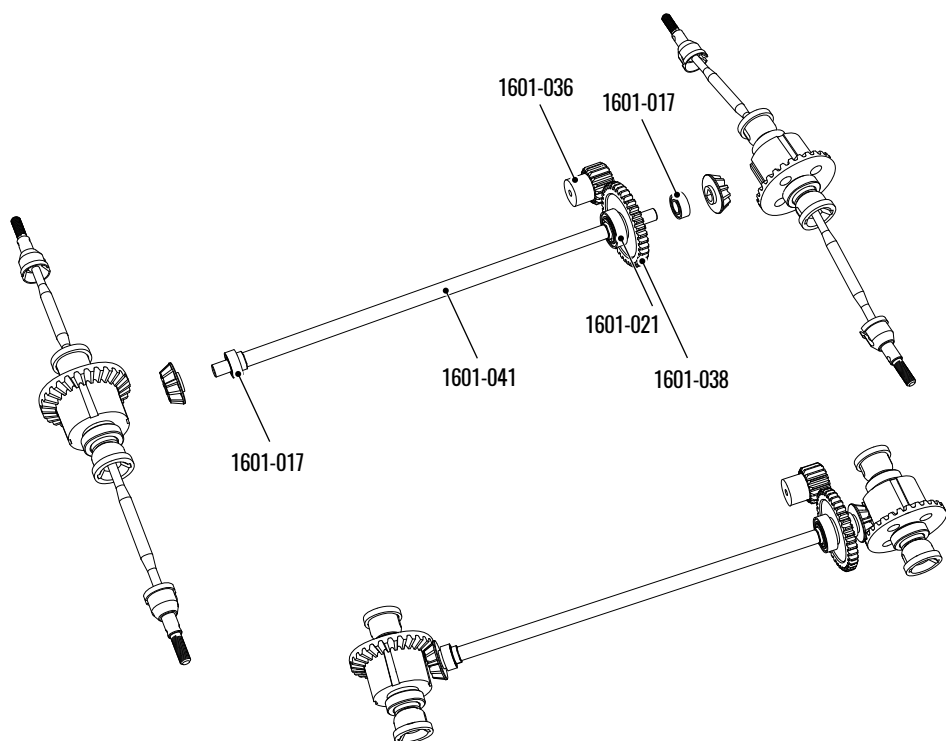 

Assembly of chassis

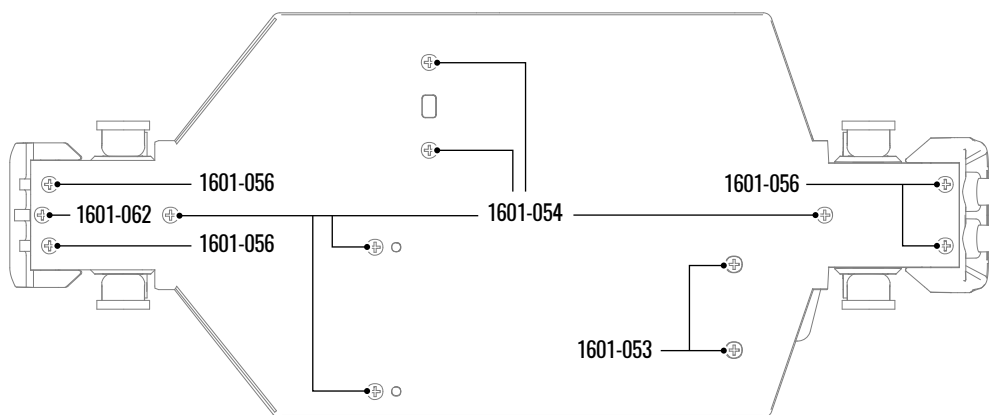 

Buyable accessories

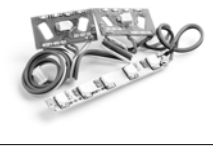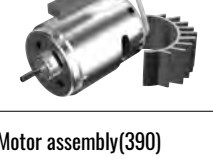  
1805-001  Body assembly	1806-001  Body assembly	1601-002  Body clips × 4	1805-002  Headlight group(UD1805)
1806-002  Headlight group(UD1806)	1805-003  Wheel × 2	1806-003A  Wheel × 2	1806-003B  Wheel × 2
1805-004  Motor assembly(390)	1805-005  Motor assembly(Brushless)	1601-007  Steering servo(390 Motor)	S1701  Steering servo(Brushless)
1805-006  Front & Rear shock tower assembly	1805-007  Front & Rear shock absorber	1805-008  Front & Rear bumper assembly	1601-011  Electronic speed controller (390 Motor)
ESC01W  Electronic speed controller (Brushless)	1601-012  Model battery	1601-013  Battery hold-down	1601-015  Upper chassis

1601-016 	1805-009 	1805-010 	1805-011 
Wheel adapters × 4	Front & Rear wheel carriers assembly	Adjustable steering linkage	Suspension arms (front)
1805-015 	1805-012 	1601-029A 	1601-030 
Driveshaft assembly × 2	Suspension arms (rear)	Differential assembly	Servo saver
1601-031 	1601-032 	1601-034 	1601-035 
Steering bellcrank	Rudder connecting rod	Differential housing	Chassis
1601-036 	1601-037A 	1601-037B 	1601-038 
Motor gear	Motor mounts(390 Motor)	Motor mounts(Brushless)	Main spur gear
1601-039 	1601-041 	1601-042 	1601-043 
Bulkhead tie bars	Main driveshaft ø5.5×149mm	Taillight group	Charger



Transmitter

 
Rear sopliler assembly

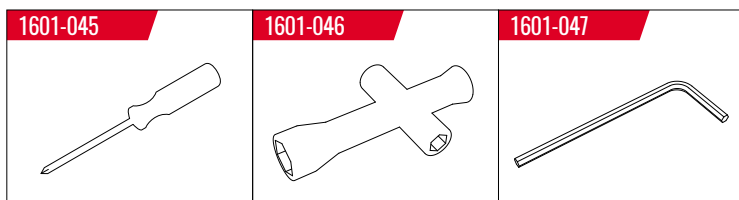

Cross screwdriver

Hexagon nut wrench
2-4mm

 Hex wrench

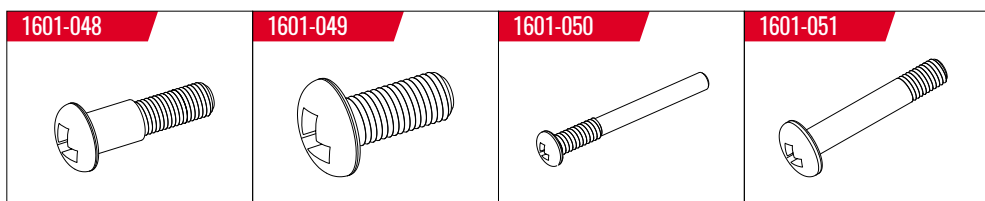


Ø2.5×11.8mm PM
Shoulder screws ×8

Ø2.5×5mm PM
Screws ×8

Ø2×13mm PM
Screw pin set ×8

 Ø2.5×16.5mm PM
Screw pin set ×8

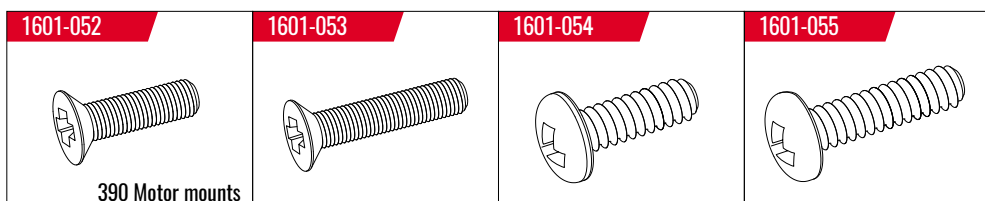


390 Motor mounts

Ø2.5×8.5mm KM
Screws ×8

Ø2.5×11.5mm KM
Screws ×8

Ø2.3×8mm PB
Screws ×8

 Ø2×10mm PB
Screws ×8




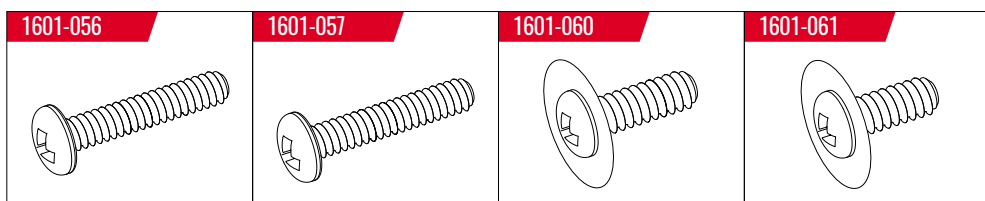


Ø2.3×14mm PB
Screws ×8

Ø2.5×15mm PB
Screws ×8

Ø2.3×8×Ø8mm PB
Screws ×8

    Ø2.3×5×Ø7mm PB
Screws ×8


1601-062 	1601-063 	1601-064 	1601-065  Brushless motor mounts
--	---	---	---

Ø2.3×6mm PB
Screws ×8




Ø4×6.6mm PM
Shoulder screws ×8

Ø2×8mm PB
Screws ×8

 Ø3×8mm KM
Screws ×8

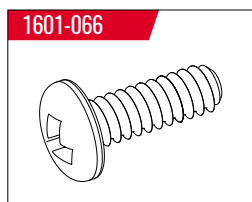





Ø2.6×8mm PB
Screws ×8

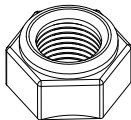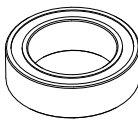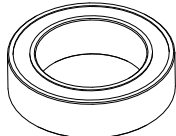   1601-004 	1601-017 	1601-021 
---	--	--

Hex flanged nylon
insert lock nut ×4
M3

Ø8×Ø4×3mm
Ball bearing ×4

    Ø12×Ø8×3.5mm
Ball bearing ×4

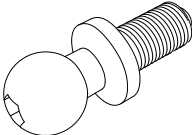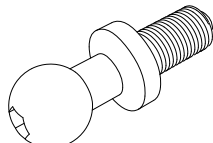
1601-019 	1601-024 	1601-022 	1601-026 
--	---	---	--

Ø2.5×10mm
Pivot balls ×4

Ø2.5×12mm
Pivot balls ×4

Ø1.8×6.8mm
Pin ×4

 Ø2.5×32mm
Pin ×4

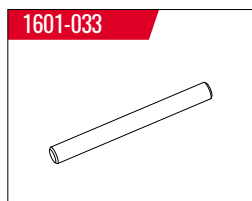

Ø2.5×21mm
Pin ×4

CAUTION: The above pictures and contents are for reference only and are subject to change without notice. Please subject to the parts actually sold.

FCC Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Notice

The equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. Modifications not authorized by the manufacturer may void user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition with out restriction.



Demo video



Operation guide
download



Manufacturer: UDIRC TECHNOLOGY CO., LTD

Address: Guangfeng Industrial Zone, Guangyi Street, Chenghai District, Shantou City, Guangdong Province, CN

MADE IN CHINA