
INSTRUCTIONS: ITEM# CL-WL70 | 7,000 LUMEN LED PORTABLE WORK LIGHT



WARNING:

You should always follow basic precautions.

Read, follow, and understand all instructions and warnings before beginning any installation of this product. Failure to do so can result in electric shock, fire, or other injuries, including death. Save this user manual for instructions and warnings for possible future relocation and installation.




CAUTION:

- This product is designed for dry use and is not waterproof. Never submerge this product in water.
- DO NOT use on radiant heated surfaces.
- DO NOT remove the lens protecting the LED.
- DO NOT use near a gas source.
- DO NOT open the product. It is NOT possible to change the LED lights or source.
- This product is not intended for use in possible explosive areas. It should never be in an area of exposure to vapor elements.
- This product is not a toy and should stay out of children's hands.

HARDWARE:

- A. Handle
- B. LEDs
- C. Protective Lens
- D. Tilt'able Light Face
- E. USB port (5V 2A)
- F. Side Knobs
- G. ON/OFF Switch
- H. Tangle Free Power Cord
- I. Support Frame
- J. Winding Pillars
- K. Base Knob
- L. Base Stand

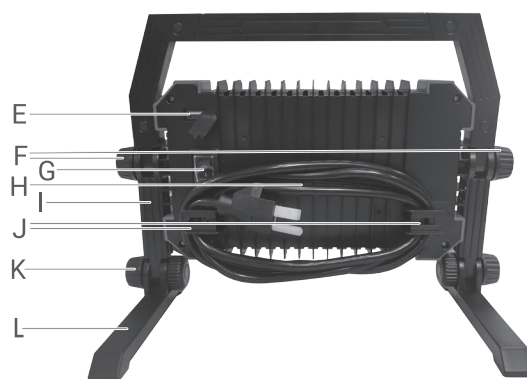



PG PINEGREEN LIGHTING

WARNING:

RISK OF ELECTRICAL SHOCK.
TO AVOID ELECTRICAL SHOCK, MAKE SURE TO TURN
OFF THE MAIN POWER SOURCE OR DISCONNECT POWER
DURING THE INSTALLATION OR SERVICE
OF THIS PRODUCT

INSTRUCTIONS: ITEM# CL-WL70 | 7,000 LUMEN LED PORTABLE WORK LIGHT

No assembly is needed. Simply open the foldable base stand. Turn the unit on, and turn the side knobs to adjust the light direction.

USAGE:

1. Loosen the Base Knobs (K) but do not unscrew completely.
2. Open up the Base Stands (L) and place on a solid surface.
3. Tilt the Support Frame (I) and Base Stands (L) to your desired angle.
4. Tighten the Base Knobs (K) to hold their place (do not over tighten).
5. Loosen the Side Knobs (F) but do not unscrew completely.
6. Tilt the Light Face (D), and to your desired angle.
7. Tighten the Side Knobs (F) to hold its place (do not over tighten).
8. Plug the Power Cord (H) into the unit.
9. Press the ON Switch (G) to turn the unit on.
10. To turn the unit off, press OFF Switch (G).
11. It is best to store the unit in a dry and cool place.
Avoid areas with standing water.



EYES:



- **DO NOT look directly at the LED lights.**
- **DO NOT remove the LED lights protective covering.**



CARE FOR YOUR PRODUCT:

This product has a **two-year warranty** from the date of purchase—this guarantees against failure due to factory defects, whether caused by materials or workmanship. The warranty is non-transferable and only pertains to the original purchaser. Proof of purchase is required for any repair or replacement, so please keep your proof of purchase receipt. This warranty does not cover normal wear and tear or damage due to misuse. Misuse of this product includes but is not limited to:

- Using outdoors in extreme weather conditions.
- Opening the product's housing.
- Any attempts to update, remodel or fix the unit yourself.

If you have questions or missing parts, please contact our customer care at 1-888-745-4837

