



29" IPS 21:9 ULTRAWIDE 75HZ GAMING MONITOR

(2560 x 1080)

KAMN29FUSA

SAFETY & WARNINGS

- Read all the instructions in this user guide prior to using the monitor.
- The panel of the monitor is fragile. Keep the foam underneath the monitor screen while assembling the stand.
- Unplug the monitor before cleaning it.
- Do not use cleaning alcohol, ammonia-based liquids, or other harsh cleaners to clean the monitor.
- This monitor is designed with ventilation holes on the back of the casing. To prevent overheating, do not cover or block these holes.
- Do not insert any object or spray any liquid into the vents.
- Avoid placing the monitor near heaters, stoves, fireplaces, or other sources of heat.
- Do not place the monitor in areas lacking adequate ventilation.
- To avoid potential self-harm, and damage to the monitor, do not position the monitor on an unstable surface.
- Unplug the monitor if it is expected to not be used for an extended period of time.
- Do not place heavy objects on the monitor, its power cord, or any of the connected cables.
- Do not open the back panel of the monitor as it contains a high-voltage current even when unplugged.
- VESA mount and mounting accessories are not included.

 


The terms HDMI and HDMI High-Definition Multimedia Interface and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.


COMPONENTS




A Monitor (x1)

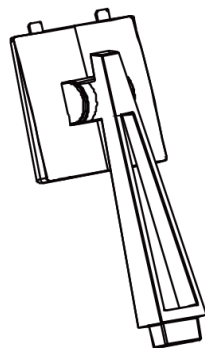


B Stand connector

 


C Stand base (x1)

 

D 10mm M4 stand base screw (x1)

 

E VESA screw (x4)

 

F DisplayPort cable (x1)



G Power cable (x1)

 


H DC12V/4A Power adapter (x1)




I User guide

OVERVIEW

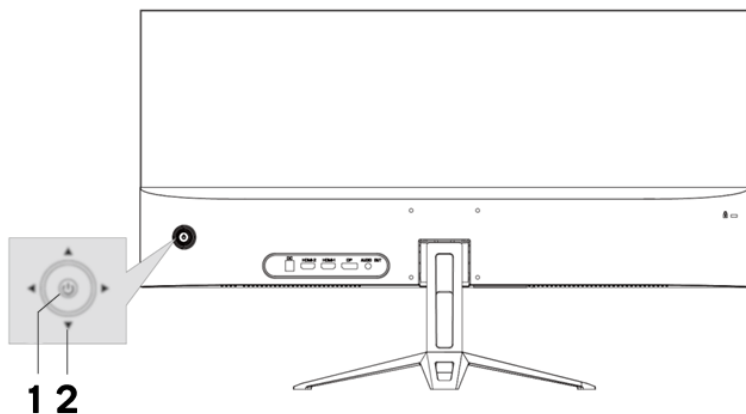


- 1 Power button
- 2 Direction arrows

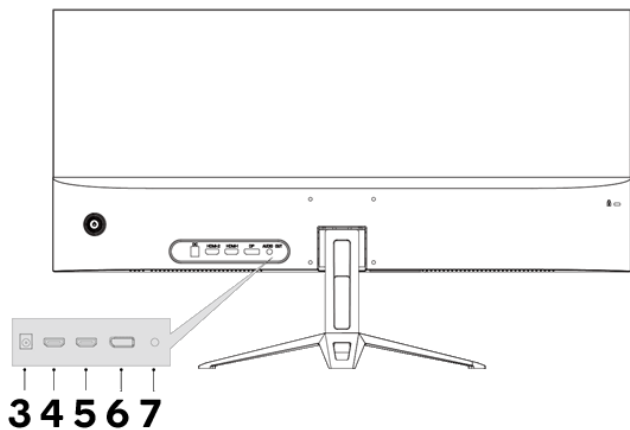 


- | | |
|-----------------------|------------------------|
| 3 Power port (DC 12V) | 6 DP connector |
| 4 HDMI2 connector | 7 3.5mm headphone port |
| 5 HDMI1 connector | |

STAND ASSEMBLY

 
1. Carefully remove the monitor (A), stand connector (B) and stand base (C) from the box.

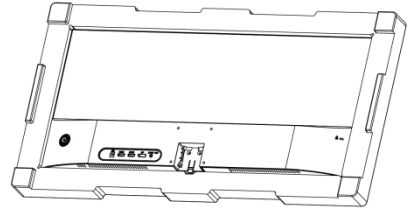

 
2. Assemble the stand by attaching the stand base to the stand connector using the base screw (D) provided.

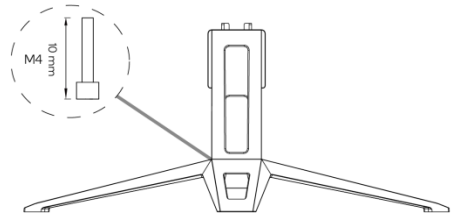

 3. Lift the monitor up and remove the bottom piece of foam.
Align the opening at the back of the monitor with the stand and attach it onto the assembled stand.

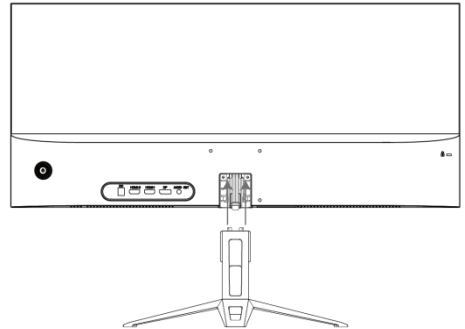


 4. Push the monitor down firmly to ensure it is securely connected.
Ensure it is properly connected prior to use.

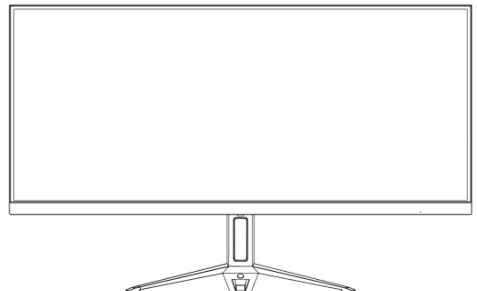


VESA MOUNT

 1. Take out the monitor with the foam attached. Gently place it on a desktop or table.
Remove the foam covering the back of the monitor.
Press the release button to remove the stand plate.
Do not connect the stand.
If the monitor was already attached to the stand, remove the stand. It is not needed if the monitor will be mounted to a wall.

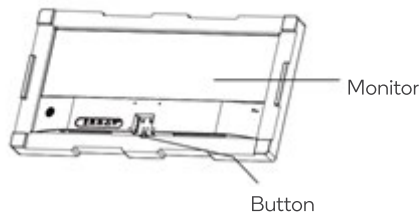

 2. Assemble the mount as per the instructions provided with the mount.

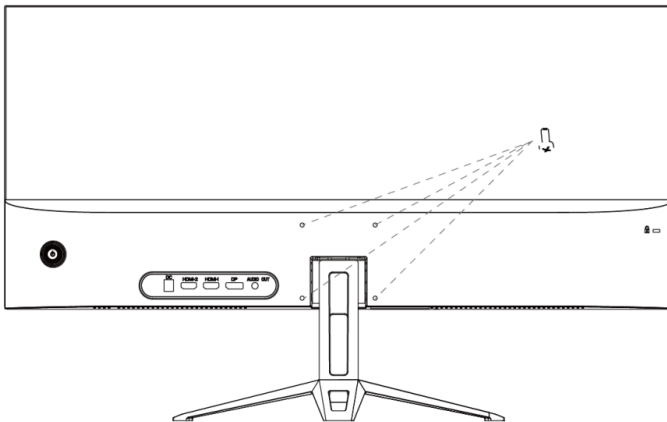

Notes:

 
- VESA mounting pattern 75 x 75mm, screw size M4.
- VESA mount and mounting accessories are not included.

CONNECTIVITY

Power cable


Connect the power cable (G) to the power adaptor (H).

Connect the power adaptor to the monitor power port, then plug power cable end into a power outlet.

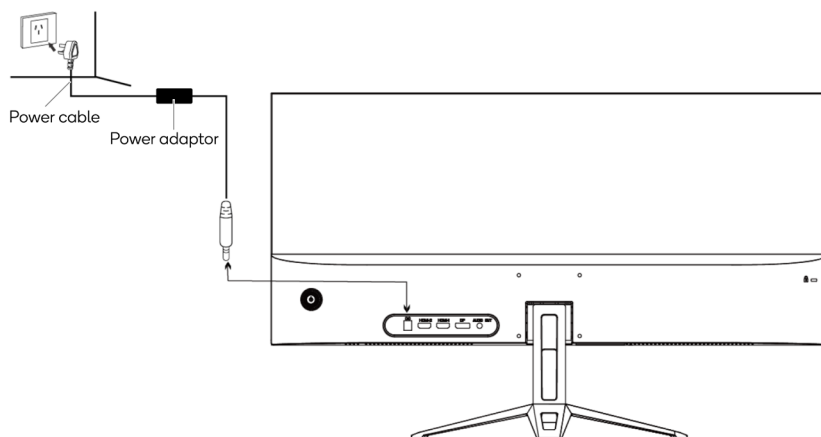

3.5mm headphone port

 
Connect an audio cable to the 3.5mm headphone port.

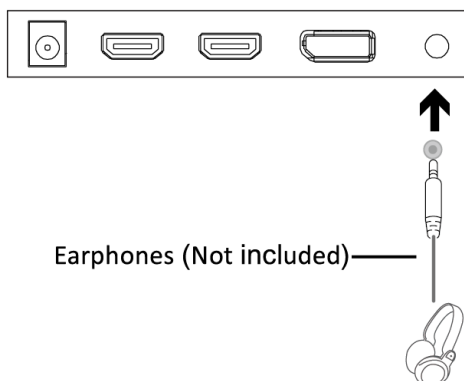

DisplayPort

A DisplayPort cable can be used to share and transmit video and audio between multiple screens.

 
In order for the monitor to receive DisplayPort output from the computer, use the DisplayPort cable to connect the monitor to the computer.

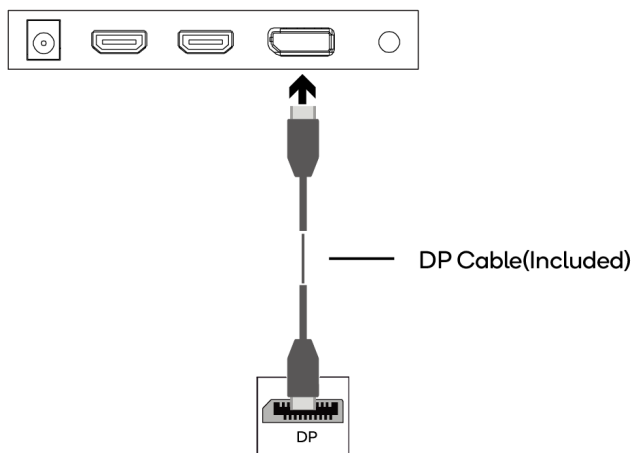

HDMI

A HDMI cable can also be used to share and transmit video and audio between multiple screens.

 In order for the monitor to receive HDMI output from the computer, use a HDMI cable (not included) to connect the monitor to the computer.

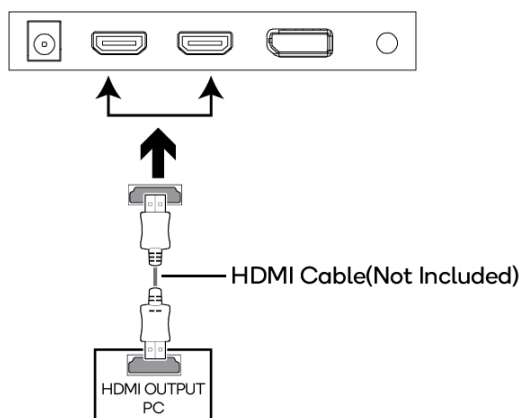

OPERATION

1. Connect the monitor to the input device via HDMI / DisplayPort.
2. Connect the power cable to the monitor, then connect the other end directly to a power socket.
3. Use the power button to turn the monitor on.

Monitor control

You can easily control the functions of the monitor by using the joystick.

Button		Action	Description
		Press in	• Press and hold the Power button for 6 seconds to turn the monitor on/off. • When the display is turned on, press and hold the Power button for one second to wake up the main menu. • Press to confirm menu selections.
		Push left	• When pushed left, the monitor will show the display mode menu. Use your cursor to select the desired mode and press Power to confirm. • Used to reduce the effect of a setting that contain variable bars (for example, brightness settings)
		Push right	• When pushed right, the monitor will show the signal source menu. Use your cursor to select the desired source and press Power to confirm. • Used to increase the effect of a setting that contain variable bars (for example, brightness settings)
		Push up	• When pushed up, the monitor will show the Gameplus timer menu. Select the desired timing length and press Power to confirm. To exit the menu, push the power button up again.
		Push down	• When pushed down, the monitor will show the Gameplus sight shortcut. Select the desired sight and press the Power button to confirm. To exit, push the Power button up.

FreeSync

To use this feature, ensure your hardware has FreeSync capabilities, and that the graphics drivers are fully up to date.

 
After connecting the monitor, you may receive a prompt to enable the feature on your computer. If you do not receive the prompt, you may need to enable the function in the graphics card menu.

Check your graphics card manufacturer's documentation for instructions on how to turn on and/or enable FreeSync.

Eco modes

This monitor features several pre-set colour modes for different computer uses to optimise your viewing experience. These modes include:

- Standard (suitable for most activities)
- Text (optimised for reading)
- Movie (optimised for watching movies and videos)
- Game (optimised for general gaming)
- FPS (optimised for gaming that requires a high frame rate)
- RTS (optimised for real time strategy games)

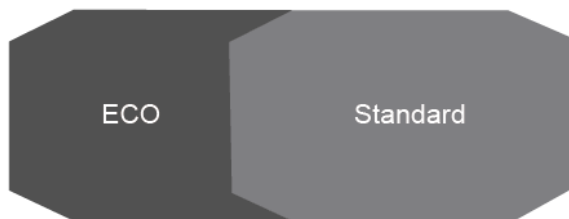

On-screen display

 
The On-Screen Display (OSD) menu may be used to adjust your monitor's appearance settings.

When using the monitor for the first time, it will configure optimal settings automatically.

1. Press the power button and push it right to activate the navigation window.



2. Press the power button again to enter the OSD menu.

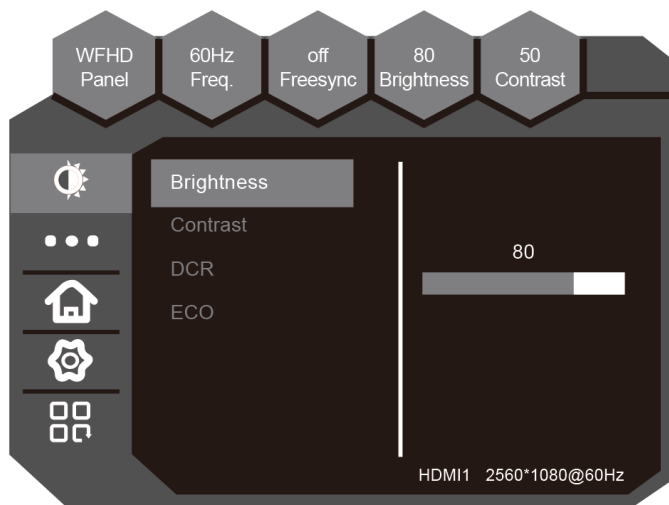

3. Push the power button up and down to browse through the setting functions.
Select the desired setting by pushing the power button right.
4. Push the power button up and down to browse through the sub-menu of settings.
Select the desired setting by pushing the power button right again.
5. Push the power button up and down to browse and select the setting option you wish (push the power button left and right if the options are presented as a variable bar). Once adjusted, press the power button to confirm your changes.
6. Push the power button left to exit the settings menu and to return to the main screen.

Refer to the following pages for a detailed list of the OSD menu functions.

Menu	Sub-Menu	Options	Description
	Brightness	~0-100	Adjusts display brightness
	Contrast	~0-100	Adjusts display contrast
	DCR	On / Off	Turns dynamic contrast ratio on/off
	ECO	STANDARD / TEXT / GAME / MOVIE / FPS / RTS	Selection of pre-set colour modes
	Colour temperature	Standard	Selection of pre-set colour temperature modes and allows for manual colour configuration (USER)
		Warm	
		Cool	
		sRGB	
	Red	USER	Adjusts the redness of the display (USER mode only)
		~0-100	
		~0-100	
	Green	~0-100	Adjusts the greenness of the display (USER mode only)
	Blue	~0-100	Adjusts the blueness of the display (USER mode only)
	Language	English, 中文, 한국어, Deutsch, Español, Italiano, Français	Sets OSD menu language
	OSD H-position	0-100	Adjusts the OSD menu horizontal position
	OSD V-position	0-100	Adjusts the OSD menu vertical position
	OSD transparency	0-100	Sets the OSD menu transparency
	OSD time out	10-60	Set how long the OSD menu remains open after last input (seconds)
	Input source	Auto Source	Selection of input source and allows for manual selection
		DP	
		HDMI1	
	Mute	HDMI2	Turns the monitor speaker on/off mute
	Volume	On / Off	
	Reset	0-100	
	Reset	/	Restores factory defaults



Display size	Full Screen	
	Auto	Adjusts the display aspect ratio
	4:3	
	Off	
	Weak	Adjusts the level of blue light
	Strong	
Over driver	On / Off	Enable or disable the monitor's ability to enter into overdrive for faster response times
FreeSync	On / Off	Enable or disable AMD FreeSync
HDR	On	
	Off	Turns HDR on/off
	Auto	

CLEANING & CARE

Use a clean, slightly dampened cloth to wipe the main monitor body.

To clean the screen, turn it off unplug it and wait for it to cool completely, then wipe it with a dry micro-fibre cloth.

Do not use cleaning alcohol, ammonia-based liquids, or other harsh cleaners to clean the monitor.

SPECIFICATIONS

Screen size	29"
Aspect ratio	21:9
Brightness	300cd/m ²
Panel	IPS
Resolution	2560 x 1080
Refresh rate	75Hz
Response time	7ms with overdrive enabled (14ms typical)
Viewing angle	≥178°(H) / 178°(V)
Contrast ratio	1000:1
VESA mounting	75 x 75 mm
Colours	16.7M
Signal input	HDMI 1.4 x 2, DP 1.2 x 1
Power	DC12V  4A

Audio

Speakers	Yes
Audio out	Yes

Accessories

Power cable	Yes
DisplayPort cable	Yes

Additional functions

Low blue light	Yes
Flicker free	Yes

Physical dimensions

Dimensions (w. stand)	686.4 x 425.7 x 170.1 mm
Dimensions (w/o stand)	686.4 x 310.9 x 36.4 mm
Net weight	3.7kg
Gross weight	5.3kg

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com