



Installation Instructions

Front Park Pilot

(Rear Park Pilot Already Installed)

v1.0 (04.11.2022)

Contents

1	Liability Exclusion	3
2	Copyright	4
3	General notes	4
4	Safety Instructions	5
5	Requirements for the intended use	5
6	How to connect a cable to another	6
7	Note Cable Inscription/Color	7
8	Assembly Instructions	8
9	Assembly Note	9
10	Disassembly front bumper	10
11	Disassembly wipers/engine compartment covering	11
12	Disassembly coverings front driver's side	12
13	Cable routing to the front	14
14	Assembly front sensors	15
15	Assembly sensor holders with adhesive pads	16
16	Assembly front bumper	17
17	Exchange/Connection control unit	18
18	Cable routing/connection button	19
19	Assembly/Connection warning buzzer	20
20	Connection BCM, Park Pilot control unit, ground	21
21	Assembling the vehicle	22
22	Note Park Pilot part numbers	22
23	Coding with Coding Interface	22
24	Coding interface	23
25	Bus rest	23
26	Additional vehicle function	23
27	Connection/Troubleshooting cable set	24

8 Assembly Instructions

The following illustration shows the cable routing as well as the position of the individual components.

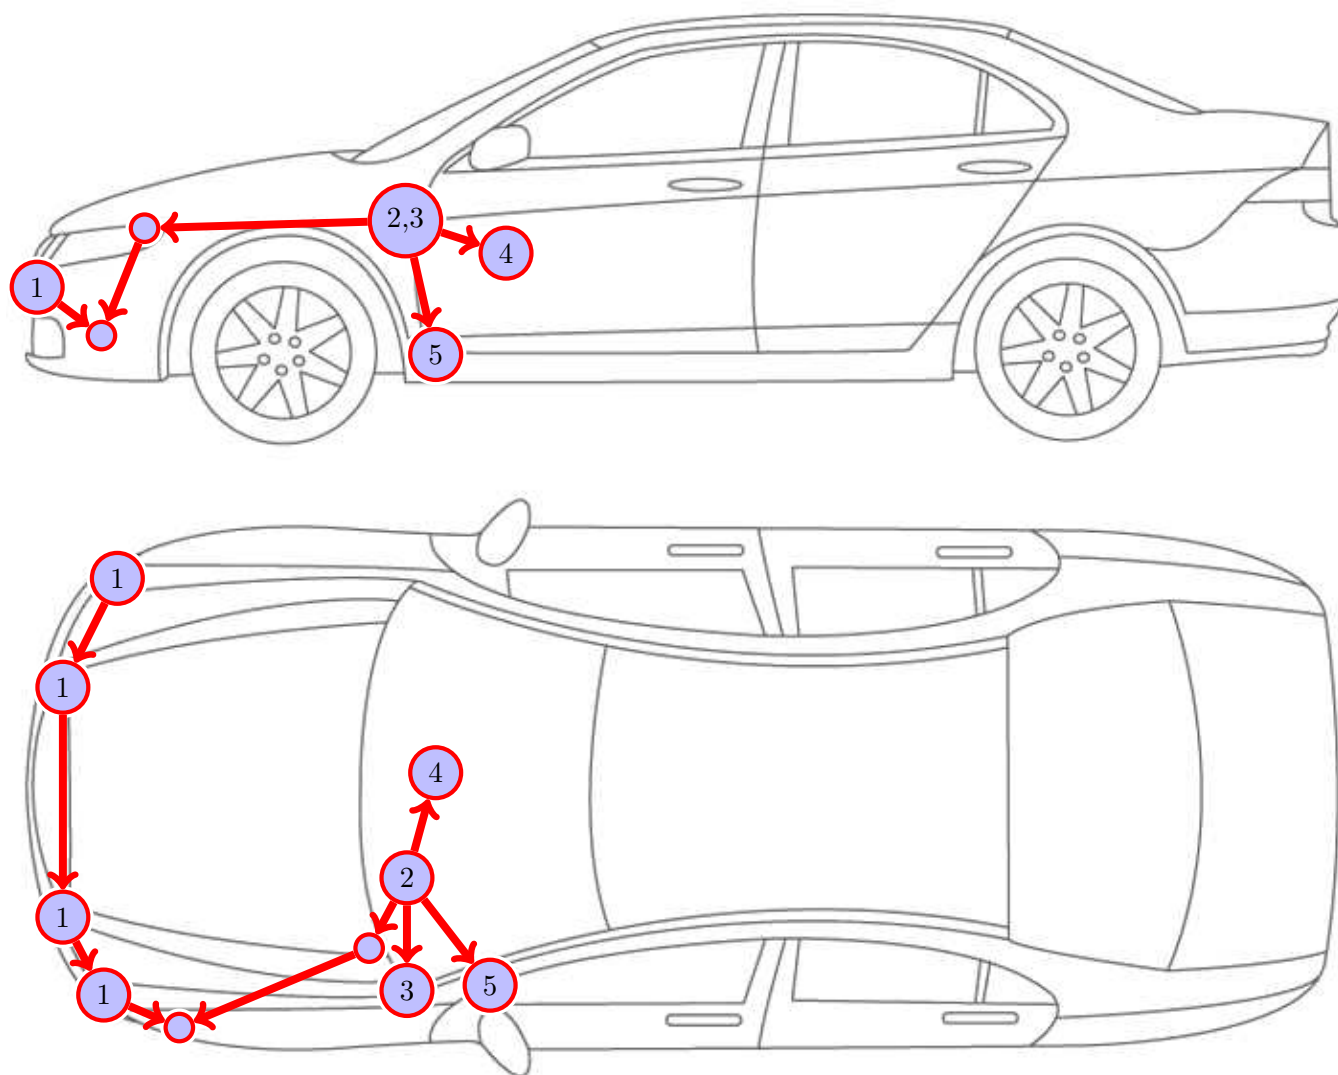


Figure 3: Vehicle overview

- 1 Sensors
- 2 Park Pilot control unit
- 3 BCM, warning buzzer
- 4 Button
- 5 Ground connection

Please be aware that this overview is only for **illustration purposes**. Always lay the cable set in the **most convenient and shortest way** possible. For a detailed description of the cable routing, please refer to the relevant sections of the following manual.