

Roland Cloud Connect

Owner's Manual



Contents

Initial Startup Operations	3
Using Roland Cloud Connect.....	9
Home Screen Operations	9
Tone List Screen Operations.....	11
Installing a Wave/Model Expansion.....	13
Search Screen Operations.....	14
Connect Screen Operations	16
Add a Device You Want to Connect.....	17
Delete a Connected Device.....	19
Setting Screen Operations	20

Initial Startup Operations

NOTE

- A smartphone that is compatible with the **Bluetooth®** version 5.0 standards is required. Turn on the **Bluetooth®** function of your smartphone.
- If you're using an Android device, turn on location data or the location switch.

1. Turn on your Roland Cloud Connect-compatible device and connect the WC-1.

2. Tap the “Roland Cloud Connect” app.

The “Terms of Use” are shown.

- * Enable the **Bluetooth®** function and location data when the app prompts you to do so during startup.

Terms of Use

Roland Cloud End User License Agreement and Terms of Service

Please read the following terms and conditions of use (the “Terms and Conditions”) which govern your use of, and access to, the (a) “Websites” located at <https://www.rolandcloud.com/roland-account> and <https://rolandcloud.com/>, including but not limited to its message boards, and (b) Roland cloud service and any other products and services available through the Websites or that reference these Terms and Conditions (collectively referred to herein as the “Service”) and your relationship with Roland Corporation U.S., its affiliates and subsidiaries, and all individuals and companies associated with the Service, including their successors in interests and assigns (collectively referred to as “Roland” or “We”). Your use of this Service means that you accept and agree to the Terms and Conditions. If you do not agree, do not use the Service.

We may change the Terms and Conditions from time to time and at any time upon notice to you, by posting such changes on the Websites or otherwise making them available to you through the Service. By using the Service following any modifications to these Terms and Conditions, you agree to be bound by any such modifications to the Terms and Conditions.

BY [CLICKING I ACCEPT/I AGREE] OR OTHERWISE ACCESSING, DOWNLOADING, INSTALLING AND/OR USING ALL OR ANY PORTION OF THE ROLAND CLOUD SERVICE, YOU ACCEPT AND AGREE TO BE BOUND BY ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT, WHICH INCLUDE BUT ARE NOT LIMITED TO THE LIMITATIONS ON USE CONTAINED IN SECTION 6, LIMITATIONS ON LICENSE TRANSFERABILITY, AND THE DISCLAIMER OF WARRANTY AND LIMITATIONS ON LIABILITY IN SECTIONS 10 AND 11.

THIS AGREEMENT INCLUDES INFORMATION ABOUT AUTOMATIC SUBSCRIPTION RENEWALS AND YOUR ABILITY TO CANCEL YOUR SUBSCRIPTION AT ANY TIME, IN SECTION 3 BELOW.

IF YOUR SUBSCRIPTION INCLUDES A REDUCED PROMOTIONAL PRICE FOR A SPECIFIC PERIOD, YOUR REDUCED PRICE WILL END AT THE CLOSE OF THE STATED PROMOTIONAL PERIOD. YOUR FURTHER USE OF THE ROLAND CLOUD SERVICE WILL BE UNDER THE STANDARD PRICING IN EFFECT AT THE TIME.

ANY REFERENCES TO "YOU" AND "YOUR" REFER TO BOTH YOU AND SUCH PERSON AND LEGAL ENTITY ON WHOSE BEHALF

Agree

To Contents

3. Read the Terms of Use and tap "Agree."

The Login screen appears.

Log in

Please log in with your Roland account. If you do not have an account, please [click here](#) to create one.

Email

Password

Forget your password? [Click here](#)

Log in

Tap here to create a new Roland account.

Tap here if you've forgotten your password.

4. Enter the e-mail address and password you registered for your Roland account.

5. Tap “Log in.”


The Device Setup screen appears.

- * Enable the **Bluetooth®** function and location data when the app prompts you to do.




6. Hold down the button on the WC-1 for at least three seconds, or perform the setup from the menu operations of the connected device.

The access point selection screen appears, after waiting for a while.

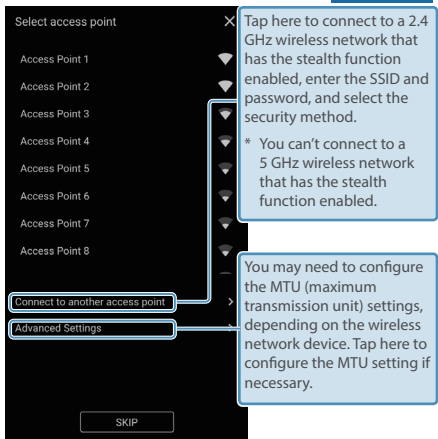

7. Tap the wireless network to which the WC-1 is to be connected.

A password input screen appears.

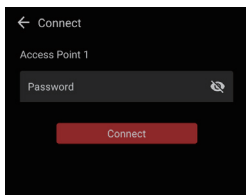

8. Input the password of the wireless network.

9. Tap “Connect.”

The app’s introductory screen is shown until the connection is made.

“**Start**” is shown once the connection is successful.



NOTE


- The access points to which the WC-1 can connect are as follows. You cannot connect to any other access points. Edit the access point settings.

Adapted Channel	2.4 GHz band	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11
	5G Hz band	36, 40, 44, 48, 52, 56, 60, 64
Standards	IEEE 802.11 a/b/g/n 2.4 GHz, 5 GHz	
Security	WPA3-PSK (AES)	
	WPA2-PSK (AES/TKIP)	
	WPA-PSK (AES/TKIP)	

- This device does not support connection via proxy server.
- You can't connect to a 5 GHz wireless network that has the stealth function enabled.


10. Tap “Start.”

The Home screen appears.

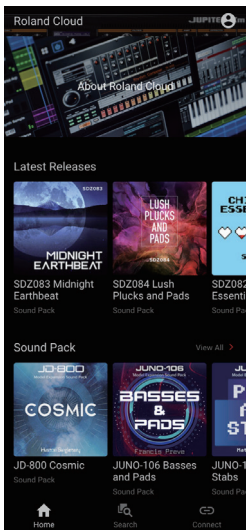

Using Roland Cloud Connect

Home Screen Operations

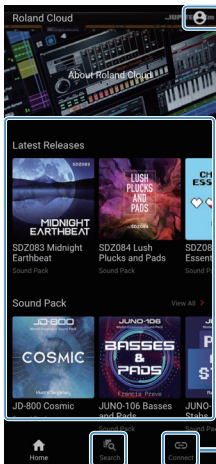

Displays the Setting screen.

➔ **Setting Screen Operations**

Tap an item here to see a list of tones included in the selected contents.

➔ **Tone List Screen Operations**

Latest Releases

Shows information for the contents available on Roland Cloud.


Sound Pack

Shows a list of tones included in the selected sound pack.

➔ **Search Screen Operations**

➔ **Connect Screen Operations**

Contents available on Roland Cloud

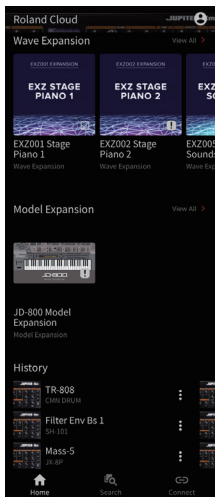

Instead of the artwork for each of the contents, you may see an icon indicating the installation status or that the license hasn't been installed.

Wave Expansion/Model Expansion

When you tap on an **installed** wave expansion or model expansion, a list of the tones included is shown.

➔ Tone List Screen Operation

When you tap on a wave expansion or model expansion that **isn't installed**, "Install" is shown.


- * You must install the wave expansion or model expansion on the connected device in order to use the tones in that wave/model expansion.

➔ Installing a Wave/Model Expansion

History

Shows the history of tones loaded on the connected device

Tone List Screen Operations

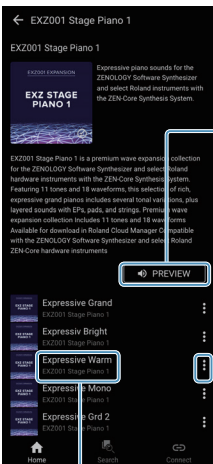

This lets you listen to the demo song.

Add Like/Remove Like

Adds a "❤️" (Like) to the content, or remove it.

You can filter the tone by "❤️" on the search screen.

➔ Search Screen Operations

Write tone to device


Writes the tone to the bank of the connected device.

➔ Writing tone to a connected device

Tapping on tone name loads the tone to your connected device.

Writing tone to a connected device

1. Select where you want to write the tone and tap **“Write.”**

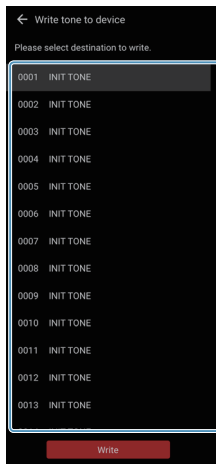


Write destination

2. Once you see the dialog box confirming that you want to write the tone, tap **“OK.”**

Installing a Wave/Model Expansion

1. Tap **“Install.”**
2. Once you see the dialog box confirming that you want to install, and tap **“OK.”**
3. Tap **“Install.”**

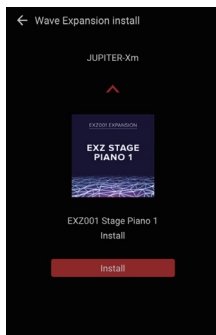

A list of the tones included in the expansion is shown after installation is complete.

Search Screen Operations

The contents available on Roland Cloud or the tones on your connected device are shown. You can search by tone name, category, bank and more.

Input a tone name to search for.

Filters your search by "♥" (Like) or tags attached to the tone.

Select what to search for.

- Tones on the connected device
- Tones included in sound packs on Roland Cloud

Bank


Filters the search by bank on the connected device.

None/ALL

Excludes/includes all banks from the search.

List view

Banks are shown as a list.

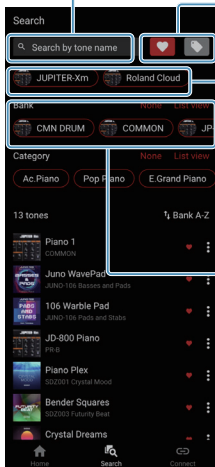

Categories

Filters the search by tone category.

None/ALL

Excludes/includes all banks from the search.

List view

Categories are shown as a list.

Search results are shown as a list.

➔ Tone List Screen Operations

- * If the app is running slowly, please try to set more specific search options.

Search

Search by tone name

JUPITER-Xm

Roland Cloud

Bank

None

List view

CMN DRUM

COMMON

JP-2

Category

None

List view

Ac.Piano

Pop Piano

E.Grand Piano

13 tones

Bank A-Z



Piano 1

COMMON



Juno WavePad

JUNO-106 Bases and Pads



106 Warble Pad

JUNO-106 Pads and Stabs



JD-800 Piano

PR-8



Piano Plex

SDZ001 Crystal Mood



Bender Squares

SDZ003 Futurity Beat



Crystal Dreams



Home



Search



Connect

➔ Home Screen Operations

➔ Connect Screen Operations

Connect Screen Operations

Use this screen to switch between connected devices, to add devices you want to connect to Roland Cloud and to delete connected devices.

Displays the list for the WC-1 on which setup (connection settings) has finished.

➔ **Delete a Connected Device**



Shows information for the device connected to the app.

Updates the WC-1.

Shows the devices that are online (ready to connect).

Tap to switch between connected devices.

➔ **Add a Device You Want to Connect**

➔ **Home Screen Operations**

➔ **Search Screen Operations**

Add a Device You Want to Connect

1. Tap “Device Setup.”

The Device Setup screen appears.

- * Enable the **Bluetooth®** function and location data when the app prompts you to do.




2. Hold down the button on the WC-1 for at least three seconds, or perform the setup from the menu operations of the connected device.

The access point selection screen appears, after waiting for a while.

3. Tap the wireless network to which the WC-1 is to be connected.

A password input screen appears.

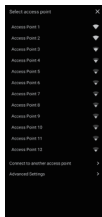

4. Input the password of the wireless network.



5. Tap **“Connect.”**


“Start” is shown once the connection is successful.

NOTE

Once the WC-1 settings are reset from the connected device, the WC-1 network settings (SSID and password) are initialized. To connect to a wireless network after resetting, add a connected device again.

Delete a Connected Device


1. Tap the “⋮” icon of the WC-1 to delete.

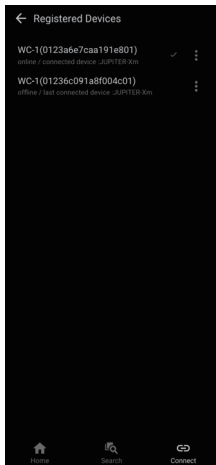

2. Tap “**Unregister**” in the dialog box that appears.

Setting Screen Operations

On this screen, you can check a membership, and configure the app's settings.

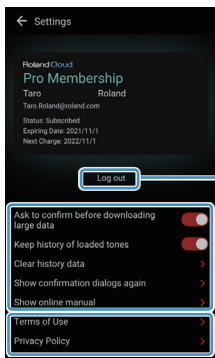

Log out from app

App settings

Terms and other text are shown