

U-BOAT
I T A L O F O N T A N A



EN

DEAR CUSTOMER,

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

**IN THIS BOOKLET YOU WILL FIND THE INSTRUCTIONS FOR USE, THE
TECHNICAL DETAILS AND THE WARRANTY BOOKLET.**

 
WE KINDLY INVITE YOU TO REGISTER YOUR WATCH

ON OUR OFFICIAL WEB SITE



**IN THE U-CLUB AREA, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES
OWNERS AND GAIN ACCESS TO FURTHER BENEFITS AND PREVIEWS ON
OUR LATEST NEWS, EVENTS AND OFFERS.**

WATCH FUNCTIONS.

- A** CAP CROWN
- B** CROWN EXTRACTION BUTTON
(if fitted)
- C** CROWN
- D** HOUR HAND
- E** MINUTE HAND
- F** SECOND HAND
(if fitted)
- G** 24 HOUR INDICATOR
(IF FITTED)
- H** DATE
(IF FITTED)

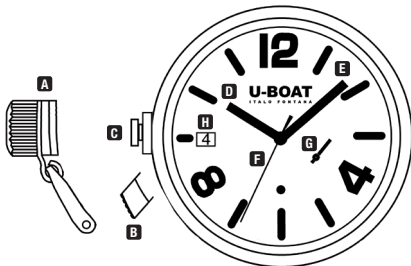

  REPRESENTATIVE IMAGE.
SOME COMPONENTS MAY BE IN DIFFERENT POSITIONS OR NOT FITTED.

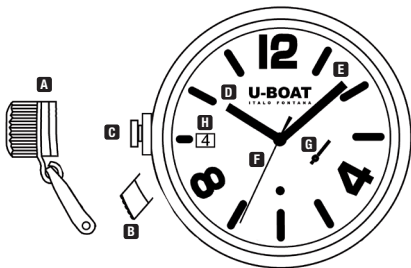

POSITION 1
NEUTRAL POSITION

POSITION 2
FIRST CLICK

POSITION 3
SECOND CLICK

INSTRUCTIONS FOR USE.

1. Unscrew the cap crown **A** to gain access to the crown **C**.

POSITION 1 to wind and start the watch by turning the crown **C** clockwise.
NEUTRAL POSITION

POSITION 2 press button **B** to move the crown **C** into position 2 (first click). Turn the
FIRST CLICK crown **C** clockwise to set the date **H** (if fitted).

*For the models which do not have the crown release system, carefully pull the crown right out to the first click.

POSITION 3 press button **B** again to move the crown **C** into position 3
SECOND CLICK (second click) and turn the crown **C** to set the exact time.
Use indicator **G** (if fitted) for correct date change **H** (if fitted).

*For the models which do not have the crown release system, carefully pull the crown right out to the second click.

2. Fully depress the crown **C** to move it back into the neutral position.
Carefully screw in the cap crown **A** until firmly in place.

CARE AND MAINTENANCE.

The precision mechanism in your watch will provide long-lasting performance when properly cared for.

We recommend taking your watch to an Authorised Retailer / Authorised Service Centre every year for a check-up, perform ordinary maintenance on all mechanical parts and restore of water-resistance.

We also advise taking your watch to an Authorised Retailer / Authorised Service Centre to change the strap.

Avoid leaving your watch where it is exposed to large temperature variations, humidity, the sun and strong magnetic fields. Make sure the watch is in adequate conditions for water use/activities.

Remember to rinse the watch after it comes into contact with seawater. Automatic watches require manual winding following a long period of inactivity.

FLORENCE ROME SPECIAL EDITIONS

These jewellery-watches, made exclusively by hand, are not suitable for immersion in water.

We therefore recommend to take the watch off so as not to damage it in contact with water.