

Mica Thermal Heater

K813 v001: 11/03/22

Please read and retain these instructions for future reference

BERGSTRÖM



Technical details

220-240V a.c./50-60Hz
2000W

Dimensions

79 x27 x54cm

- 2 HEAT SETTINGS 1000W/2000W
- ENERGY SAVING AS IT REACHES ITS MAXIMUM HEAT OUTPUT IN AS LITTLE AS 60 SECONDS
- QUICK HEATING UP
- COMBINES RADIANT AND CONVECTION HEAT
- SAFETY OVERHEAT PROTECTION
- ADJUSTABLE THERMOSTAT
- SILENT OPERATION
- TIP-OVER PROTECTION
- EASY TO MANOEUVRE & STORE

THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES OR OCCASIONAL USE.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France


Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER, ETC.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF PARTS.
- DO NOT PLACE THIS ITEM IMMEDIATELY BELOW A SOCKET-OUTLET.
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.
- DO NOT LEAVE THIS APPLIANCE UNATTENDED WHEN IT'S IN USE.
- THE MOST COMMON CAUSE OF OVERHEATING IS DEPOSITS OF DUST OR FLUFF IN THE APPLIANCE. ENSURE THESE DEPOSITS ARE REMOVED REGULARLY BY DISCONNECT THE APPLIANCE AND VACUUM CLEANING AIR VENTS AND GRILLES.
- DO NOT PLACE THE HEATER ON CARPET, DON'T PLACE THE CABLE UNDER CARPETS. ARRANGE CORD AWAY FROM TRAFFIC AREAS SO THAT IT WILL NOT BE TRIPPED OVER.
- DO NOT USE THIS HEATER IN THE IMMEDIATE SURROUNDINGS OF A BATH, A SHOWER OR A SWIMMING POOL.
- DO NOT STORE AWAY UNTIL THE HEATER COOLS DOWN, STORE THE HEATER IN COOL DRY LOCATION WHEN NOT IN USE.
- WHEN IN USE, KEEP THE DISTANCE BETWEEN WINDOW(WALL) AT LEAST 50CM

Assembly

1. Insert the wheels into the bottom part of the supporting feet, and ensure they are tight enough.
2. Put the appliance upside down, then fix the feet to the appliance with screws. Put appliance right side up.

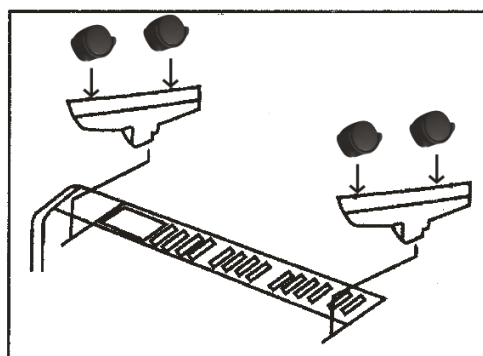

User instructions

- Plug the heater into a wall socket.
- Turn on switch to the heating position (I or II).

Heat setting I	1000W
Heat setting II	2000W

- Turn the thermostat knob in a clockwise direction until reaching the maximum temperature.
- Once the room temperature is reached, slowly turn the thermostat knob in an anti-clockwise direction until you get your required temperature.
- Turn the switch to "0" position to switch off the heater. Then unplug the appliance.

Safety Overheat Protection

- Your heater is fitted with a safety device to switch off the heater in the event of overheating. If the safety device has been engaged, please turn the heater off, unplug the appliance and let it cool completely, inspect for blockage of air inlet or outlet, then attempt to restart the heater.
- If the heater fails to operate or the safety device switches the heater off again, return heater to your nearest service center for examination or repair.

Maintenance:

1. Always disconnect the appliance and let it completely cool before any maintenance.
2. Use a vacuum cleaner to remove dust on grilles.
3. Clean the outside of the unit with a damp cloth and then dry it with a dry cloth. Never immerse the unit in water, nor let water drip into the unit.

Storing:

1. Always disconnect the appliance, let it completely cool and clean it before storing.
2. If you do not use the device for a long period, put back the unit and the instruction manual to the original carton and store in a dry and ventilated place.
3. Do not place any heavy items on top of carton during storing as this may damage the appliance.




PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

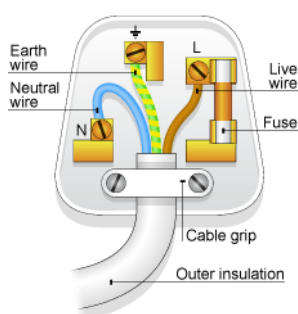

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.



COMMISSION REGULATION (EU) No 2015/1188			
Clause	Requirement + Test	Result - Remark	Verdict
At nominal heat output	e_{lmax}	2,0; 1,5	kW
At minimum heat output	e_{lmin}	0	kW
In standby mode	e_{lss}	0	kW
Type of heat input, for electric storage local space heaters only (single select)			
manual heat charge control, with integrated thermostat			☐ Yes ☒ No
manual heat charge control with room and/or outdoor temperature feedback			☐ Yes ☒ No
electronic heat charge control with room and/or outdoor temperature feedback			☐ Yes ☒ No
fan assisted heat output			☐ Yes ☒ No
Type of heat output/room temperature control (single select)			
single stage heat output and no room temperature control			☐ Yes ☒ No
Two or more manual stages, no room temperature control			☐ Yes ☒ No
with mechanic thermostat room temperature control			☒ Yes ☐ No
with electronic room temperature control			☐ Yes ☒ No
electronic room temperature control plus day timer			☐ Yes ☒ No
electronic room temperature control plus week timer			☐ Yes ☒ No
Other control options (multiple selections possible)			
room temperature control, with presence detection			☐ Yes ☒ No
room temperature control, with open window detection			☐ Yes ☒ No
with distance control option			☐ Yes ☒ No
with adaptive start control			☐ Yes ☒ No
with working time limitation			☐ Yes ☒ No
with black bulb sensor			☐ Yes ☒ No
Contact details	UK: Coopers of Stortford, 11 Bridge Street, Bishop's Stortford, Herts CM23 2JU EU: D.S.B.LD, 160 Bd. de Fourmies, 59100 Roubaix, France		

