

VIZIO | Quick Setup Guide

 
Scan the QR code for an easy setup,
or visit the link below to access information on how
to connect to your other devices.

vizio.com/QR/P514a-H6




Connect.

- Plug in power cables to power on your sound bar and subwoofer.
- Use the included cables to connect the surround speakers to the subwoofer.
- Then use the included HDMI cable to connect to your TV.

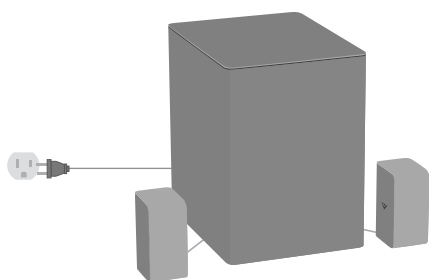

 Place subwoofer and surround speakers
in the rear of the room.

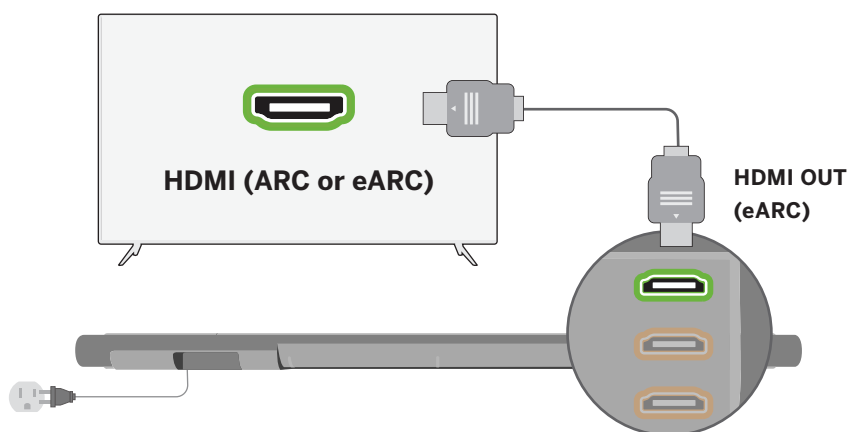

Download the VIZIO SmartCast Mobile™ app.

This free app allows you to:

- Connect your sound bar to Wi-Fi
- Enable free software updates
- Control with your phone/tablet
- Easily optimize audio settings
- Stream your favorite audio apps with Chromecast built-in™



More questions?

Contact our VIZIO
Customer Service team:



Phone:
(844) 254-8087



Text Message:
(205) 301-3729
(Message and data rates may apply. U.S. only.)



 
Website:
support.vizio.com



Best speaker placement for my sound bar?

For the best surround sound experience, position the sound bar, subwoofer, and surround sound speakers as shown. The sound bar should be close to ear level.

If the subwoofer is too boomy or lacking impact, adjust the **Subwoofer level** with your remote control or try various placements.

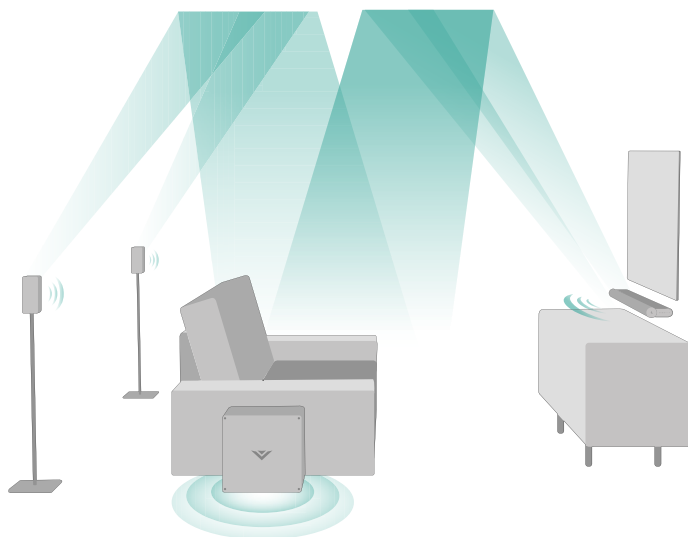

How do I get Dolby Atmos® content?



Must use HDMI to connect the sound bar and TV.

(Always use HDMI 2.0 cables.)



Source device or TV app must support Dolby Atmos content.

Dolby Vision™ 4K HDR and Dolby Atmos content available on VIZIO SmartCast™ TVs.



Streaming 4K content with Dolby Atmos requires sufficient network bandwidth.

(Consult your device's user documentation.)



How do I adjust sound settings and levels?

Using the included remote or the VIZIO SmartCast Mobile™ app, you can easily adjust many different sound settings and levels to optimize your listening experience, including surround volume levels, surround speaker balance, height speaker volume, height modes, and more.

1. Push a **setting** button.
2. Use the **Up/Down** buttons to select a specific setting/level to change.
3. Then use the **Left/Right** buttons to adjust each setting.

