

 
Before the first use

⚠ Damage from incorrect installation and connection.
Installing and connecting the washing machine incorrectly will cause serious damage to property.
See "Installation".

⚠ Damage resulting from failure to remove the shipping struts.
Failure to remove the shipping struts can result in damage to the washing machine and to adjacent cabinetry or appliances.
Remove the shipping struts as described in "Installation and connection".

3 steps must be completed before the washing machine can be operated.
1. Remove the shipping struts.
2. Set up Miele@home.
3. Start the calibration program.
For additional information, please refer to the separate operating instructions supplied.

Operation

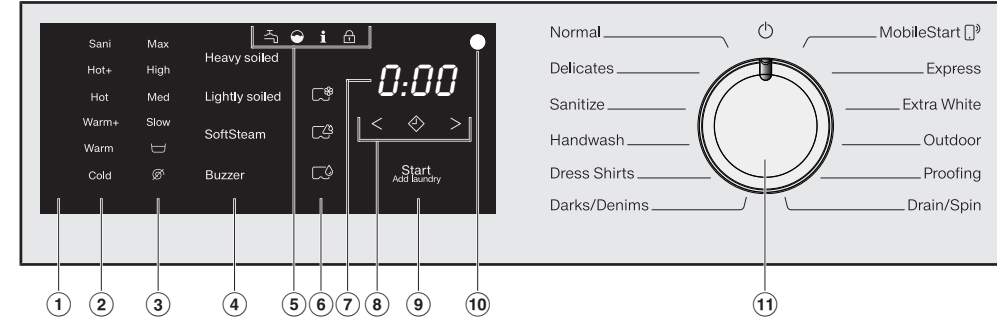

Operating the sensor buttons

The sensor buttons react to fingertip contact. If a sensor button is illuminated, it can be selected.
If a sensor button is brightly lit, this means: currently selected
If a sensor button is dimly lit, this means: selection possible

- Control field**
- Temperature sensor buttons** for selecting the temperature.
- Spin Speed sensor buttons** for selecting the final spin speed.
- Sensor buttons for options**
You can supplement the wash programs with options. If a wash program has been selected, the sensor buttons for the available options light up dimly.
- Indicator lights**
 - Faults affecting the water inlet and drainage
 - Excess detergent used
 - Reminder about Sanitize information
 - The Add laundry function cannot be selected.
- CapDosing sensor buttons**
 - Fabric care (e.g., fabric softener, proofing agent)
 - Additives (e.g., detergent enhancers)
 - Detergent (for the main wash only)
- Time display**
After the program has started, the program runtime will appear on the display in hours and minutes.
- Sensor buttons < >**
For the Delay start function.
- Start/Add laundry sensor button**
 - Touching the Start/Add laundry sensor button starts the selected program. The sensor button lights up constantly.
 - Once the program has been started, the Start/Add laundry sensor button allows you to add laundry.
- Optical interface**
This is used by the Service department as a transmission point.
- Program selector**
For selecting programs and for switching the machine off. The washing machine is switched on when you select a program, and switched off by turning the program selector to the position.

Environmentally friendly washing

- Make use of the maximum load that the wash program can accommodate. This will keep energy and water consumption to a minimum in relation to the size of the load.
- Use the *Express* program for small, lightly soiled loads.

 
- Modern detergents make it possible to wash at lower temperatures (e.g., 70°F/20°C). Using the corresponding temperature settings will save energy.

- Washing at low temperatures and/or using liquid detergents can cause bacteria and odors to build up in the washing machine. Miele therefore recommends cleaning the washing machine once every month.

When the **i** indicator light lights up on the control field and **!** appears on the time display, the washing machine must be cleaned.

Preparing the laundry

1. Preparing the laundry

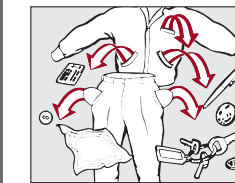


- Empty all pockets.

⚠ Damage due to foreign objects.
Nails, coins, paper clips, and so on can cause damage to garments and components in the machine.
Check the laundry before washing and remove any such foreign objects.

- Sort the laundry by color and by care label. Most garments have a textile care label in the collar or side seam.
- Pre-treat stains and badly soiled areas.

2. Selecting a program

 
1. Selecting the standard programs with the program selector dial

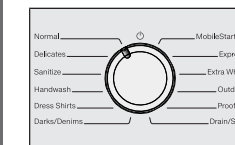

- Turn the program selector to the required program. The selected program will be shown in the display. This will then be replaced by the standard display.

2. Selecting programs via the MobileStart program selector position and the Miele app

 To use MobileStart, the washing machine must be logged on to the WiFi network and Remote control must be switched on.

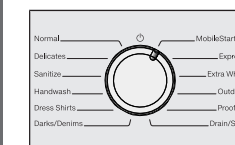

- Turn the program selector to the MobileStart position.
on appears on the time display.

The washing machine can now be operated with the Miele app.

Selecting a program

3. Loading the washing machine

Opening the door

 


- Take hold of the door and pull it open.
- Unfold the laundry and load loosely into the drum.

Closing the door



- Make sure that no items are caught between the door and the seal.

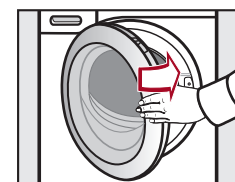

- Shut the door gently.

4. Selecting program settings

Selecting a temperature and spin speed

The wash program's pre-set temperature and spin speed light up brightly. The choice of temperatures and spin speeds selectable for the wash program light up dimly.

- Touch the sensor button for the temperature desired. It will then light up brightly.
- Touch the sensor button for the spin speed desired. It will then light up brightly.

Selecting options

The selection of options available for the wash program lights up dimly.

- Touch the sensor button for the required option. It will then light up brightly.

Tip: You can select multiple options for a single wash program.

PREPARING THE LAUNDRY/SELECTING A PROGRAM

fold here

5. Add detergent

There are several options for adding detergent to the washing machine.

CapDosing

Three different types of capsule are available:

- Fabric care (e.g., fabric softener, proofing agent)
- Additives (e.g., detergent enhancers)
- Detergent (for the main wash only)

For further information on detergent, cap and dosage, please refer to the "Detergent" chapter in the Operating and Installation Instructions.

Using powder detergent

The detergent drawer contains an insert for liquid detergent in the compartment. This insert must be removed to use powder detergent. It is not possible to use powder detergent in the compartment.

Filling with detergent

This washing machine requires particularly efficient detergent. Add detergent in accordance with the value in the pull-down dosage display.



- Pull out the detergent drawer and add detergent to the compartments.

Chlorine bleach for removing stains or liquid detergent for the pre-wash

Detergent for the main wash, including Soak if selected

Fabric softener, liquid starch, or caps

Using chlorine bleach

⚠ Damage due to chlorine bleach.
Textiles may be discolored or their fibers damaged.
Only use chlorine bleach on suitable textiles.

Chlorination must be activated in the settings before chlorine bleach is first used.

The *Pre-wash* option must not be selected.

- Pour **max. 1/4 cup (60 ml)** of bleach into the chamber.

The chlorine bleach is added automatically 10 minutes before the end of the main wash.

Starting a program

6. Start the program

- Touch the flashing *Start/Add laundry* sensor button.

The door will lock and the wash program will start.

Adding laundry during a program sequence

Laundry can be added or removed at any time, provided that the symbol is not illuminated on the control field.

- Touch the *Start/Add laundry* sensor button.

Rotating bars appear on the time display.

If the word *Add* appears on the time display, the door can be opened.

- Open the door and add or remove laundry.
- Close the door.
- Touch the *Start/Add laundry* sensor button.

The wash program will continue.

Changing a program (safety lock)

A program, temperature, spin speed, or selected options cannot be changed once the machine has been successfully started. This prevents the machine being operated unintentionally, e.g., by children.

Canceling a program

You can cancel a wash program at any time after it has started.

- Turn the program selector to the position.
- Turn the program selector to any position.

Rotating bars or *-D-* appear on the time display. The water is pumped away and the door lock is then released.

7. Program end

The door is locked in the Anti-crease phase.

- Turn the program selector to the position.

 
-D- appears on the time display and the indicator light goes out. The door will be unlocked.

Tip: After the Anti-crease phase, the door will unlock automatically.



Items left in the drum could discolor other items in the next wash or become discolored themselves.

Remove all items from the drum.

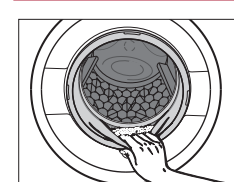

Tip: Leave the door slightly open.

- If you used a capsule, remove it from the detergent drawer.

Tip: Leave the detergent drawer slightly open.

 
Delay Start/Options

Delay Start/SmartStart

You can delay the start of a program from 30 minutes up to a maximum of 24 hours. This allows you to make use of night-time economy electricity rates, for example.

Selecting Delay Start

- Select the wash program required.

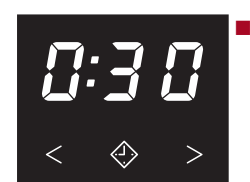

- Touch the sensor button.

- Touch the or sensor button repeatedly until the required Delay Start time appears on the time display.

- In the case of settings below 10 hours, the Delay Start time changes in increments of 30 minutes.

- In the case of settings above 10 hours, the delay-start period changes in increments of 1 hour.

- Touch the flashing *Start/Add laundry* sensor button.

The Delay Start process starts and counts down on the time display.

SmartStart – Setting the time period

If the *P98* SmartGrid programmable function is activated, the function of the sensor button changes. The time display no longer shows the Delay Start period; instead, it shows the time period in which your washing machine can be started automatically. The procedure for setting this is the same as for setting the time for Delay Start. For additional information, please refer to the separate operating instructions supplied.

Options

Options are selected and deselected using the relevant sensor buttons in the control field.

Heavily soiled

For laundry that is very heavily soiled. The extended wash duration enhances the stain-removing effect.

Lightly soiled

For slightly soiled fabrics that are not stained. The wash duration is reduced.

SoftSteam

In order to reduce creasing, the laundry undergoes a smoothing process at the end of the program. Reducing the maximum load by 50% will give a better result. Please note the load information in the display. Small loads achieve a better result.

without SoftSteam	with SoftSteam
Full load	→ Half load
Half load	→ Small load
Small load	→ Very small load

The garments must be suitable for drying in a tumble dryer and suitable for ironing .

Buzzer

A buzzer sounds at the end of the program. The buzzer sounds until the washing machine is switched off.

ADDING LAUNDRY

fold here

 
OPERATION

fold here

fold here

fold here

Washing machine



Problem	Possible cause and solution
F and XXX alternate on the time display and the buzzer sounds.	There is a fault. ■ Disconnect the washing machine from the power supply. Unplug the appliance or switch off the breaker. ■ Wait at least 2 minutes before reconnecting the washing machine to the power supply. ■ Switch the washing machine on again. ■ Restart the program. If the fault message appears again, contact Miele Service.
-0- lights up on the time display.	The program selector was moved to a different position after the program had started. ■ Turn the program selector back to the original position.
The  indicator light lights up.	Excessive foam has built up during washing. ■ Use less detergent next time and follow the manufacturer's instructions on dosage given on the packaging.
The  indicator light lights up and  appears on the time display.	When washing, a wash program using a temperature of <i>Hot+</i> has not been run for a long time. ■ Run the <i>Sanitize</i> program using the Miele Machine Cleaner or a universal powder detergent. The washing machine is cleaned which prevents bacteria and odor buildup.
F and 37 alternate on the time display.	The <i>SoftSteam</i> option which runs at the end of the program could not be carried out properly. ■ Check whether the washing machine is aligned correctly (see "Installation – Leveling the machine"). ■ Check whether the maximum drain height of 3.3 ft (1 m) has been exceeded. If the fault message appears again, contact Miele Service. The washing machine can still be used, but without the <i>SoftSteam</i> option.